

Revision C:

- MXZ-4A36NA have been added.


Please void OB444 REVISED EDITION-B.

OUTDOOR UNIT

SERVICE MANUAL


No. OB444
REVISED EDITION-C
Inverter-controlled multi system type
Models

MXZ-2A20NA
MXZ-2A20NA - 1
MXZ-3A30NA
MXZ-3A30NA - 1
MXZ-4A36NA

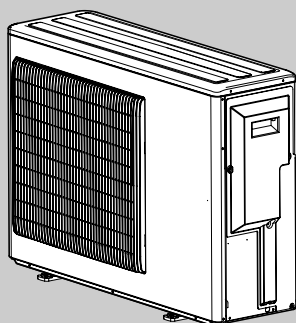Indoor unit service manual
MSZ-A-NA Series (OB450)


MXZ-2A20NA
MXZ-2A20NA - 1

NOTE:

- This service manual describes technical data of the outdoor units.
- RoHS compliant products have <G> mark on the spec name plate. For servicing of RoHS compliant products, refer to the RoHS Parts List.

CONTENTS

| | |
|---|-----|
| 1. TECHNICAL CHANGES | 2 |
| 2. PART NAMES AND FUNCTIONS..... | 6 |
| 3. INDOOR UNIT OPERATIONAL CHARACTERISTICS... | 7 |
| 4. SPECIFICATION | 18 |
| 5. OUTLINES AND DIMENSIONS | 21 |
| 6. WIRING DIAGRAM | 25 |
| 7. REFRIGERANT SYSTEM DIAGRAM | 30 |
| 8. DATA | 36 |
| 9. ACTUATOR CONTROL | 52 |
| 10. SERVICE FUNCTIONS..... | 52 |
| 11. TROUBLESHOOTING | 54 |
| 12. DISASSEMBLY INSTRUCTIONS..... | 71 |
| 13. PARTS LIST..... | 80 |
| 14. RoHS PARTS LIST..... | 88 |
| 15. OPTIONAL PARTS..... | 100 |


The Slim Line.
From Mitsubishi Electric.

Mr. SLIM™

Revision A:

- RoHS PARTS LIST has been added.

Revision B:

- MXZ-2A20NA - 1 and MXZ-3A30NA - 1 have been added.

Revision C:

- MXZ-4A36NA has been added.

1

TECHNICAL CHANGES

MXZ-2A20NA

New model

MXZ-30TN2 → MXZ-3A30NA

1. Combinations of connectable indoor units have been increased.
2. Capacity class of connectable indoor units have been made larger.
3. Compressor has been changed. (THV247FBA → TNB220FMCH)
4. Outdoor fan motor has been changed. (RA6N60-AA → RC0J60-AB)
5. Refrigerant has been changed. (R22 → R410A)
6. Refrigerant system diagram has been changed.
 - 1 of 2 high pressure switch has been removed.
 - Accumulator has been removed.
 - Receiver has been added.
7. Communication system has been changed.
8. Power supply way has been changed(change to supply to outdoor unit).
9. Evaporation temperature thermistor has been added.
10. Ambient temperature thermistor has been added.

MXZ-2A20NA → MXZ-2A20NA - 1

1. Compressor has been changed. (SNB130FPDH1 → SNB130FQBH1)
2. Gas pipe temperature thermistor has been removed.
3. Pre-heat control has been added.
4. Electronic control P.C. board has been changed.
5. Power board has been changed.

MXZ-3A30NA → MXZ-3A30NA - 1

1. Ball valve has been changed to stop valve.
2. Gas pipe temperature thermistor has been removed.
3. Pre-heat control has been added.
4. Auto line correcting function has been added.
5. Noise filter P.C. board has been changed.
6. Electronic control P.C. board has been changed.
7. Weight has been changed. (158lb. → 148lb.)

MXZ-4A36NA

New model



INFORMATION FOR THE AIR CONDITIONER WITH R410A REFRIGERANT

- This room air conditioner adopts HFC refrigerant (R410A) which never destroys the ozone layer.
 - Pay particular attention to the following points, though the basic installation procedure is same as that for R22 air conditioners.
- ① As R410A has working pressure approximate 1.6 times as high as that of R22, some special tools and piping parts/materials are required. Refer to the table below.
 - ② Take sufficient care not to allow water and other contaminations to enter the R410A refrigerant during storage and installation, since it is more susceptible to contaminations than R22.
 - ③ For refrigerant piping, use clean, pressure-proof parts/materials specifically designed for R410A. (Refer to 2. Refrigerant piping.)
 - ④ Composition change may occur in R410A since it is a mixed refrigerant. When charging, charge liquid refrigerant to prevent composition change.


| | | New refrigerant | Previous refrigerant |
|-------------------|---|-------------------------------|----------------------|
| Refrigerant | Refrigerant | R410A | R22 |
| | Composition (Ratio) | HFC-32: HFC-125 (50%:50%) | R22 (100%) |
| | Refrigerant handling | Pseudo-azeotropic refrigerant | Single refrigerant |
| | Chlorine | Not included | Included |
| | Safety group (ASHRAE) | A1/A1 | A1 |
| | Molecular weight | 72.6 | 86.5 |
| | Boiling point (°F) | -60.5 | -41.4 |
| | Steam pressure [77°F](PSIG) | 225.82 | 136.34 |
| | Saturated steam density [77°F](lb/ft ³) | 3.995 | 2.772 |
| | Combustibility | Non combustible | Non combustible |
| | ODP *1 | 0 | 0.055 |
| | GWP *2 | 1730 | 1700 |
| | Refrigerant charge method | From liquid phase in cylinder | Gas phase |
| | Additional charge on leakage | Possible | Possible |
| Refrigeration oil | Kind | Incompatible oil | Compatible oil |
| | Color | Non | Light yellow |
| | Smell | Non | Non |

*1 :Ozone Depletion Potential : based on CFC-11

*2 :Global Warming Potential : based on CO₂
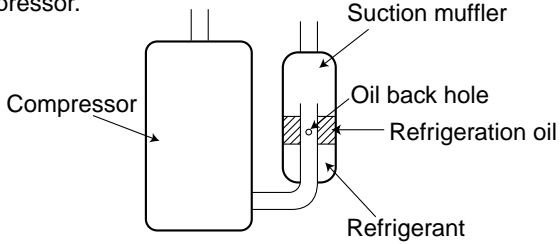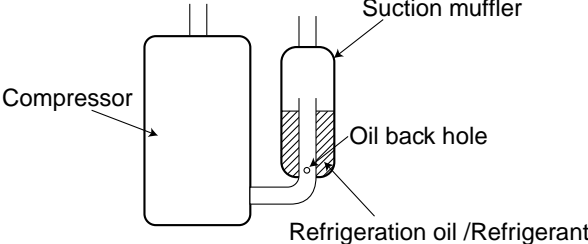
| | New Specification | Current Specification |
|------------|--|---|
| Compressor | <p>The incompatible refrigeration oil easily separates from refrigerant and is in the upper layer inside the suction muffler. Raising position of the oil back hole enables to back the refrigeration oil of the upper layer to flow back to the compressor.</p>  | <p>Since refrigerant and refrigeration oil are compatible, refrigeration oil goes back to the compressor through the lower position oil back hole.</p>  |

Conversion chart of refrigerant temperature and pressure

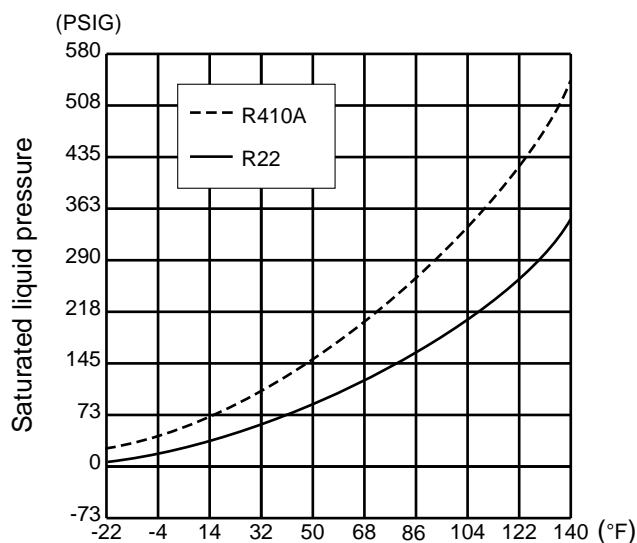

1.Tools dedicated for the air conditioner with R410A refrigerant

The following tools are required for R410A refrigerant. Some R22 tools can be substituted for R410A tools.

| R410A tools | Can R22 tools be used? | Description |
|---|------------------------|---|
| Gauge manifold | No | R410A has high pressures beyond the measurement range of existing gauges. |
| Charge hose | No | Hose material has been changed to improve the pressure resistance. |
| Gas leak detector | No | Dedicated for HFC refrigerant. |
| Torque wrench | Yes | 1/4in. and 3/8in. |
| | No | 1/2in. and 5/8in. |
| Flare tool | Yes | Clamp bar hole has been enlarged to reinforce the spring strength in the tool. |
| Flare gauge | New | Provided for flaring work (to be used with R22 flare tool). |
| Vacuum pump adapter | New | Provided to prevent the back flow of oil. This adapter enables you to use vacuum pumps. |
| Electronic scale for refrigerant charging | New | It is difficult to measure R410A with a charging cylinder because the refrigerant bubbles due to high pressure and high-speed vaporization. |

No : Not Substitutable for R410A Yes : Substitutable for R410A

2.Refrigerant piping

① Specifications

Use the copper or copper-alloy seamless pipes for refrigerant that meet the following specifications.

| Outside diameter (inch) | Wall thickness (inch) | Insulation material |
|----------------------------|--------------------------|--|
| 1/4 | 0.0315 | Heat resisting foam plastic Specific gravity 0.045 Thickness 0.315 inch |
| 3/8 | 0.0315 | |
| 1/2 | 0.0315 | |
| 5/8 | 0.0394 | |

② Flaring work and flare nut

Flaring work for R410A pipe differs from that for R22 pipe.

For details of flaring work, refer to installation manual "FLARING WORK".

| Pipe diameter (inch) | Dimension of flare nut (mm) [inch] | |
|-------------------------|---------------------------------------|-------------|
| | R410A | R22 |
| 1/4 | 17 [11/16] | 17 [11/16] |
| 3/8 | 22 [7/8] | 22 [7/8] |
| 1/2 | 26 [1-1/32] | 24 [15/16] |
| 5/8 | 29 [1-5/32] | 27 [1-1/16] |

3.Refrigeration oil

Apply the special refrigeration oil (accessories: packed with indoor unit) to the flare and the union seat surfaces.

4.Air purge

- Do not discharge the refrigerant into the atmosphere.


Take care not to discharge refrigerant into the atmosphere during installation, reinstallation, or repairs to the refrigerant circuit.


- Use the vacuum pump for air purging for the purpose of environmental protection.

5.Additional charge


For additional charging, charge the refrigerant from liquid phase of the gas cylinder.

If the refrigerant is charged from the gas phase, composition change may occur in the refrigerant inside the cylinder and the outdoor unit. In this case, ability of the refrigeration cycle decreases or normal operation can be impossible. However, charging the liquid refrigerant all at once may cause the compressor to be locked. Thus, charge the refrigerant slowly.

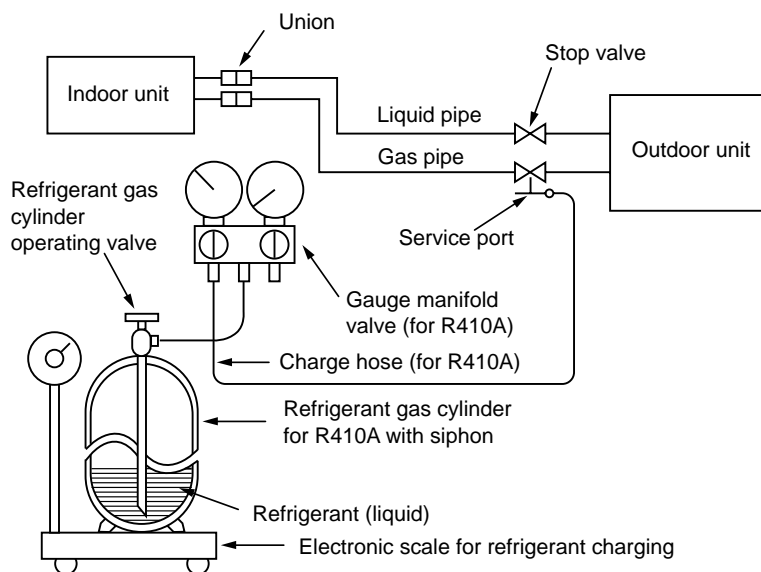


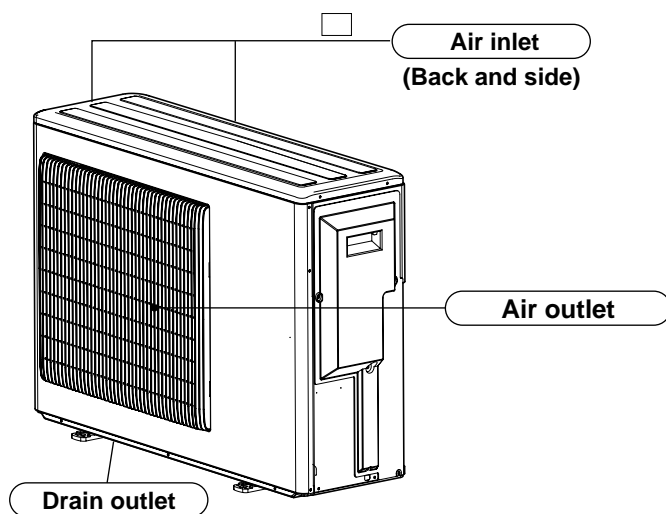

MXZ-3A30NA

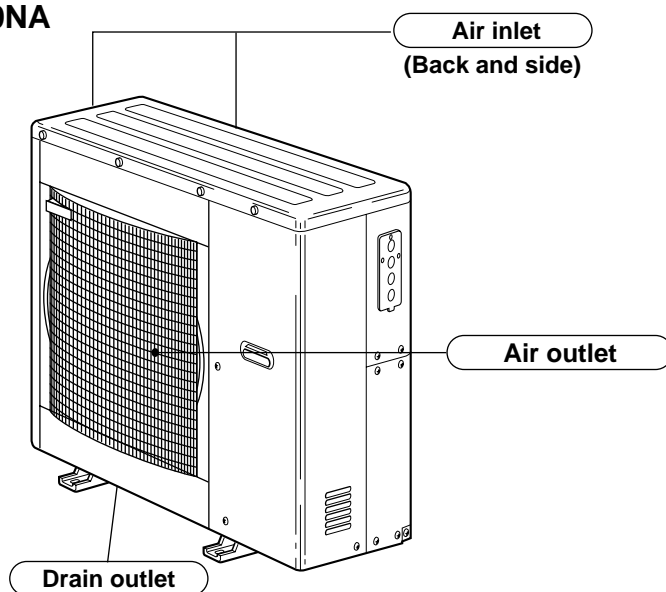

MXZ-3A30NA - 1 MXZ-4A36NA

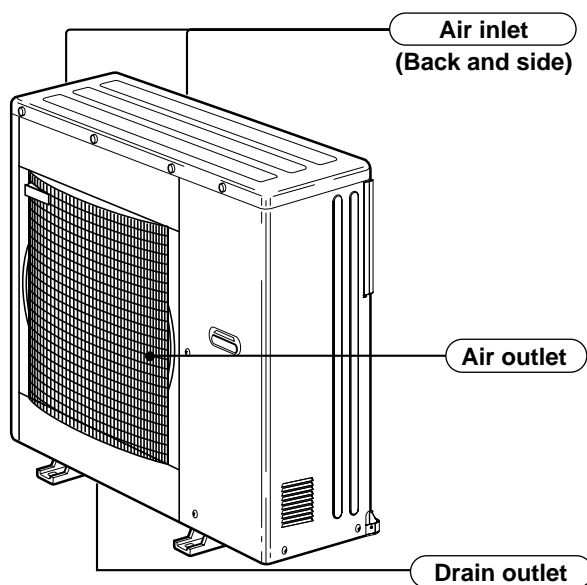

The following charts show indoor unit performance when operating individually or in combination. For authorized system configurations of the indoor units, please refer to the Mr. Slim brochure.

MXZ-2A20NA MXZ-2A20NA - 1

| Indoor units combination | Cooling capacity (BTU/h) | | | Power consumption (W) | Current (A) | | Power factor (%) |
|--------------------------|--------------------------|--------|----------------------------|------------------------|-------------|------|------------------|
| | Unit A | Unit B | Total | | 208V | 230V | |
| 09 | 9,000 | — | 9,000 (5,400 ~ 9,000) | 730 (490 ~ 730) | 3.69 | 3.34 | 95 |
| 12 | 12,000 | — | 12,000 (5,400 ~ 12,000) | 990 (490 ~ 990) | 5.01 | 4.53 | 95 |
| 15 | 15,000 | — | 15,000 (5,400 ~ 15,000) | 1,540 (490 ~ 1,540) | 7.79 | 7.05 | 95 |
| 09+09 | 9,000 | 9,000 | 18,000 (7,800 ~ 18,000) | 1,740 (630 ~ 1,740) | 8.62 | 7.80 | 97 |
| 09+12 | 8,500 | 11,500 | 20,000 (7,800 ~ 20,000) | 2,150 (630 ~ 2,150) | 10.66 | 9.64 | 97 |
| 09+15 | 7,500 | 12,500 | 20,000 (7,800 ~ 20,000) | 2,150 (630 ~ 2,150) | 10.66 | 9.64 | 97 |
| 12+12 | 10,000 | 10,000 | 20,000 (7,800 ~ 20,000) | 2,150 (630 ~ 2,150) | 10.66 | 9.64 | 97 |

| Indoor units combination | Heating capacity (BTU/h) | | | Power consumption (W) | Current (A) | | Power factor (%) |
|--------------------------|--------------------------|--------|----------------------------|------------------------|-------------|------|------------------|
| | Unit A | Unit B | Total | | 208V | 230V | |
| 09 | 10,900 | — | 10,900 (5,200 ~ 15,400) | 940 (480 ~ 1,430) | 4.76 | 4.30 | 95 |
| 12 | 13,600 | — | 13,600 (5,200 ~ 16,400) | 1,180 (480 ~ 1,460) | 5.97 | 5.40 | 95 |
| 15 | 18,000 | — | 18,000 (5,200 ~ 21,100) | 1,720 (480 ~ 2,100) | 8.70 | 7.87 | 95 |
| 09+09 | 10,900 | 10,900 | 21,800 (8,500 ~ 21,800) | 1,820 (520 ~ 1,820) | 9.02 | 8.16 | 97 |
| 09+12 | 9,500 | 12,500 | 22,000 (8,500 ~ 22,000) | 1,780 (520 ~ 1,780) | 8.82 | 7.98 | 97 |
| 09+15 | 8,250 | 13,750 | 22,000 (8,500 ~ 22,000) | 1,780 (520 ~ 1,780) | 8.82 | 7.98 | 97 |
| 12+12 | 11,000 | 11,000 | 22,000 (8,500 ~ 22,000) | 1,780 (520 ~ 1,780) | 8.82 | 7.98 | 97 |

MXZ-3A30NA MXZ-3A30NA - 1

| Indoor units combination | Cooling capacity (BTU/h) | | | | Power consumption (W) | Current (A) | | Power factor (%) |
|--------------------------|--------------------------|--------|--------|-----------------------------|--------------------------|-------------|-------|------------------|
| | Unit A | Unit B | Unit C | Total | | 208V | 230V | |
| 09 | 9,000 | — | — | 9,000 (7,200 ~ 9,000) | 800 (650 ~ 800) | 4.05 | 3.66 | 95 |
| 12 | 12,000 | — | — | 12,000 (7,200 ~ 12,000) | 1,000 (650 ~ 1,000) | 5.06 | 4.58 | 95 |
| 15 | 15,000 | — | — | 15,000 (7,200 ~ 15,000) | 1,320 (650 ~ 1,320) | 6.68 | 6.04 | 95 |
| 17 | 16,200 | — | — | 16,200 (7,200 ~ 16,200) | 1,480 (650 ~ 1,480) | 7.49 | 6.77 | 95 |
| 24 | 22,000 | — | — | 22,000 (7,200 ~ 22,000) | 2,220 (650 ~ 2,200) | 11.13 | 10.07 | 95 |
| 09+09 | 9,000 | 9,000 | — | 18,000 (12,000 ~ 18,000) | 1,800 (920 ~ 1,800) | 8.92 | 8.07 | 97 |
| 09+12 | 9,000 | 12,000 | — | 21,000 (12,000 ~ 21,000) | 2,000 (920 ~ 2,000) | 9.91 | 8.96 | 97 |
| 09+15 | 9,000 | 15,000 | — | 24,000 (12,000 ~ 24,000) | 2,500 (920 ~ 2,500) | 12.39 | 11.21 | 97 |
| 09+17 | 9,000 | 16,200 | — | 25,200 (12,000 ~ 25,200) | 2,700 (920 ~ 2,700) | 13.38 | 12.10 | 97 |
| 09+24 | 7,600 | 20,400 | — | 28,000 (12,000 ~ 28,000) | 3,200 (920 ~ 3,200) | 15.86 | 14.34 | 97 |
| 12+12 | 12,000 | 12,000 | — | 24,000 (12,000 ~ 24,000) | 2,500 (920 ~ 2,500) | 12.39 | 11.21 | 97 |
| 12+15 | 11,500 | 14,500 | — | 26,000 (12,000 ~ 26,000) | 2,800 (920 ~ 2,800) | 13.88 | 12.55 | 97 |
| 12+17 | 10,800 | 15,200 | — | 26,000 (12,000 ~ 26,000) | 2,800 (920 ~ 2,800) | 13.88 | 12.55 | 97 |
| 15+15 | 13,000 | 13,000 | — | 26,000 (12,000 ~ 26,000) | 2,800 (920 ~ 2,800) | 13.88 | 12.55 | 97 |
| 15+17 | 12,200 | 13,800 | — | 26,000 (12,000 ~ 26,000) | 2,800 (920 ~ 2,800) | 13.88 | 12.55 | 97 |
| 17+17 | 13,000 | 13,000 | — | 26,000 (12,000 ~ 26,000) | 2,800 (920 ~ 2,800) | 13.88 | 12.55 | 97 |
| 09+09+09 | 9,000 | 9,000 | 9,000 | 27,000 (12,600 ~ 27,000) | 2,860 (1,000 ~ 2,850) | 14.18 | 12.82 | 97 |
| 09+09+12 | 8,500 | 8,500 | 11,400 | 28,400 (12,600 ~ 28,400) | 3,250 (1,000 ~ 3,250) | 16.11 | 14.57 | 97 |
| 09+09+15 | 7,750 | 7,750 | 12,900 | 28,400 (12,600 ~ 28,400) | 3,250 (1,000 ~ 3,250) | 16.11 | 14.57 | 97 |
| 09+09+17 | 7,300 | 7,300 | 13,800 | 28,400 (12,600 ~ 28,400) | 3,250 (1,000 ~ 3,250) | 16.11 | 14.57 | 97 |



| Indoor units combination | Heating capacity (BTU/h) | | | | Power consumption (W) | Current (A) | | Power factor (%) |
|-----------------------------|--------------------------|--------|--------|-----------------------------|--------------------------|----------------|-------|------------------------|
| | Unit A | Unit B | Unit C | Total | | 208V | 230V | |
| | | | | | | | | |
| 09 | 10,900 | — | — | 10,900 (8,600 ~ 15,400) | 1,100 (780 ~ 1,520) | 5.57 | 5.03 | 95 |
| 12 | 13,600 | — | — | 13,600 (8,600 ~ 16,400) | 1,380 (780 ~ 1,600) | 6.98 | 6.32 | 95 |
| 15 | 18,000 | — | — | 18,000 (8,600 ~ 21,100) | 1,940 (780 ~ 2,280) | 9.82 | 8.88 | 95 |
| 17 | 20,100 | — | — | 20,100 (8,600 ~ 21,500) | 2,240 (780 ~ 2,300) | 11.34 | 10.25 | 95 |
| 24 | 23,200 | — | — | 23,200 (8,600 ~ 27,800) | 2,520 (780 ~ 3,000) | 12.75 | 11.53 | 95 |
| 09+09 | 10,900 | 10,900 | — | 21,800 (11,000 ~ 31,000) | 1,700 (740 ~ 2,560) | 8.43 | 7.62 | 97 |
| 09+12 | 10,900 | 13,600 | — | 24,500 (11,000 ~ 33,000) | 1,980 (740 ~ 2,800) | 9.81 | 8.87 | 97 |
| 09+15 | 10,100 | 16,900 | — | 27,000 (11,000 ~ 35,000) | 2,200 (740 ~ 2,920) | 10.90 | 9.86 | 97 |
| 09+17 | 9,300 | 17,700 | — | 27,000 (11,000 ~ 35,000) | 2,200 (740 ~ 2,920) | 10.90 | 9.86 | 97 |
| 09+24 | 7,300 | 19,700 | — | 27,000 (11,000 ~ 35,000) | 1,980 (740 ~ 2,740) | 9.81 | 8.87 | 97 |
| 12+12 | 13,500 | 13,500 | — | 27,000 (11,000 ~ 35,000) | 2,200 (740 ~ 2,920) | 10.90 | 9.86 | 97 |
| 12+15 | 12,000 | 15,000 | — | 27,000 (11,000 ~ 35,000) | 2,160 (740 ~ 2,860) | 10.71 | 9.68 | 97 |
| 12+17 | 11,200 | 15,800 | — | 27,000 (11,000 ~ 35,000) | 2,140 (740 ~ 2,860) | 10.61 | 9.59 | 97 |
| 15+15 | 13,500 | 13,500 | — | 27,000 (11,000 ~ 35,000) | 2,120 (740 ~ 2,800) | 10.51 | 9.50 | 97 |
| 15+17 | 12,700 | 14,300 | — | 27,000 (11,000 ~ 35,000) | 2,110 (740 ~ 2,800) | 10.46 | 9.46 | 97 |
| 17+17 | 13,500 | 13,500 | — | 27,000 (11,000 ~ 35,000) | 2,100 (740 ~ 2,800) | 10.41 | 9.41 | 97 |
| 09+09+09 | 9,500 | 9,500 | 9,500 | 28,500 (11,400 ~ 36,000) | 2,180 (740 ~ 2,880) | 10.80 | 9.77 | 97 |
| 09+09+12 | 8,600 | 8,600 | 11,400 | 28,600 (11,400 ~ 36,000) | 2,180 (740 ~ 2,880) | 10.80 | 9.77 | 97 |
| 09+09+15 | 7,800 | 7,800 | 13,000 | 28,600 (11,400 ~ 36,000) | 2,180 (740 ~ 2,880) | 10.80 | 9.77 | 97 |
| 09+09+17 | 7,350 | 7,350 | 13,900 | 28,600 (11,400 ~ 36,000) | 2,180 (740 ~ 2,880) | 10.80 | 9.77 | 97 |

MXZ-4A36NA 208V

| Indoor units combination | Cooling capacity (BTU/h) | | | | | Power consumption (W) | Current (A) | Power factor (%) |
|--------------------------|--------------------------|--------|--------|--------|-----------------------------|--------------------------|-------------|------------------|
| | Unit A | Unit B | Unit C | Unit D | Total | | 208V | |
| 09 | 9,000 | — | — | — | 9,000 (7,200 ~ 9,000) | 800 (650 ~ 800) | 4.05 | 95 |
| 12 | 12,000 | — | — | — | 12,000 (7,200 ~ 12,000) | 1,000 (650 ~ 1,000) | 5.06 | 95 |
| 15 | 15,000 | — | — | — | 15,000 (7,200 ~ 15,000) | 1,320 (650 ~ 1,320) | 6.68 | 95 |
| 17 | 16,200 | — | — | — | 16,200 (7,200 ~ 16,200) | 1,480 (650 ~ 1,480) | 7.49 | 95 |
| 24 | 22,000 | — | — | — | 22,000 (7,200 ~ 22,000) | 2,200 (650 ~ 2,200) | 11.13 | 95 |
| 09+09 | 9,000 | 9,000 | — | — | 18,000 (12,000 ~ 18,000) | 1,800 (920 ~ 1,800) | 8.92 | 97 |
| 09+12 | 9,000 | 12,000 | — | — | 21,000 (12,000 ~ 21,000) | 2,000 (920 ~ 2,000) | 9.91 | 97 |
| 09+15 | 9,000 | 15,000 | — | — | 24,000 (12,000 ~ 24,000) | 2,500 (920 ~ 2,500) | 12.39 | 97 |
| 09+17 | 9,000 | 16,200 | — | — | 25,200 (12,000 ~ 25,200) | 2,700 (920 ~ 2,700) | 13.38 | 97 |
| 09+24 | 7,600 | 20,400 | — | — | 28,000 (12,000 ~ 28,000) | 3,200 (920 ~ 3,200) | 15.86 | 97 |
| 12+12 | 12,000 | 12,000 | — | — | 24,000 (12,000 ~ 24,000) | 2,500 (920 ~ 2,500) | 12.39 | 97 |
| 12+15 | 11,500 | 14,500 | — | — | 26,000 (12,000 ~ 26,000) | 2,800 (920 ~ 2,800) | 13.88 | 97 |
| 12+17 | 10,800 | 15,200 | — | — | 26,000 (12,000 ~ 26,000) | 2,800 (920 ~ 2,800) | 13.88 | 97 |
| 15+15 | 13,000 | 13,000 | — | — | 26,000 (12,000 ~ 26,000) | 2,800 (920 ~ 2,800) | 13.88 | 97 |
| 15+17 | 12,200 | 13,800 | — | — | 26,000 (12,000 ~ 26,000) | 2,800 (920 ~ 2,800) | 13.88 | 97 |
| 17+17 | 13,000 | 13,000 | — | — | 26,000 (12,000 ~ 26,000) | 2,800 (920 ~ 2,800) | 13.88 | 97 |
| 09+09+09 | 9,000 | 9,000 | 9,000 | — | 27,000 (12,600 ~ 27,000) | 2,860 (1,000 ~ 2,850) | 14.18 | 97 |
| 09+09+12 | 9,000 | 9,000 | 12,000 | — | 30,000 (12,600 ~ 30,000) | 3,270 (1,000 ~ 3,270) | 16.21 | 97 |
| 09+09+15 | 8,800 | 8,800 | 14,500 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 17.35 | 97 |
| 09+09+17 | 8,200 | 8,200 | 15,700 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 17.35 | 97 |
| 09+09+24 | 6,900 | 6,900 | 18,300 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 17.35 | 97 |
| 09+12+12 | 8,700 | 11,700 | 11,700 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 17.35 | 97 |



| Indoor units combination | Cooling capacity (BTU/h) | | | | | Power consumption (W) | Current (A) | Power factor (%) |
|--------------------------|--------------------------|--------|--------|--------|-----------------------------|--------------------------|-------------|------------------|
| | Unit A | Unit B | Unit C | Unit D | Total | | 208V | |
| 09+12+15 | 8,000 | 10,700 | 13,400 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 17.35 | 97 |
| 09+12+17 | 7,600 | 10,100 | 14,400 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 17.35 | 97 |
| 09+15+15 | 7,500 | 12,300 | 12,300 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 17.35 | 97 |
| 09+15+17 | 7,100 | 11,700 | 13,300 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 17.35 | 97 |
| 09+17+17 | 6,700 | 12,700 | 12,700 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 17.35 | 97 |
| 12+12+12 | 10,700 | 10,700 | 10,700 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 17.35 | 97 |
| 12+12+15 | 9,900 | 9,900 | 12,300 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 17.35 | 97 |
| 12+12+17 | 9,400 | 9,400 | 13,300 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 17.35 | 97 |
| 12+15+15 | 9,100 | 11,500 | 11,500 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 17.35 | 97 |
| 09+09+09+09 | 9,000 | 9,000 | 9,000 | 9,000 | 36,000 (12,600 ~ 36,400) | 3,820 (1,000 ~ 3,900) | 18.55 | 99 |
| 09+09+09+12 | 8,300 | 8,300 | 8,300 | 11,100 | 36,000 (12,600 ~ 36,400) | 3,820 (1,000 ~ 3,900) | 18.55 | 99 |
| 09+09+09+15 | 7,700 | 7,700 | 7,700 | 12,900 | 36,000 (12,600 ~ 36,400) | 3,820 (1,000 ~ 3,900) | 18.55 | 99 |
| 09+09+12+12 | 7,700 | 7,700 | 10,300 | 10,300 | 36,000 (12,600 ~ 36,400) | 3,820 (1,000 ~ 3,900) | 18.55 | 99 |



| Indoor units combination | Heating capacity (BTU/h) | | | | | Power consumption (W) | Current (A) | Power factor (%) |
|--------------------------|--------------------------|--------|--------|--------|-----------------------------|------------------------|-------------|------------------|
| | Unit A | Unit B | Unit C | Unit D | Total | | 208V | |
| 09 | 10,900 | — | — | — | 10,900 (8,600 ~ 15,400) | 1,100 (780 ~ 1,520) | 5.57 | 95 |
| 12 | 13,600 | — | — | — | 13,600 (8,600 ~ 16,400) | 1,380 (780 ~ 1,600) | 6.98 | 95 |
| 15 | 18,000 | — | — | — | 18,000 (8,600 ~ 21,100) | 1,940 (780 ~ 2,280) | 9.82 | 95 |
| 17 | 20,100 | — | — | — | 20,100 (8,600 ~ 21,500) | 2,240 (780 ~ 2,300) | 11.34 | 95 |
| 24 | 23,200 | — | — | — | 23,200 (8,600 ~ 27,800) | 2,520 (780 ~ 3,000) | 12.75 | 95 |
| 09+09 | 10,900 | 10,900 | — | — | 21,800 (11,000 ~ 31,000) | 1,700 (740 ~ 2,560) | 8.43 | 97 |
| 09+12 | 10,900 | 13,600 | — | — | 24,500 (11,000 ~ 33,000) | 1,980 (740 ~ 2,800) | 9.81 | 97 |
| 09+15 | 10,100 | 16,900 | — | — | 27,000 (11,000 ~ 35,000) | 2,200 (740 ~ 2,920) | 10.90 | 97 |
| 09+17 | 9,300 | 17,700 | — | — | 27,000 (11,000 ~ 35,000) | 2,200 (740 ~ 2,920) | 10.90 | 97 |
| 09+24 | 7,300 | 19,700 | — | — | 27,000 (11,000 ~ 35,000) | 1,980 (740 ~ 2,740) | 9.81 | 97 |
| 12+12 | 13,500 | 13,500 | — | — | 27,000 (11,000 ~ 35,000) | 2,200 (740 ~ 2,920) | 10.90 | 97 |
| 12+15 | 12,000 | 15,000 | — | — | 27,000 (11,000 ~ 35,000) | 2,160 (740 ~ 2,860) | 10.71 | 97 |
| 12+17 | 11,200 | 15,800 | — | — | 27,000 (11,000 ~ 35,000) | 2,140 (740 ~ 2,860) | 10.61 | 97 |
| 15+15 | 13,500 | 13,500 | — | — | 27,000 (11,000 ~ 35,000) | 2,120 (740 ~ 2,800) | 10.51 | 97 |
| 15+17 | 12,700 | 14,300 | — | — | 27,000 (11,000 ~ 35,000) | 2,110 (740 ~ 2,800) | 10.46 | 97 |
| 17+17 | 13,500 | 13,500 | — | — | 27,000 (11,000 ~ 35,000) | 2,100 (740 ~ 2,800) | 10.41 | 97 |
| 09+09+09 | 10,800 | 10,800 | 10,800 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 13.38 | 97 |
| 09+09+12 | 10,000 | 10,000 | 12,400 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 13.38 | 97 |
| 09+09+15 | 8,900 | 8,900 | 14,600 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 13.38 | 97 |
| 09+09+17 | 8,400 | 8,400 | 15,600 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 13.38 | 97 |
| 09+09+24 | 7,800 | 7,800 | 16,800 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 13.38 | 97 |
| 09+12+12 | 9,400 | 11,500 | 11,500 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 13.38 | 97 |
| 09+12+15 | 8,300 | 10,400 | 13,700 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 13.38 | 97 |



| Indoor units combination | Heating capacity (BTU/h) | | | | | Power consumption (W) | Current (A) | Power factor (%) |
|--------------------------|--------------------------|--------|--------|--------|-----------------------------|------------------------|-------------|------------------|
| | Unit A | Unit B | Unit C | Unit D | Total | | 208V | |
| 09+12+17 | 7,900 | 9,900 | 14,600 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 13.38 | 97 |
| 09+15+15 | 7,600 | 12,400 | 12,400 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 13.38 | 97 |
| 09+15+17 | 7,200 | 11,900 | 13,300 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 13.38 | 97 |
| 09+17+17 | 7,000 | 12,700 | 12,700 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 13.38 | 97 |
| 12+12+12 | 10,800 | 10,800 | 10,800 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 13.38 | 97 |
| 12+12+15 | 9,700 | 9,700 | 13,000 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 13.38 | 97 |
| 12+12+17 | 9,300 | 9,300 | 13,800 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 13.38 | 97 |
| 12+15+15 | 9,000 | 11,700 | 11,700 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 13.38 | 97 |
| 09+09+09+09 | 9,000 | 9,000 | 9,000 | 9,000 | 36,000 (11,400 ~ 41,200) | 3,100 (740 ~ 4,000) | 15.05 | 99 |
| 09+09+09+12 | 8,300 | 8,300 | 8,300 | 11,100 | 36,000 (11,400 ~ 41,200) | 3,100 (740 ~ 4,000) | 15.05 | 99 |
| 09+09+09+15 | 7,700 | 7,700 | 7,700 | 12,900 | 36,000 (11,400 ~ 41,200) | 3,100 (740 ~ 4,000) | 15.05 | 99 |
| 09+09+12+12 | 7,700 | 7,700 | 10,300 | 10,300 | 36,000 (11,400 ~ 41,200) | 3,100 (740 ~ 4,000) | 15.05 | 99 |

MXZ-4A36NA 230V

| Indoor units combination | Cooling capacity (BTU/h) | | | | | Power consumption (W) | Current (A) | Power factor (%) |
|--------------------------|--------------------------|--------|--------|--------|-----------------------------|--------------------------|-------------|------------------|
| | Unit A | Unit B | Unit C | Unit D | Total | | 230V | |
| 09 | 9,000 | — | — | — | 9,000 (7,200 ~ 9,000) | 800 (650 ~ 800) | 3.66 | 95 |
| 12 | 12,000 | — | — | — | 12,000 (7,200 ~ 12,000) | 1,000 (650 ~ 1,000) | 4.58 | 95 |
| 15 | 15,000 | — | — | — | 15,000 (7,200 ~ 15,000) | 1,320 (650 ~ 1,320) | 6.04 | 95 |
| 17 | 16,200 | — | — | — | 16,200 (7,200 ~ 16,200) | 1,480 (650 ~ 1,480) | 6.77 | 95 |
| 24 | 22,000 | — | — | — | 22,000 (7,200 ~ 22,000) | 2,200 (650 ~ 2,200) | 10.07 | 95 |
| 09+09 | 9,000 | 9,000 | — | — | 18,000 (12,000 ~ 18,000) | 1,800 (920 ~ 1,800) | 8.07 | 97 |
| 09+12 | 9,000 | 12,000 | — | — | 21,000 (12,000 ~ 21,000) | 2,000 (920 ~ 2,000) | 8.96 | 97 |
| 09+15 | 9,000 | 15,000 | — | — | 24,000 (12,000 ~ 24,000) | 2,500 (920 ~ 2,500) | 11.21 | 97 |
| 09+17 | 9,000 | 16,200 | — | — | 25,200 (12,000 ~ 25,200) | 2,700 (920 ~ 2,700) | 12.10 | 97 |
| 09+24 | 7,600 | 20,400 | — | — | 28,000 (12,000 ~ 28,000) | 3,200 (920 ~ 3,200) | 14.34 | 97 |
| 12+12 | 12,000 | 12,000 | — | — | 24,000 (12,000 ~ 24,000) | 2,500 (920 ~ 2,500) | 11.21 | 97 |
| 12+15 | 11,500 | 14,500 | — | — | 26,000 (12,000 ~ 26,000) | 2,800 (920 ~ 2,800) | 12.55 | 97 |
| 12+17 | 10,800 | 15,200 | — | — | 26,000 (12,000 ~ 26,000) | 2,800 (920 ~ 2,800) | 12.55 | 97 |
| 15+15 | 13,000 | 13,000 | — | — | 26,000 (12,000 ~ 26,000) | 2,800 (920 ~ 2,800) | 12.55 | 97 |
| 15+17 | 12,200 | 13,800 | — | — | 26,000 (12,000 ~ 26,000) | 2,800 (920 ~ 2,800) | 12.55 | 97 |
| 17+17 | 13,000 | 13,000 | — | — | 26,000 (12,000 ~ 26,000) | 2,800 (920 ~ 2,800) | 12.55 | 97 |
| 09+09+09 | 9,000 | 9,000 | 9,000 | — | 27,000 (12,600 ~ 27,000) | 2,860 (1,000 ~ 2,850) | 12.82 | 97 |
| 09+09+12 | 9,000 | 9,000 | 12,000 | — | 30,000 (12,600 ~ 30,000) | 3,270 (1,000 ~ 3,270) | 14.66 | 97 |
| 09+09+15 | 8,800 | 8,800 | 14,500 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 15.69 | 97 |
| 09+09+17 | 8,200 | 8,200 | 15,700 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 15.69 | 97 |
| 09+09+24 | 6,900 | 6,900 | 18,300 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 15.69 | 97 |
| 09+12+12 | 8,700 | 11,700 | 11,700 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 15.69 | 97 |



| Indoor units combination | Cooling capacity (BTU/h) | | | | | Power consumption (W) | Current (A) | Power factor (%) |
|--------------------------|--------------------------|--------|--------|--------|-----------------------------|--------------------------|-------------|------------------|
| | Unit A | Unit B | Unit C | Unit D | Total | | 230V | |
| 09+12+15 | 8,000 | 10,700 | 13,400 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 15.69 | 97 |
| 09+12+17 | 7,600 | 10,100 | 14,400 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 15.69 | 97 |
| 09+15+15 | 7,500 | 12,300 | 12,300 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 15.69 | 97 |
| 09+15+17 | 7,100 | 11,700 | 13,300 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 15.69 | 97 |
| 09+17+17 | 6,700 | 12,700 | 12,700 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 15.69 | 97 |
| 12+12+12 | 10,700 | 10,700 | 10,700 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 15.69 | 97 |
| 12+12+15 | 9,900 | 9,900 | 12,300 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 15.69 | 97 |
| 12+12+17 | 9,400 | 9,400 | 13,300 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 15.69 | 97 |
| 12+15+15 | 9,100 | 11,500 | 11,500 | — | 32,100 (12,600 ~ 32,100) | 3,500 (1,000 ~ 3,500) | 15.69 | 97 |
| 09+09+09+09 | 9,000 | 9,000 | 9,000 | 9,000 | 36,000 (12,600 ~ 36,400) | 3,820 (1,000 ~ 3,900) | 16.78 | 99 |
| 09+09+09+12 | 8,300 | 8,300 | 8,300 | 11,100 | 36,000 (12,600 ~ 36,400) | 3,820 (1,000 ~ 3,900) | 16.78 | 99 |
| 09+09+09+15 | 7,700 | 7,700 | 7,700 | 12,900 | 36,000 (12,600 ~ 36,400) | 3,820 (1,000 ~ 3,900) | 16.78 | 99 |
| 09+09+12+12 | 7,700 | 7,700 | 10,300 | 10,300 | 36,000 (12,600 ~ 36,400) | 3,820 (1,000 ~ 3,900) | 16.78 | 99 |



| Indoor units combination | Heating capacity (BTU/h) | | | | | Power consumption (W) | Current (A) | Power factor (%) |
|--------------------------|--------------------------|--------|--------|--------|-----------------------------|------------------------|-------------|------------------|
| | Unit A | Unit B | Unit C | Unit D | Total | | 230V | |
| 09 | 10,900 | — | — | — | 10,900 (8,600 ~ 15,400) | 1,100 (780 ~ 1,520) | 5.03 | 95 |
| 12 | 13,600 | — | — | — | 13,600 (8,600 ~ 16,400) | 1,380 (780 ~ 1,600) | 6.32 | 95 |
| 15 | 18,000 | — | — | — | 18,000 (8,600 ~ 21,100) | 1,940 (780 ~ 2,280) | 8.88 | 95 |
| 17 | 20,100 | — | — | — | 20,100 (8,600 ~ 21,500) | 2,240 (780 ~ 2,300) | 10.25 | 95 |
| 24 | 23,200 | — | — | — | 23,200 (8,600 ~ 27,800) | 2,520 (780 ~ 3,000) | 11.53 | 95 |
| 09+09 | 10,900 | 10,900 | — | — | 21,800 (11,000 ~ 31,000) | 1,700 (740 ~ 2,560) | 7.62 | 97 |
| 09+12 | 10,900 | 13,600 | — | — | 24,500 (11,000 ~ 33,000) | 1,980 (740 ~ 2,800) | 8.87 | 97 |
| 09+15 | 10,100 | 16,900 | — | — | 27,000 (11,000 ~ 35,000) | 2,200 (740 ~ 2,920) | 9.86 | 97 |
| 09+17 | 9,300 | 17,700 | — | — | 27,000 (11,000 ~ 35,000) | 2,200 (740 ~ 2,920) | 9.86 | 97 |
| 09+24 | 7,300 | 19,700 | — | — | 27,000 (11,000 ~ 35,000) | 1,980 (740 ~ 2,740) | 8.87 | 97 |
| 12+12 | 13,500 | 13,500 | — | — | 27,000 (11,000 ~ 35,000) | 2,200 (740 ~ 2,920) | 9.86 | 97 |
| 12+15 | 12,000 | 15,000 | — | — | 27,000 (11,000 ~ 35,000) | 2,160 (740 ~ 2,860) | 9.68 | 97 |
| 12+17 | 11,200 | 15,800 | — | — | 27,000 (11,000 ~ 35,000) | 2,140 (740 ~ 2,860) | 9.59 | 97 |
| 15+15 | 13,500 | 13,500 | — | — | 27,000 (11,000 ~ 35,000) | 2,120 (740 ~ 2,800) | 9.50 | 97 |
| 15+17 | 12,700 | 14,300 | — | — | 27,000 (11,000 ~ 35,000) | 2,110 (740 ~ 2,800) | 9.46 | 97 |
| 17+17 | 13,500 | 13,500 | — | — | 27,000 (11,000 ~ 35,000) | 2,100 (740 ~ 2,800) | 9.41 | 97 |
| 09+09+09 | 10,800 | 10,800 | 10,800 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 12.10 | 97 |
| 09+09+12 | 10,000 | 10,000 | 12,400 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 12.10 | 97 |
| 09+09+15 | 8,900 | 8,900 | 14,600 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 12.10 | 97 |
| 09+09+17 | 8,400 | 8,400 | 15,600 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 12.10 | 97 |
| 09+09+24 | 7,800 | 7,800 | 16,800 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 12.10 | 97 |
| 09+12+12 | 9,400 | 11,500 | 11,500 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 12.10 | 97 |
| 09+12+15 | 8,300 | 10,400 | 13,700 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 12.10 | 97 |



| Indoor units combination | Heating capacity (BTU/h) | | | | | Power consumption (W) | Current (A) | Power factor (%) |
|--------------------------|--------------------------|--------|--------|--------|-----------------------------|------------------------|-------------|------------------|
| | Unit A | Unit B | Unit C | Unit D | Total | | 230V | |
| 09+12+17 | 7,900 | 9,900 | 14,600 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 12.10 | 97 |
| 09+15+15 | 7,600 | 12,400 | 12,400 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 12.10 | 97 |
| 09+15+17 | 7,200 | 11,900 | 13,300 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 12.10 | 97 |
| 09+17+17 | 7,000 | 12,700 | 12,700 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 12.10 | 97 |
| 12+12+12 | 10,800 | 10,800 | 10,800 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 12.10 | 97 |
| 12+12+15 | 9,700 | 9,700 | 13,000 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 12.10 | 97 |
| 12+12+17 | 9,300 | 9,300 | 13,800 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 12.10 | 97 |
| 12+15+15 | 9,000 | 11,700 | 11,700 | — | 32,400 (11,400 ~ 36,000) | 2,700 (740 ~ 2,880) | 12.10 | 97 |
| 09+09+09+09 | 9,000 | 9,000 | 9,000 | 9,000 | 36,000 (11,400 ~ 43,000) | 3,100 (740 ~ 4,350) | 13.61 | 99 |
| 09+09+09+12 | 8,300 | 8,300 | 8,300 | 11,100 | 36,000 (11,400 ~ 43,000) | 3,100 (740 ~ 4,350) | 13.61 | 99 |
| 09+09+09+15 | 7,700 | 7,700 | 7,700 | 12,900 | 36,000 (11,400 ~ 43,000) | 3,100 (740 ~ 4,350) | 13.61 | 99 |
| 09+09+12+12 | 7,700 | 7,700 | 10,300 | 10,300 | 36,000 (11,400 ~ 43,000) | 3,100 (740 ~ 4,350) | 13.61 | 99 |

| Item | | Model | MXZ-2A20NA | MXZ-2A20NA - [1] |
|---|--------------------------------|--------------|-------------------------------|----------------------------|
| Capacity | Cooling ※1 | Btu/h | 20,000/ (7,800 ~ 20,000) | |
| | Heating 47 ※1 | Btu/h | 22,000/ (8,500 ~ 22,000) | |
| | Heating 17 ※2 | Btu/h | 14,500 | |
| Power consumption | Cooling ※1 | W | 2,150/ (630 ~ 2,150) | |
| | Heating 47 ※1 | W | 1,780/ (520 ~ 1,780) | |
| | Heating 17 ※2 | W | 1,500 (1,500) | |
| EER ※1 [SEER] ※3 | Cooling | | 9.3 [15] | |
| HSPF IV (V) | Heating | | 9.0 (7.0) | |
| COP | Heating | | 3.63 | |
| External finish | | | Munsell 5Y 8/1 | |
| Power supply | | V, phase, Hz | 208/230, 1, 60 | |
| Max. fuse size (time delay) | | A | 20 | |
| Min. circuit ampacity | | A | 15 | |
| Fan motor | | F.L.A | 0.96 | |
| Compressor | Model | | MXZ-2A20NA | SNB130FPDH1 |
| | | | MXZ-2A20NA - [1] | SNB130FQBH1 |
| | Winding resistance (at 68°F) Ω | | MXZ-2A20NA | U-V 0.45 V-W 0.45 W-U 0.45 |
| | | | MXZ-2A20NA - [1] | U-V 0.98 V-W 0.98 W-U 0.98 |
| | | R.L.A | 10.1 | |
| | | L.R.A | 15 | |
| Refrigerant control | | | LEV | |
| Sound level | | dB(A) | 49/51 | |
| Defrost method | | | Reverse cycle | |
| Dimensions | W | in. | 33-1/16 | |
| | D | in. | 13 | |
| | H | in. | 27-15/16 | |
| Weight | | lb. | 130 | |
| Remote controller | | | Wireless type | |
| Control voltage (by built-in transformer) | | | 12-24V DC | |
| Refrigerant piping | | | Not supplied (optional parts) | |
| Valve size | Liquid | in. | 1/4 | |
| | Gas | in. | A,B:3/8 | |
| Connection method | Indoor | | Flared | |
| | Outdoor | | Flared | |
| Refrigerant charge (R410A) | | lb. | 5lb. 15oz. | |
| Refrigeration oil (Model) | | oz. | MXZ-2A20NA | 20.3 (NEO22) |
| | | | MXZ-2A20NA - [1] | 23.7 (NEO22) |

NOTE : Test conditions are based on ARI 210/240.

※1 : Rating conditions (cooling) — Indoor : 80°FDB, 67°FWB, Outdoor : 95°FDB, (75°FWB)
 (heating) — Indoor : 70°FDB, 60°FWB, Outdoor : 47°FDB, 43°FWB
 ※2 : (heating) — Indoor : 70°FDB, 60°FWB, Outdoor : 17°FDB, 15°FWB
 ※3 : (cooling) — Indoor : 80°FDB, 67°FWB, Outdoor : 82°FDB, 65°FWB

Unit: °F

| Mode | Test | Indoor air condition | | Outdoor air condition | |
|---------|---|----------------------|----------|-----------------------|----------|
| | | Dry bulb | Wet bulb | Dry bulb | Wet bulb |
| Cooling | ※1: "A" Cooling steady state at rated compressor speed | 80 | 67 | 95 | (75) |
| | ※3: "B-2" Cooling steady state at rated compressor speed | 80 | 67 | 82 | (65) |
| | "B-1" Cooling steady state at minimum compressor speed | 80 | 67 | 82 | (65) |
| | Low ambient cooling steady state at minimum compressor speed | 80 | 67 | 67 | (53.5) |
| | Intermediate cooling steady state at intermediate compressor speed* | 80 | 67 | 87 | (69) |
| Heating | ※1: Standard rating-heating at rated compressor speed | 70 | 60 | 47 | 43 |
| | ※2: Low temperature heating at rated compressor speed | 70 | 60 | 17 | 15 |
| | Max. temperature heating at minimum compressor speed | 70 | 60 | 62 | 56.5 |
| | High temperature heating at minimum compressor speed | 70 | 60 | 47 | 43 |
| | Frost accumulation at rated compressor speed | 70 | 60 | 35 | 33 |
| | Frost accumulation at intermediate compressor speed* | 70 | 60 | 35 | 33 |

*At intermediate compressor speed

=("Cooling rated compressor speed" - "minimum compressor speed") / 3 + "minimum compressor speed".

| Item | | Model | MXZ-3A30NA MXZ-3A30NA - ¹ | |
|---|--------------------------------|--------------|--------------------------------------|-----|
| Capacity | Cooling ^{Ⓐ1} | Btu/h | 28,400/ (12,600 ~ 28,400) | |
| | Heating 47 ^{Ⓐ1} | Btu/h | 28,600/ (11,400 ~ 36,000) | |
| | Heating 17 ^{Ⓐ2} | Btu/h | 18,800 | |
| Power consumption | Cooling ^{Ⓐ1} | W | 3,250/ (1,000 ~ 3,250) | |
| | Heating 47 ^{Ⓐ1} | W | 2,180/ (740 ~ 2,880) | |
| | Heating 17 ^{Ⓐ2} | W | 2,120 | |
| EER ^{Ⓐ1} [SEER] ^{Ⓐ3} | Cooling | | 8.7 [16.0] | |
| HSPF IV (V) | Heating | | 10.0 (7.5) | |
| COP | Heating | | 3.84 | |
| External finish | | | Munsell 3.0Y 7.8/1.1 | |
| Power supply | | V, phase, Hz | 208/230, 1, 60 | |
| Max. fuse size (time delay) | | A | 20 | |
| Min. circuit ampacity | | A | 15 | |
| Fan motor | | F.L.A | 0.93 | |
| Compressor | Model | | TNB220FMCH | |
| | Winding resistance (at 68°F) Ω | | U-V 0.61 V-W 0.61 W-U 0.61 | |
| | | R.L.A | 11 | |
| | | L.R.A | 15 | |
| Refrigerant control | | | LEV | |
| Sound level | | dB(A) | 49/49 | |
| Defrost method | | | Reverse cycle | |
| Dimensions | W | in. | 35-7/16 | |
| | D | in. | 12-19/32 | |
| | H | in. | 35-7/16 | |
| Weight | lb. | | MXZ-3A30NA | 158 |
| | | | MXZ-3A30NA - ¹ | 148 |
| Remote controller | | | Wireless type | |
| Control voltage (by built-in transformer) | | | 12-24V DC | |
| Refrigerant piping | | | Not supplied (optional parts) | |
| Valve size | Liquid | in. | 1/4 | |
| | Gas | in. | A:1/2 B,C:3/8 | |
| Connection method | Indoor | | Flared | |
| | Outdoor | | Flared | |
| Refrigerant charge (R410A) | | lb. | 7lb. 11oz. | |
| Refrigeration oil (Model) | | oz. | 29.4 (NEO22) | |

NOTE : Test conditions are based on ARI 210/240.

- *1 : Rating conditions (cooling) — Indoor : 80°FDB, 67°FWB, Outdoor : 95°FDB, (75°FWB)
 (heating) — Indoor : 70°FDB, 60°FWB, Outdoor : 47°FDB, 43°FWB
 *2 : (heating) — Indoor : 70°FDB, 60°FWB, Outdoor : 17°FDB, 15°FWB
 *3 : (cooling) — Indoor : 80°FDB, 67°FWB, Outdoor : 82°FDB, 65°FWB

Unit: °F

| Mode | Test | Indoor air condition | | Outdoor air condition | |
|---------|---|----------------------|----------|-----------------------|----------|
| | | Dry bulb | Wet bulb | Dry bulb | Wet bulb |
| Cooling | *1: "A" Cooling steady state at rated compressor speed | 80 | 67 | 95 | (75) |
| | *3: "B-2" Cooling steady state at rated compressor speed | 80 | 67 | 82 | (65) |
| | "B-1" Cooling steady state at minimum compressor speed | 80 | 67 | 82 | (65) |
| | Low ambient cooling steady state at minimum compressor speed | 80 | 67 | 67 | (53.5) |
| | Intermediate cooling steady state at intermediate compressor speed* | 80 | 67 | 87 | (69) |
| Heating | *1: Standard rating-heating at rated compressor speed | 70 | 60 | 47 | 43 |
| | *2: Low temperature heating at rated compressor speed | 70 | 60 | 17 | 15 |
| | Max. temperature heating at minimum compressor speed | 70 | 60 | 62 | 56.5 |
| | High temperature heating at minimum compressor speed | 70 | 60 | 47 | 43 |
| | Frost accumulation at rated compressor speed | 70 | 60 | 35 | 33 |
| | Frost accumulation at intermediate compressor speed* | 70 | 60 | 35 | 33 |

*At intermediate compressor speed

=("Cooling rated compressor speed" - "minimum compressor speed") / 3 + "minimum compressor speed".

| Item | | Model | MXZ-4A36NA | | | |
|---|--------------------------------|--------------|-------------------------------|---------------------------|------|---------------------------|
| Capacity | Cooling ※1 | Btu/h | 36,000/ (12,600 ~ 36,400) | | | |
| | Heating 47 ※1 | Btu/h | 208V | 36,000/ (11,400 ~ 41,200) | 230V | 36,000/ (11,400 ~ 43,000) |
| | Heating 17 ※2 | Btu/h | 24,600 | | | |
| Power consumption | Cooling ※1 | W | 3,820/ (1,000 ~ 3,900) | | | |
| | Heating 47 ※1 | W | 208V | 3,100/ (740 ~ 4,000) | 230V | 3,100/ (740 ~ 4,350) |
| | Heating 17 ※2 | W | 3,340 | | | |
| EER ※1 [SEER] ※3 | Cooling | | 9.4 [16.0] | | | |
| HSPF IV (V) | Heating | | 9.5 (7.0) | | | |
| COP | Heating | | 3.40 | | | |
| External finish | | | Munsell 3.0Y 7.8/1.1 | | | |
| Power supply | | V, phase, Hz | 208/230, 1, 60 | | | |
| Max. fuse size (time delay) | | A | 20 | | | |
| Min. circuit ampacity | | A | 19 | | | |
| Fan motor | | F.L.A | 0.93 | | | |
| Compressor | Model | | TNB220FMCH | | | |
| | Winding resistance (at 68°F) Ω | | U-V 0.61 V-W 0.61 W-U 0.61 | | | |
| | | R.L.A | 14.4 | | | |
| | | L.R.A | 15 | | | |
| Refrigerant control | | | LEV | | | |
| Sound level | | dB(A) | 54/57 | | | |
| Defrost method | | | Reverse cycle | | | |
| Dimensions | W | in. | 35-7/16 | | | |
| | D | in. | 12-19/32 | | | |
| | H | in. | 35-7/16 | | | |
| Weight | | lb. | 150 | | | |
| Remote controller | | | Wireless type | | | |
| Control voltage (by built-in transformer) | | | 12-24V DC | | | |
| Refrigerant piping | | | Not supplied (optional parts) | | | |
| Valve size | Liquid | in. | 1/4 | | | |
| | Gas | in. | A:1/2 B,C,D:3/8 | | | |
| Connection method | Indoor | | Flared | | | |
| | Outdoor | | Flared | | | |
| Refrigerant charge (R410A) | | lb. | 8lb. 13oz. | | | |
| Refrigeration oil (Model) | | oz. | 29.4 (NEO22) | | | |

NOTE : Test conditions are based on ARI 210/240.

- ※1 : Rating conditions (cooling) — Indoor : 80°FDB, 67°FWB, Outdoor : 95°FDB, (75°FWB)
 (heating) — Indoor : 70°FDB, 60°FWB, Outdoor : 47°FDB, 43°FWB
 ※2 : (heating) — Indoor : 70°FDB, 60°FWB, Outdoor : 17°FDB, 15°FWB
 ※3 : (cooling) — Indoor : 80°FDB, 67°FWB, Outdoor : 82°FDB, 65°FWB

Unit: °F

| Mode | Test | Indoor air condition | | Outdoor air condition | |
|---------|---|----------------------|----------|-----------------------|----------|
| | | Dry bulb | Wet bulb | Dry bulb | Wet bulb |
| Cooling | ※1: "A" Cooling steady state at rated compressor speed | 80 | 67 | 95 | (75) |
| | ※3: "B-2" Cooling steady state at rated compressor speed | 80 | 67 | 82 | (65) |
| | "B-1" Cooling steady state at minimum compressor speed | 80 | 67 | 82 | (65) |
| | Low ambient cooling steady state at minimum compressor speed | 80 | 67 | 67 | (53.5) |
| | Intermediate cooling steady state at intermediate compressor speed※ | 80 | 67 | 87 | (69) |
| Heating | ※1: Standard rating-heating at rated compressor speed | 70 | 60 | 47 | 43 |
| | ※2: Low temperature heating at rated compressor speed | 70 | 60 | 17 | 15 |
| | Max. temperature heating at minimum compressor speed | 70 | 60 | 62 | 56.5 |
| | High temperature heating at minimum compressor speed | 70 | 60 | 47 | 43 |
| | Frost accumulation at rated compressor speed | 70 | 60 | 35 | 33 |
| | Frost accumulation at intermediate compressor speed※ | 70 | 60 | 35 | 33 |






※At intermediate compressor speed

=("Cooling rated compressor speed" - "minimum compressor speed") / 3 + "minimum compressor speed".

MXZ-2A20NA MXZ-2A20NA - 1

Unit: inch


REQUIRED SPACE

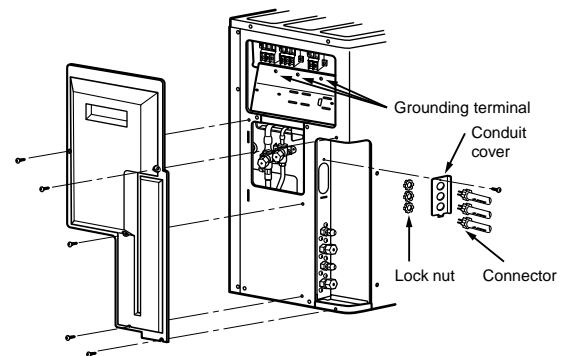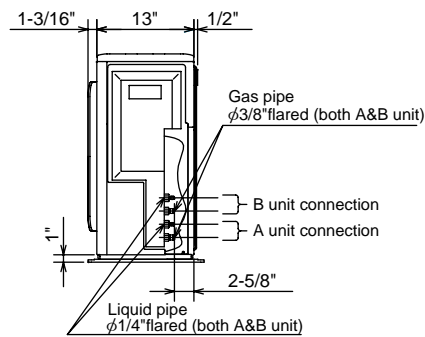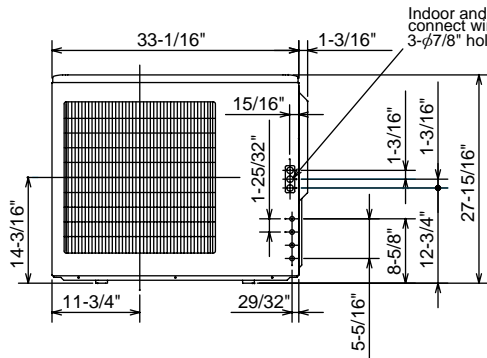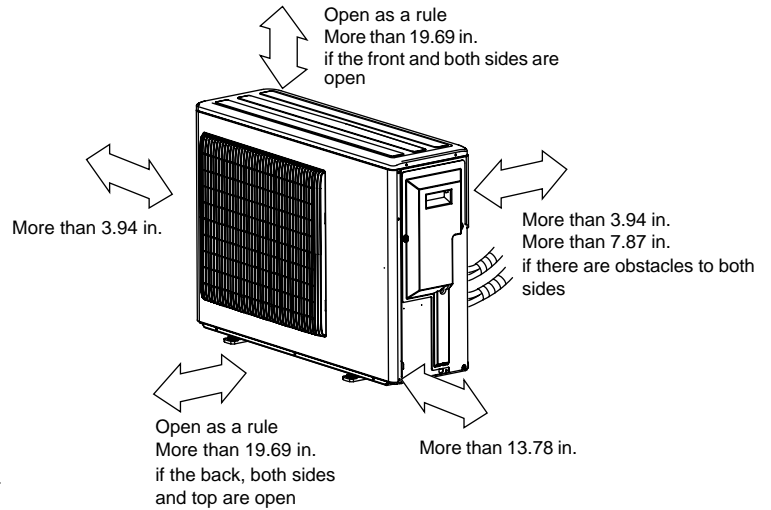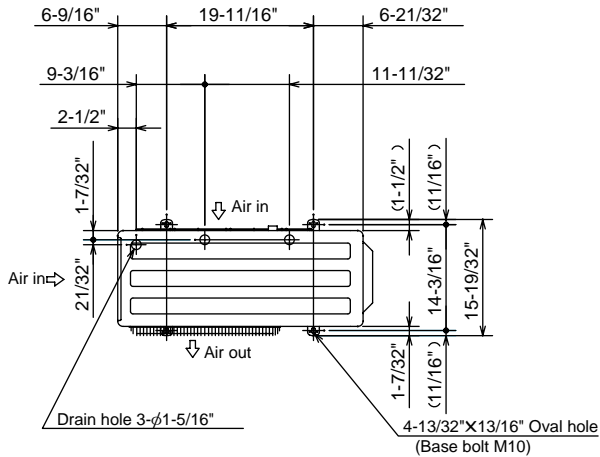

MXZ-3A30NA


Unit: inch

REQUIRED SPACE

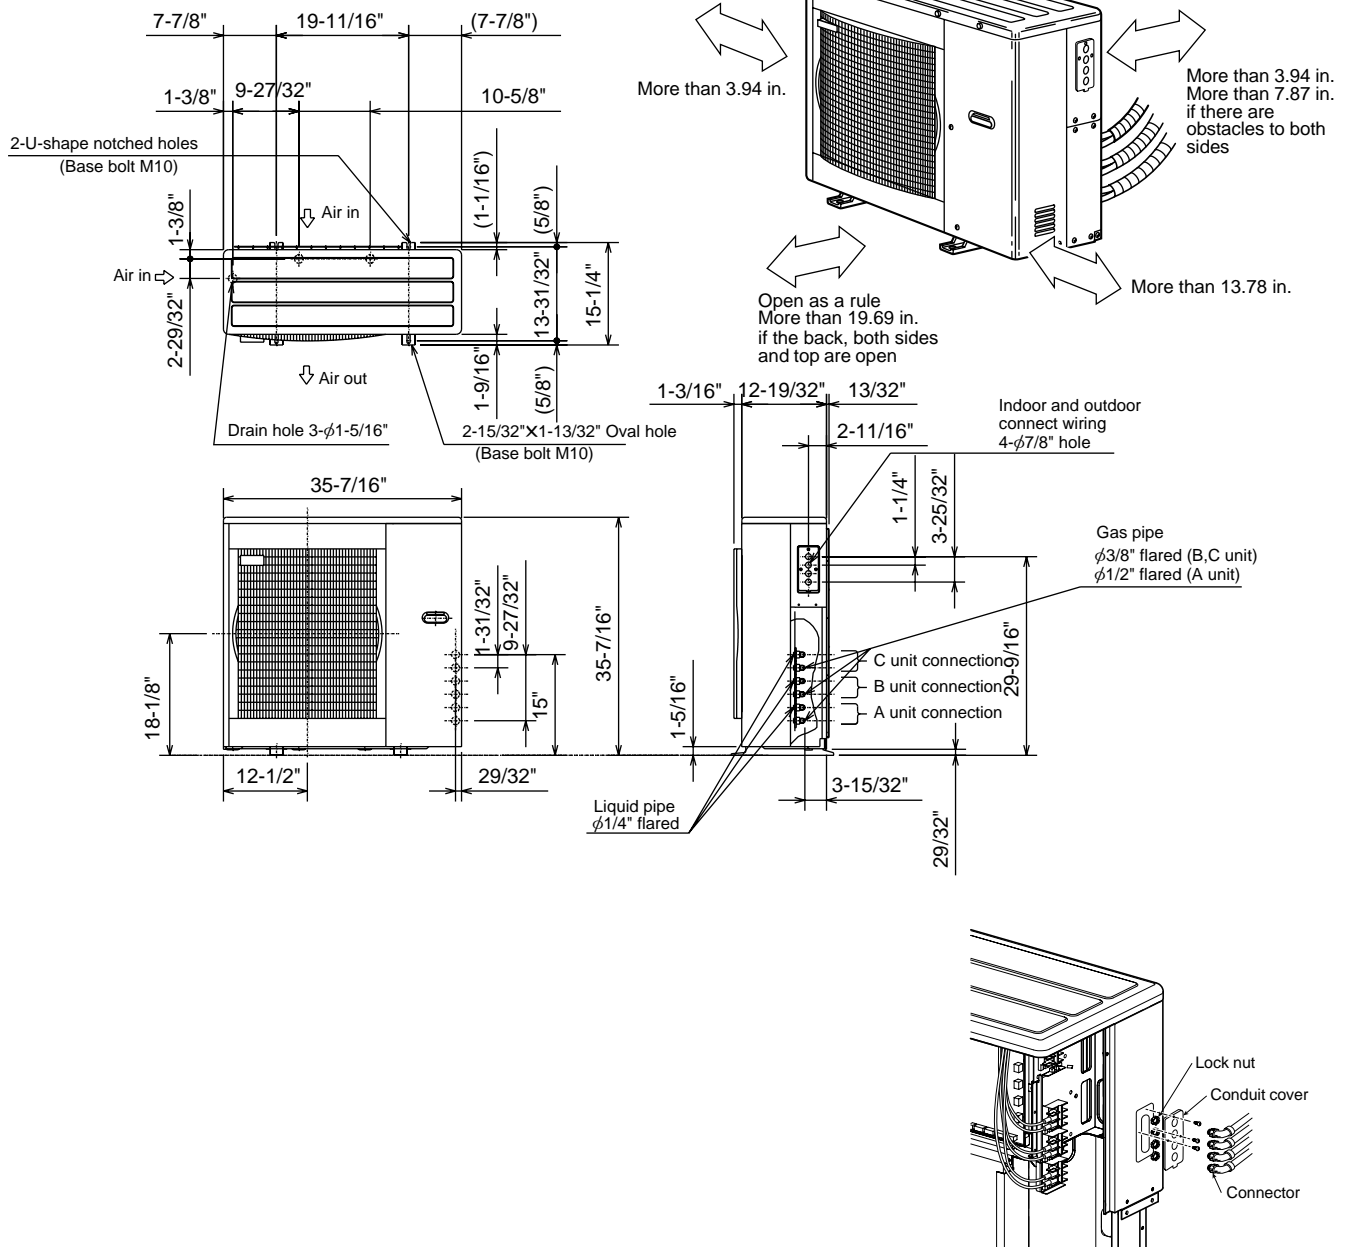


| |
|--|
| |
|--|

| |
|--|
| |
|--|

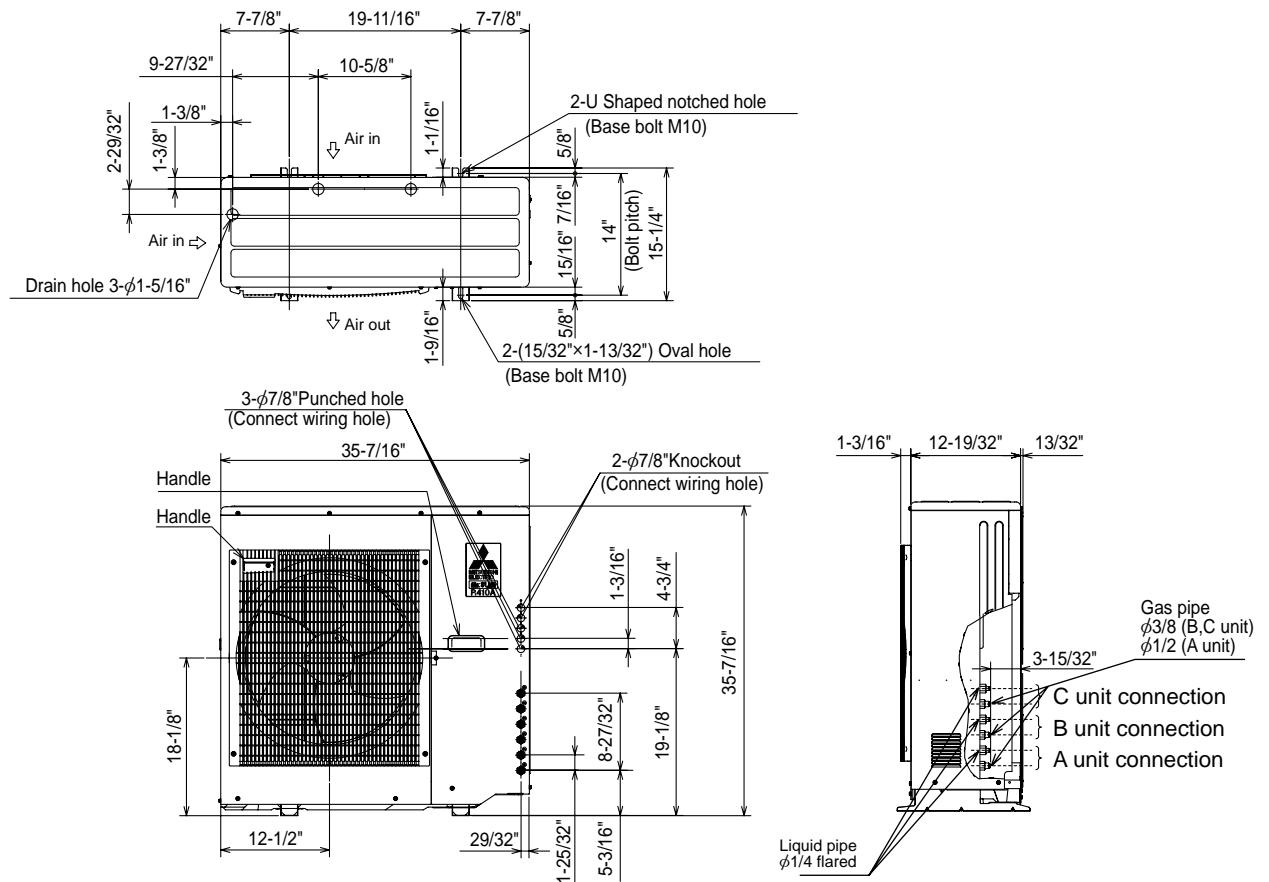


1.Installation space



Note : Leave front and both sides clearance fully.

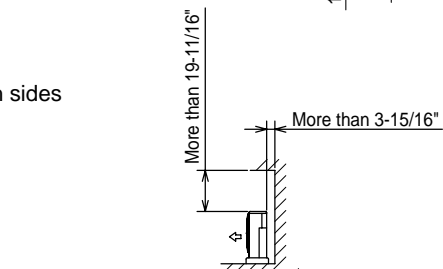


Note : Leave front and overhead clearance fully.

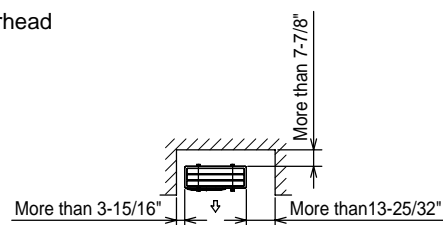


Note : Leave front, overhead and both sides clearance fully.

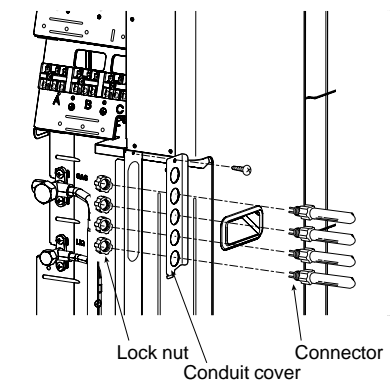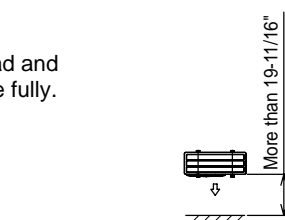

2. Service space

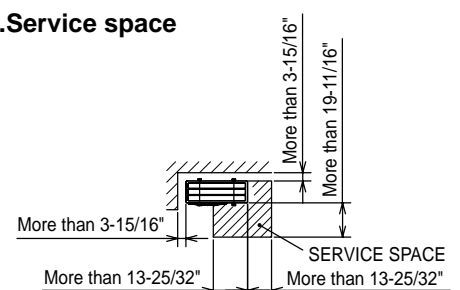


Unit: inch

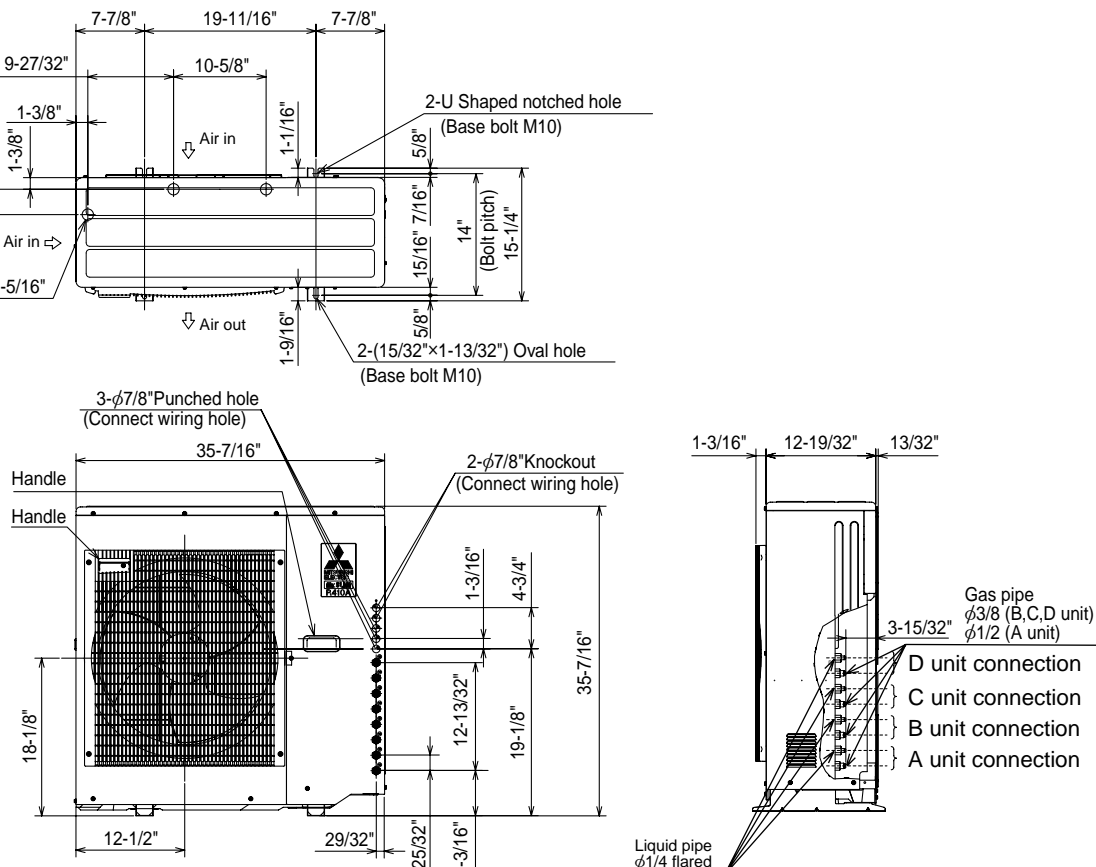


1.Installation space



Note : Leave front and both sides clearance fully.

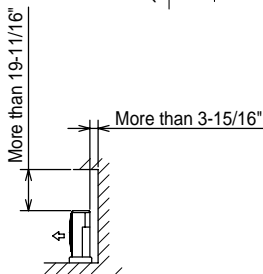


Note : Leave front and overhead clearance fully.

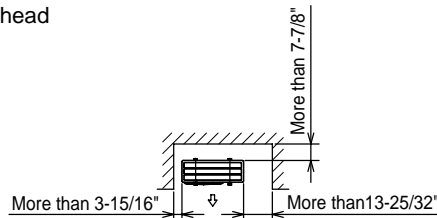


Note : Leave front, overhead and both sides clearance fully.

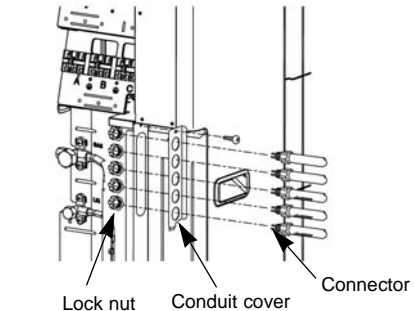


2. Service space

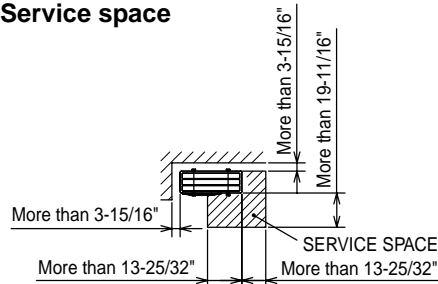


MXZ-2A20NA

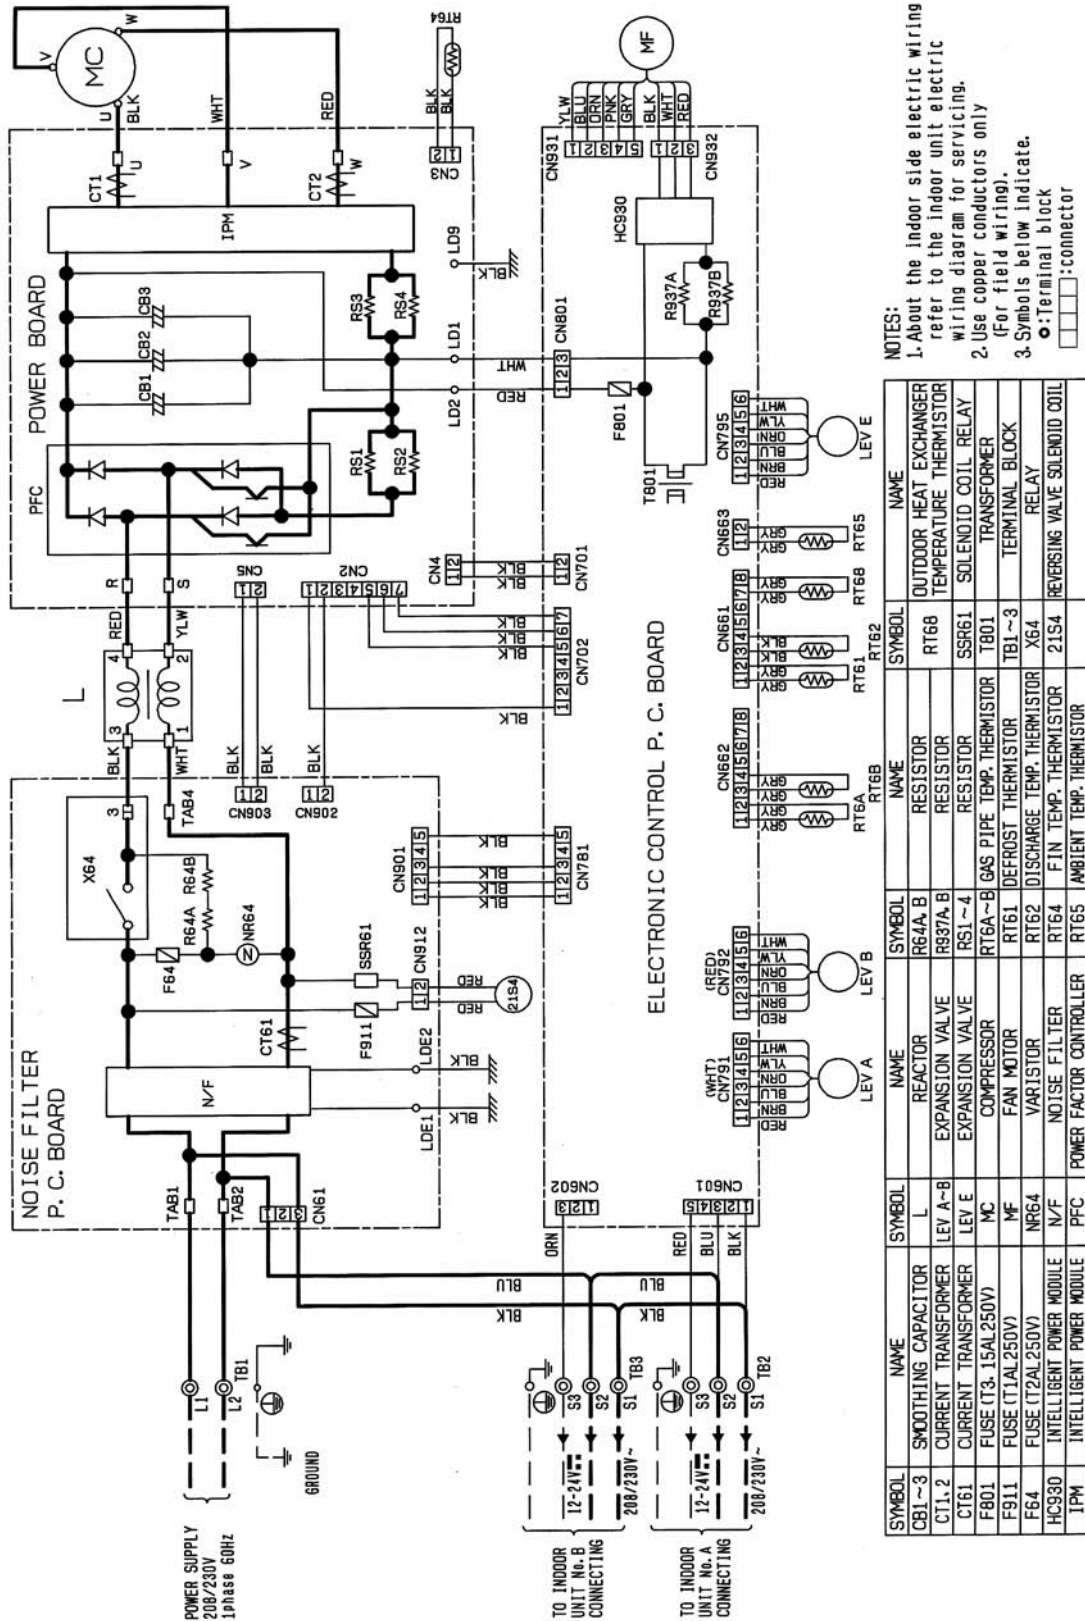


MXZ-2A20NA - 1

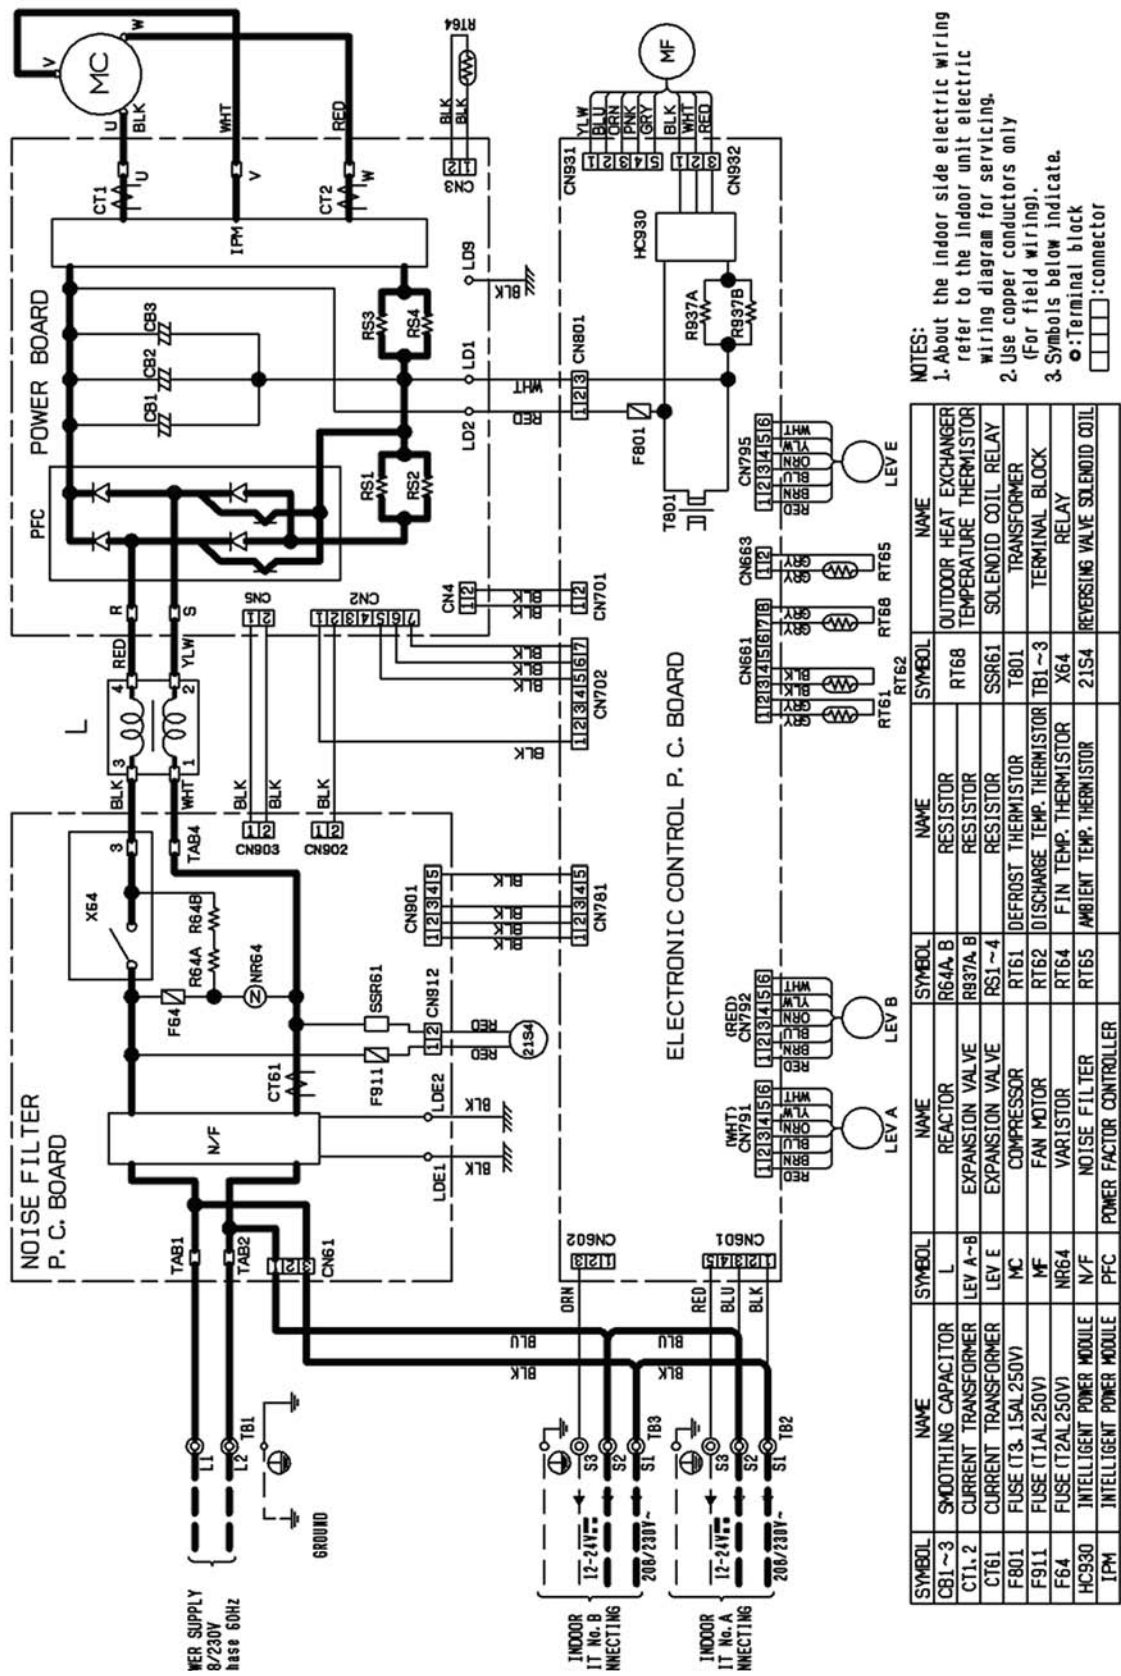

MXZ-3A30NA

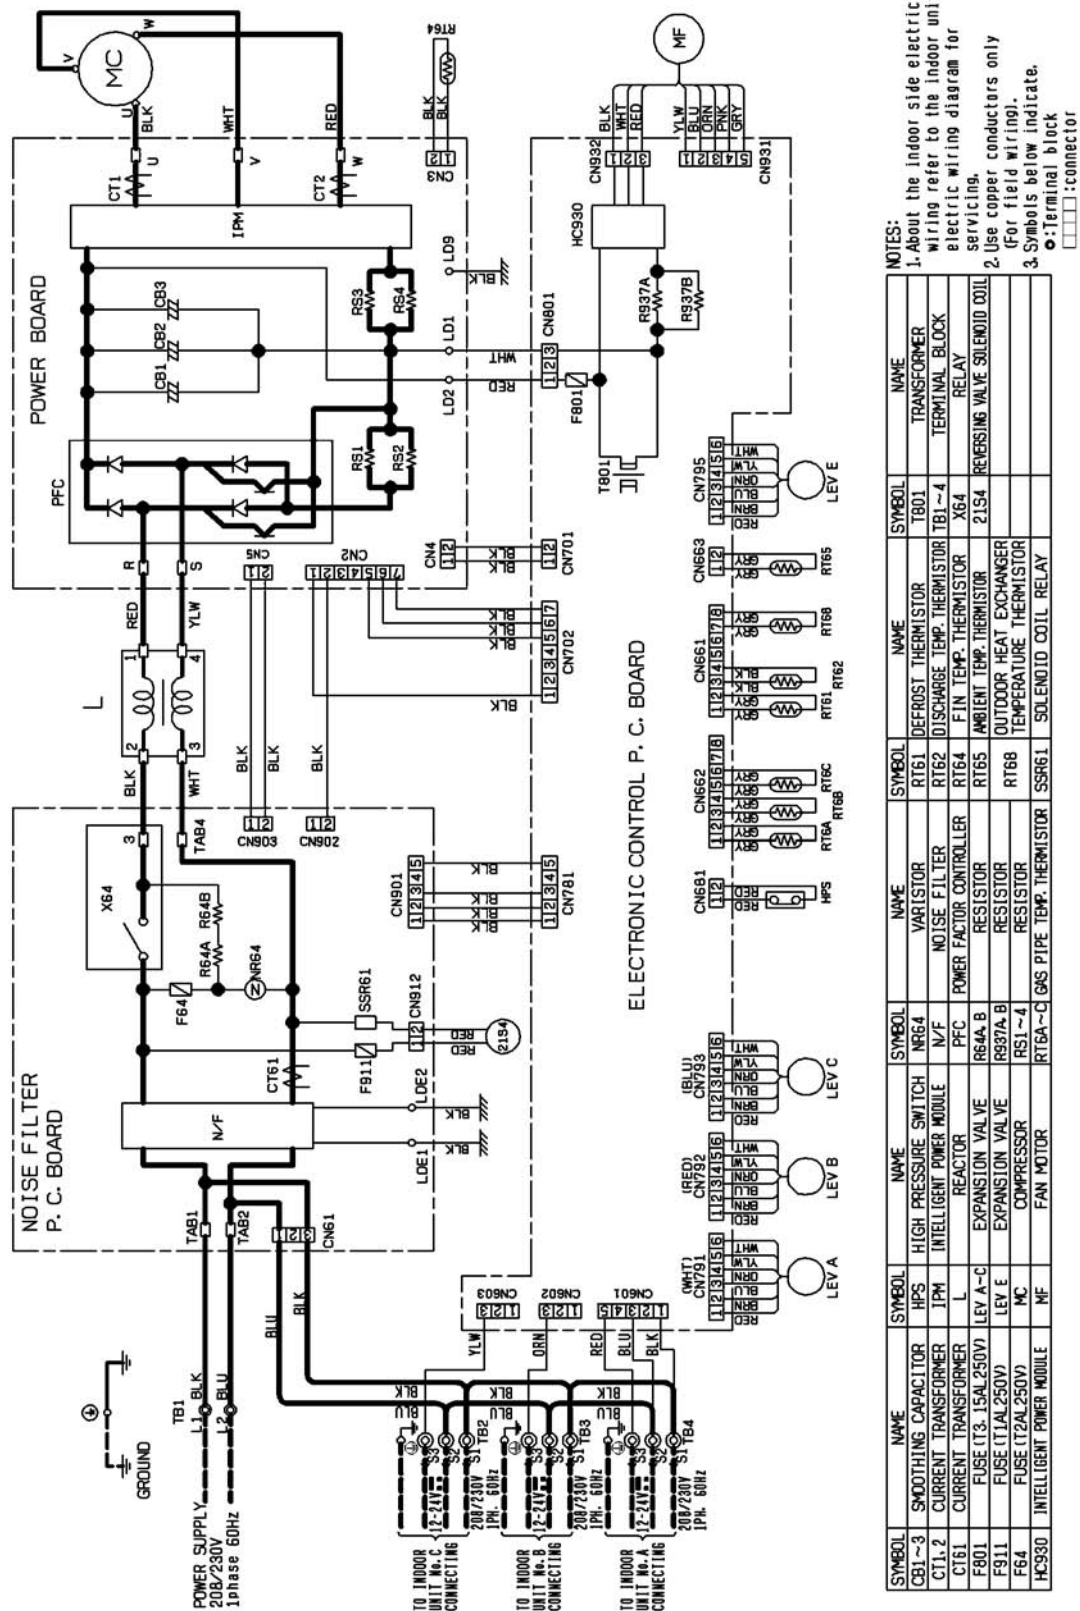


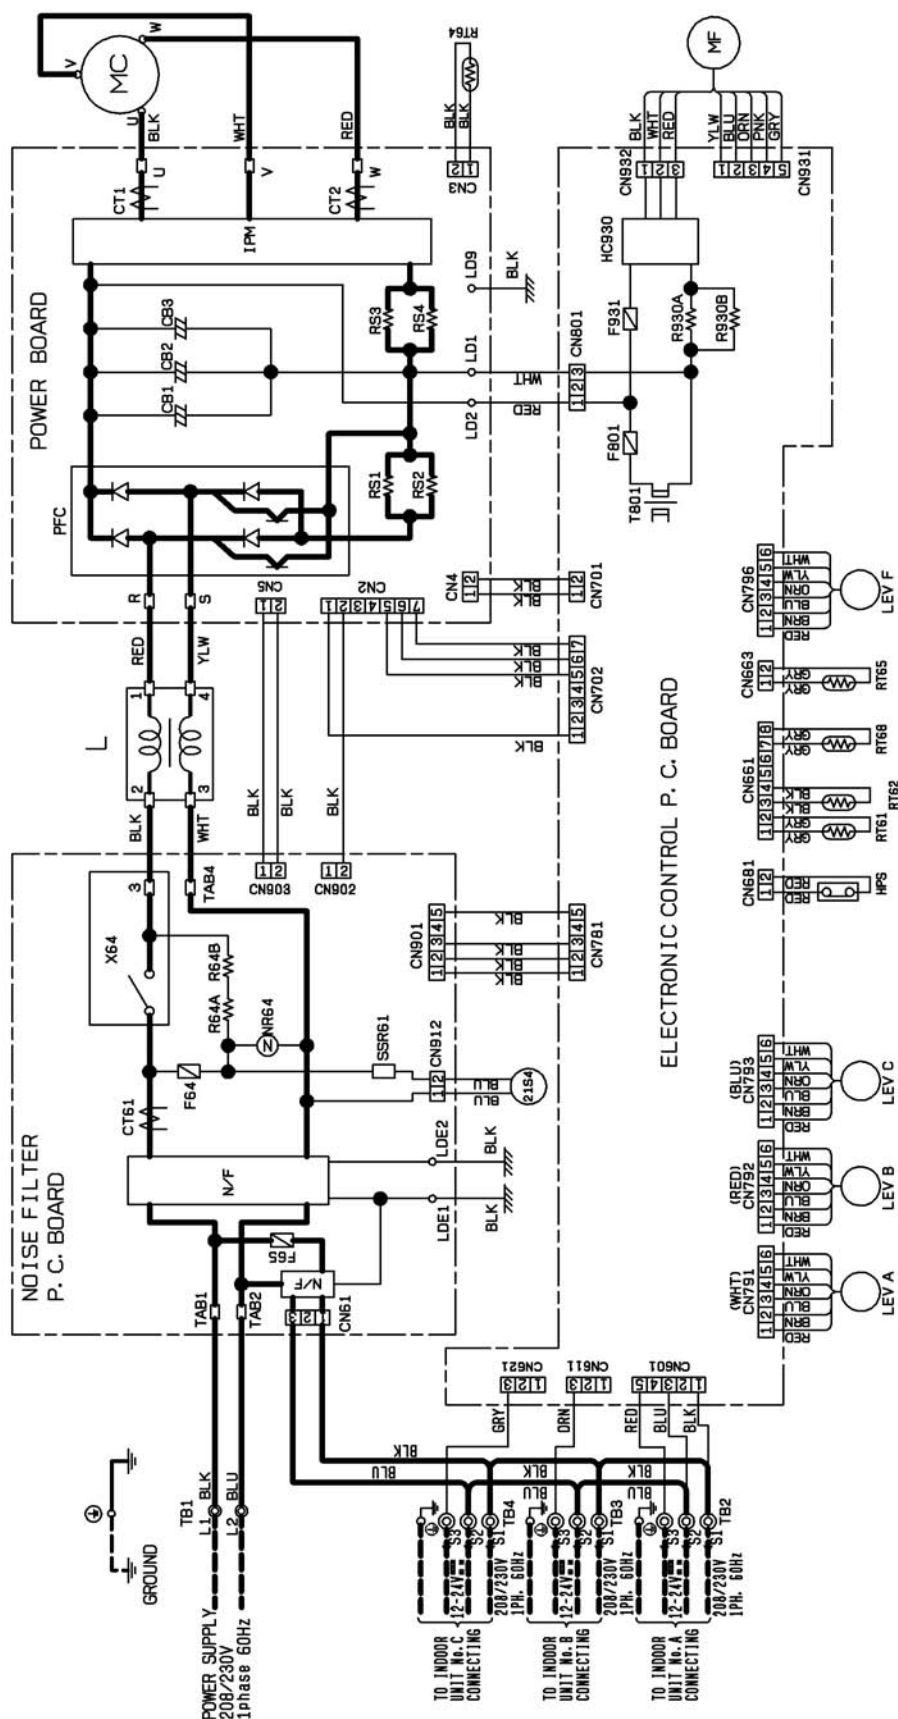

- NOTES:**
1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for servicing.
 2. Use copper conductors only (for field wiring).
 3. Symbols below indicate.
○ Terminal block
□ □ □ □ : connector

| SYMBOL | NAME | SYMBOL | NAME | SYMBOL | NAME | SYMBOL | NAME | SYMBOL | NAME | SYMBOL | NAME |
|---------|----------------------|---------|--------------------------|----------|-------------------------|--------|----------------------------|--------|------|---------|-------------------------------|
| CB1 ~ 3 | SMOOTHING CAPACITOR | HC930 | INTELLIGENT POWER MODULE | MF | FAN MOTOR | RT61 | DEFROST THERMISTOR | | | | |
| CT1.2 | CURRENT TRANSFORMER | HPS | HIGH PRESSURE SWITCH | NR64 | VARIABLE | RT62 | DISCHARGE TEMP. THERMISTOR | | | T801 | TRANSFORMER |
| CT61 | CURRENT TRANSFORMER | IPM | INTELLIGENT POWER MODULE | N/F | NOISE FILTER | RT64 | FAN TEMP. THERMISTOR | | | T81 ~ 4 | TERMINAL BLOCK |
| F64 | FUSE (T2AL 250V) | L | REACTOR | P/C | POWER FACTOR CONTROLLER | RT65 | AMBIENT TEMP. THERMISTOR | | | X64 | RELAY |
| F65 | FUSE (T6. 3AL 250V) | LEV A~C | EXPANSION VALVE | R64A, B | RESISTOR | RT68 | OUTDOOR HEAT EXCHANGER | | | 21S4 | REVERSING VALVE SOLENOID COIL |
| F801 | FUSE (T3. 15AL 250V) | LEV F | EXPANSION VALVE | R930A, B | RESISTOR | | TEMPERATURE THERMISTOR | | | | |
| F931 | FUSE (T3. 15AL 250V) | MC | COMPRESSOR | RS1 ~ 4 | RESISTOR | SSR61 | SOLENOID COIL RELAY | | | | |


| |
|--|
| |
|--|

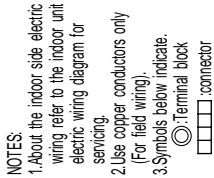

| S'YMBOL | NAME | S'YMBOL | NAME | S'YMBOL | NAME | S'YMBOL | NAME | S'YMBOL | NAME | S'YMBOL | NAME |
|---------|---------------------|---------|--------------------------|---------|-------------------------|---------|---------------------------|---------|-------------------------------|---------|-------------|
| CB1-3 | SMOOTHING CAPACITOR | HQ930 | INTELLIGENT POWER MODULE | MF | FAN MOTOR | RT61 | DEFROST THERMISTOR | | | | TRANSFORMER |
| CT1.2 | CURRENT TRANSFORMER | HPS | HIGH PRESSURE SWITCH | NR64 | VARIABLE | RT62 | DISCHARGE TEMP THERMISTOR | TB1-5 | TERMINAL BLOCK | | |
| CT61 | CURRENT TRANSFORMER | IPM | INTELLIGENT POWER MODULE | N/F | NOISE FILTER | RT64 | FAN TEMP THERMISTOR | X64 | RELAY | | |
| F64 | FUSE (T2AL250V) | L | REACTOR | PFC | POWER FACTOR CONTROLLER | RT65 | AMBIENT TEMP THERMISTOR | 21S4 | REVERSING VALVE SOLENOID COIL | | |
| F65 | FUSE (T6.3AL250V) | LEV A-D | EXPANSION VALVE | R64AB | RESISTOR | | OUTDOOR HEAT EXCHANGER | | | | |
| F61 | FUSE (T3.15AL250V) | LEV F | EXPANSION VALVE | R930A-B | RESISTOR | RT68 | TEMPERATURE THERMISTOR | | | | |
| F931 | FUSE (T3.15AL250V) | MC | COMPRESSOR | RS1-4 | RESISTOR | SSR61 | SOLENOID COIL RELAY | | | | |

MXZ-2A20NA MXZ-2A20NA - 1

Unit:mm

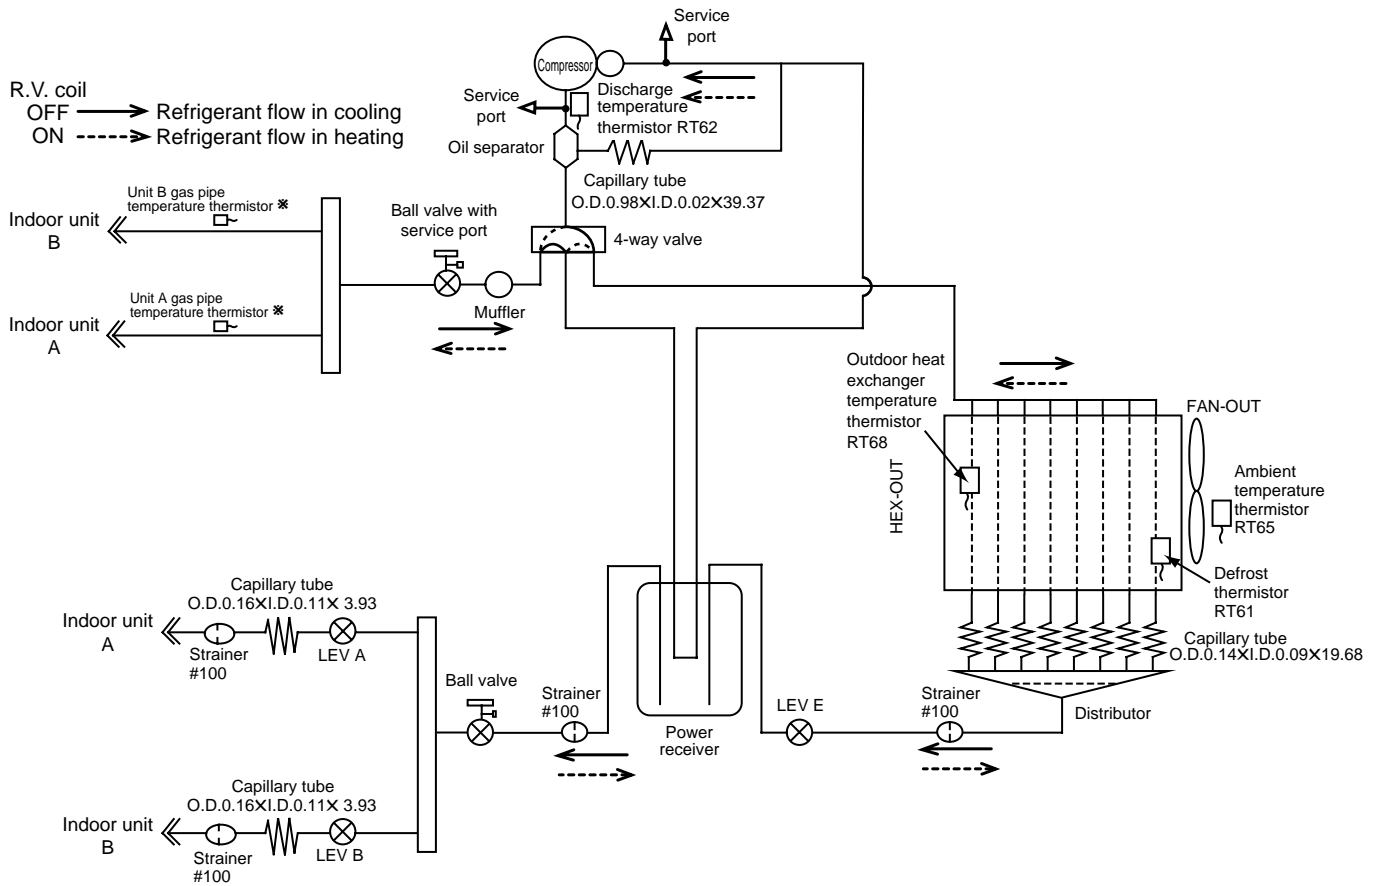

* Except MXZ-2A20NA - 1.

Operating Range MXZ-2A20NA MXZ-2A20NA - 1


| | | Indoor intake air temperature | Outdoor intake air temperature |
|---------|---------|-------------------------------|--------------------------------|
| Cooling | Maximum | 95°FDB, 71°FWB | 115°FDB |
| | Minimum | 67°FDB, 57°FWB | 14°FDB |
| Heating | Maximum | 80°FDB, 67°FWB | 75°FDB, 65°FWB |
| | Minimum | 70°FDB, 60°FWB | 14°FDB, 12°FWB |

MAX. REFRIGERANT PIPING LENGTH & PIPE SIZE SELECTION

MXZ-2A20NA MXZ-2A20NA - 1

| | |
|---------------------------------------|-------------|
| Piping length each indoor unit (a, b) | 82ft. MAX. |
| Total piping length (a+b) | 164ft. MAX. |
| Bending point for each unit | 25 MAX. |
| Total bending point | 60 MAX. |

*It does not matter which unit is higher.

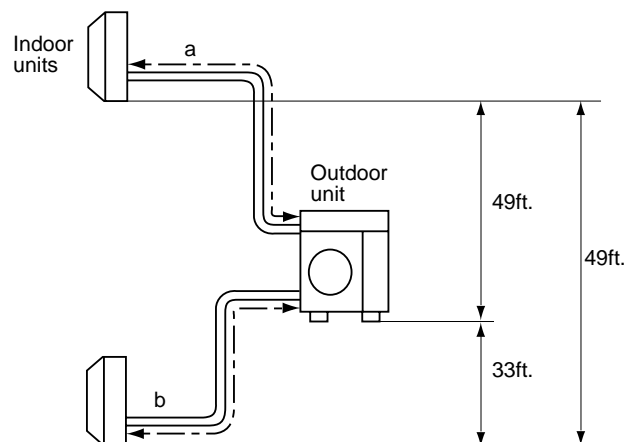

- Refrigerant pipe diameter is different according to indoor unit to be connected. When using extension pipes, refer to the tables below.
- When diameter of refrigerant pipe is different from that of outdoor unit union, use optional Different-diameter pipe. For further information on Different-diameter pipe, see 15-1.


Unit : inch

| Indoor unit | | | Extension pipe diameter | |
|-------------|---------------|-----|-------------------------|-----|
| class | Pipe diameter | | | |
| 09 | Liquid | 1/4 | Liquid | 1/4 |
| | Gas | 3/8 | Gas | 3/8 |
| 12 | Liquid | 1/4 | Liquid | 1/4 |
| | Gas | 3/8 | Gas | 3/8 |
| 15 | Liquid | 1/4 | Liquid | 1/4 |
| | Gas | 3/8 | Gas | 3/8 |

| Outdoor unit union diameter | | |
|-----------------------------|--------|-----|
| For | | |
| Indoor unit A | Liquid | 1/4 |
| | Gas | 3/8 |
| Indoor unit B | Liquid | 1/4 |
| | Gas | 3/8 |


MXZ-3A30NA

Unit:mm

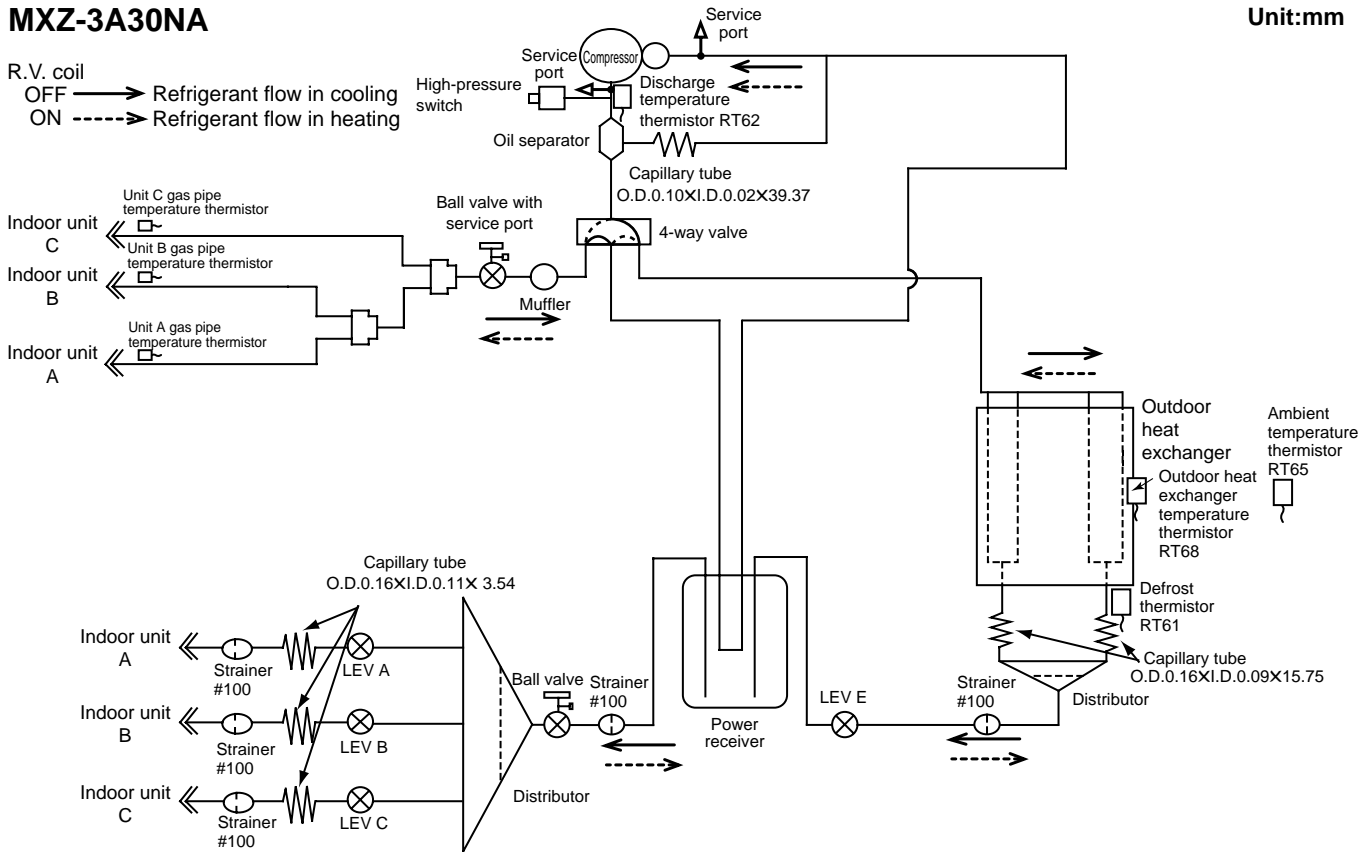

MXZ-3A30NA - 1

Unit:mm

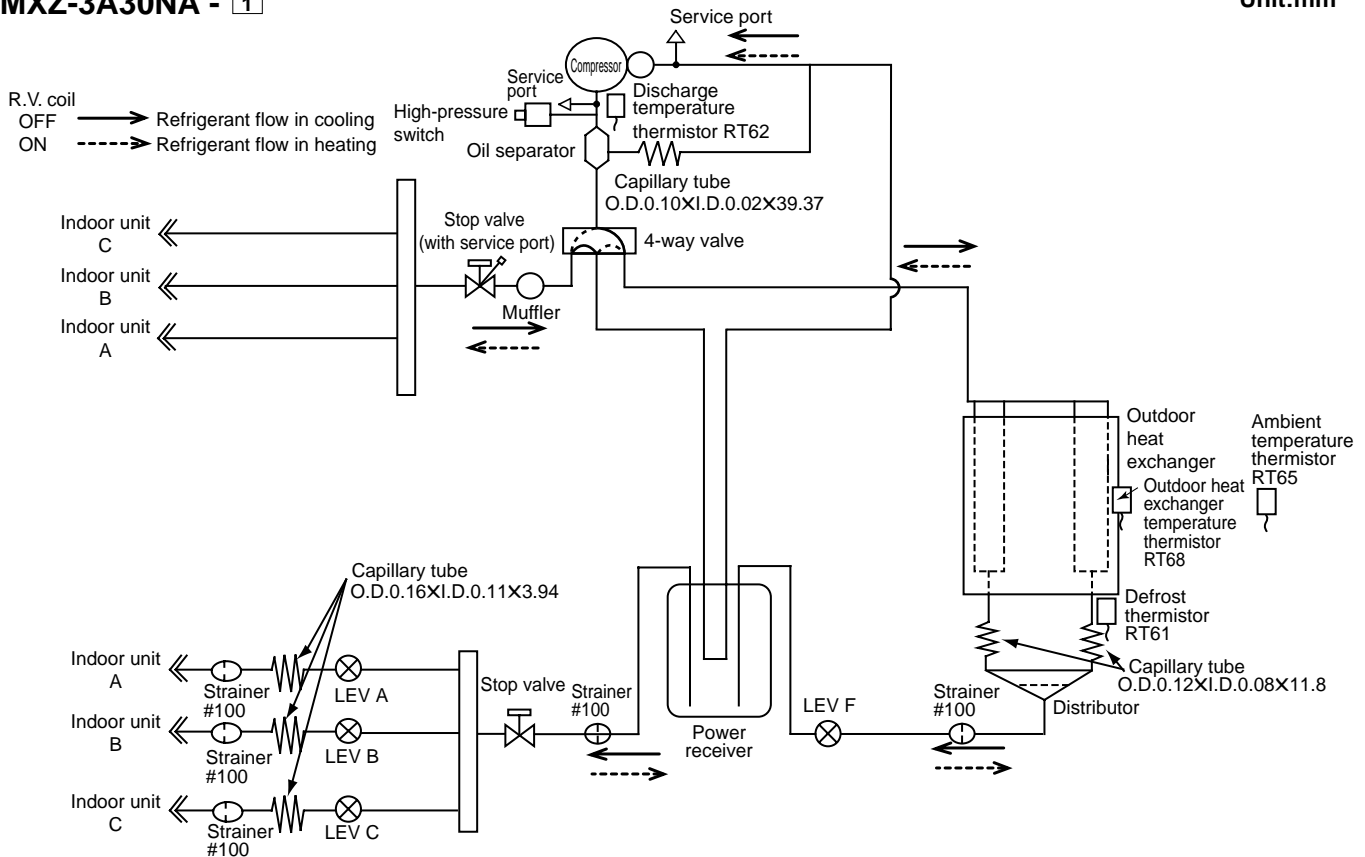

Operating Range MXZ-3A30NA MXZ-3A30NA - [1]


| | | Indoor intake air temperature | Outdoor intake air temperature |
|---------|---------|-------------------------------|--------------------------------|
| Cooling | Maximum | 95°FDB, 71°FWB | 115°FDB |
| | Minimum | 67°FDB, 57°FWB | 14°FDB |
| Heating | Maximum | 80°FDB, 67°FWB | 75°FDB, 65°FWB |
| | Minimum | 70°FDB, 60°FWB | 14°FDB, 12°FWB |

MAX. REFRIGERANT PIPING LENGTH & PIPE SIZE SELECTION

MXZ-3A30NA MXZ-3A30NA - [1]

| | |
|--|-------------|
| Piping length each indoor unit (a, b, c) | 82ft. MAX. |
| Total piping length (a+b+c) | 230ft. MAX. |
| Bending point for each unit | 25 MAX. |
| Total bending point | 70 MAX. |

*It does not matter which unit is higher.

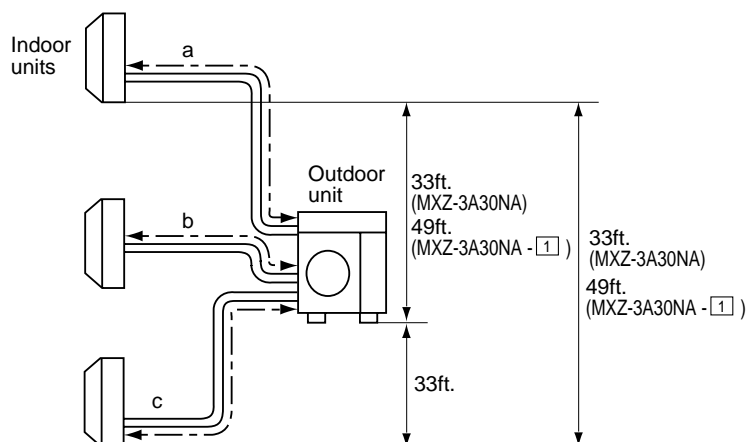

- Refrigerant pipe diameter is different according to indoor unit to be connected. When using extension pipes, refer to the tables below.
- When diameter of refrigerant pipe is different from that of outdoor unit union, use optional Different-diameter pipe. For further information on Different-diameter pipe, see 15-1.


Unit : inch

| Indoor unit | | | Extension pipe diameter | |
|-------------|---------------|-----|-------------------------|-----|
| class | Pipe diameter | | | |
| 09 | Liquid | 1/4 | Liquid | 1/4 |
| | Gas | 3/8 | Gas | 3/8 |
| 12 | Liquid | 1/4 | Liquid | 1/4 |
| | Gas | 3/8 | Gas | 3/8 |
| 15 | Liquid | 1/4 | Liquid | 1/4 |
| | Gas | 3/8 | Gas | 3/8 |
| 17 | Liquid | 1/4 | Liquid | 1/4 |
| | Gas | 1/2 | Gas | 1/2 |
| 24 | Liquid | 1/4 | Liquid | 1/4 |
| | Gas | 5/8 | Gas | 5/8 |

| Outdoor unit union diameter | | |
|-----------------------------|--------|-----|
| For | | |
| Indoor unit A | Liquid | 1/4 |
| | Gas | 1/2 |
| Indoor unit B | Liquid | 1/4 |
| | Gas | 3/8 |
| Indoor unit C | Liquid | 1/4 |
| | Gas | 3/8 |

MXZ-4A36NA

Unit:mm

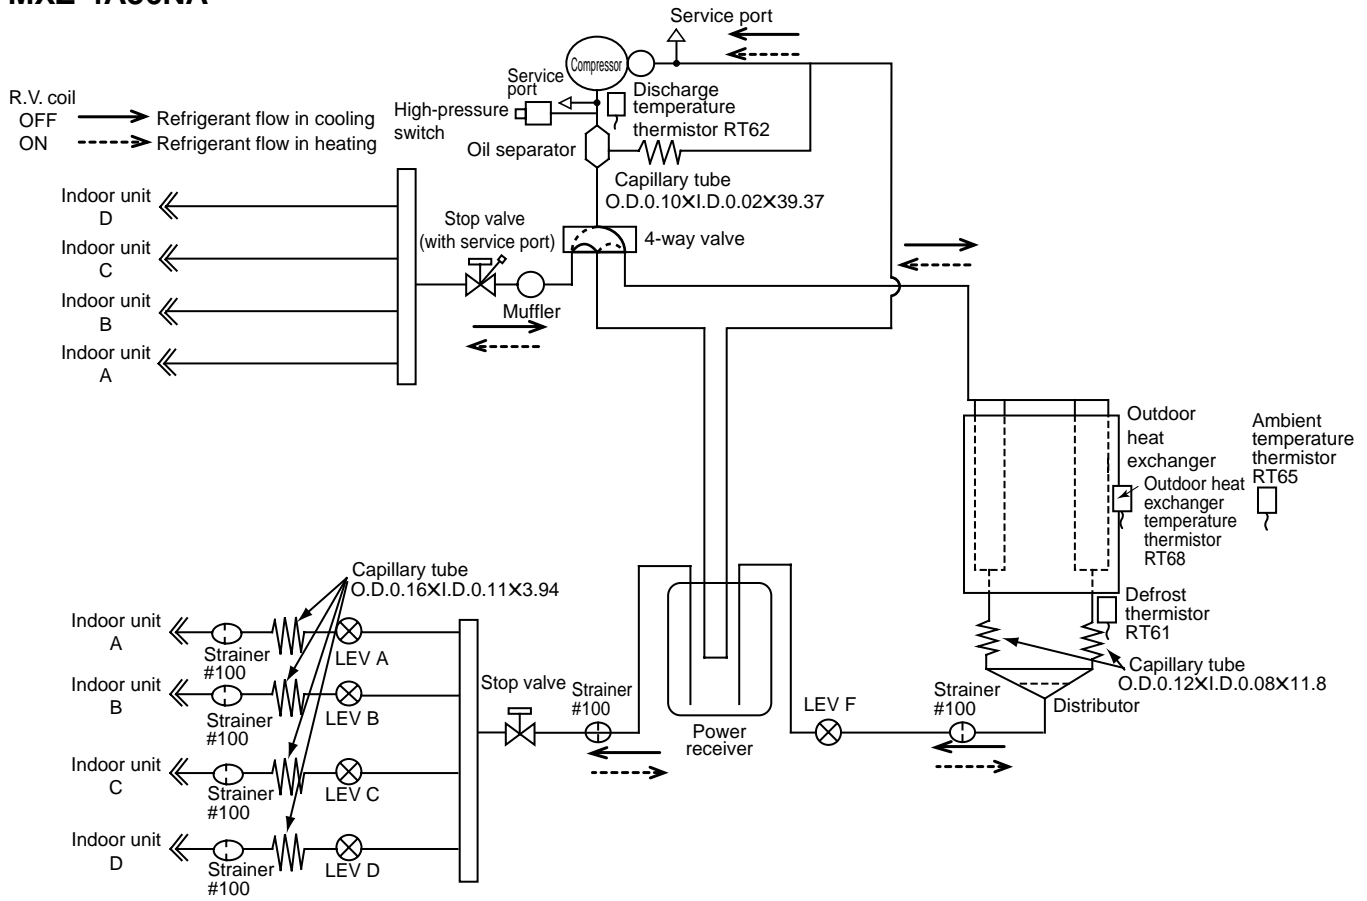


Operating Range MXZ-4A36NA

| | | Indoor intake air temperature | Outdoor intake air temperature |
|---------|---------|-------------------------------|--------------------------------|
| Cooling | Maximum | 95°FDB, 71°FWB | 115°FDB |
| | Minimum | 67°FDB, 57°FWB | 14°FDB |
| Heating | Maximum | 80°FDB, 67°FWB | 75°FDB, 65°FWB |
| | Minimum | 70°FDB, 60°FWB | 14°FDB, 12°FWB |

MAX. REFRIGERANT PIPING LENGTH & PIPE SIZE SELECTION MXZ-4A36NA

| | |
|---|-------------|
| Piping length each indoor unit (a, b, c, d) | 82ft. MAX. |
| Total piping length (a+b+c+d) | 230ft. MAX. |
| Bending point for each unit | 25 MAX. |
| Total bending point | 70 MAX. |

*It does not matter which unit is higher.

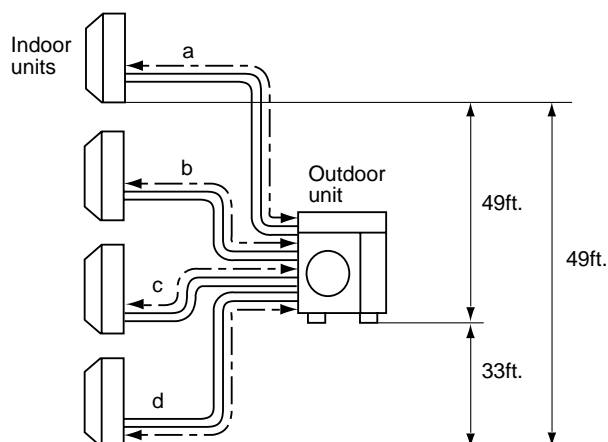

- Refrigerant pipe diameter is different according to indoor unit to be connected. When using extension pipes, refer to the tables below.
- When diameter of refrigerant pipe is different from that of outdoor unit union, use optional Different-diameter pipe. For further information on Different-diameter pipe, see 15-1.

Unit : inch

| Indoor unit | | | Extension pipe diameter | |
|-------------|---------------|-----|-------------------------|-----|
| class | Pipe diameter | | | |
| 09 | Liquid | 1/4 | Liquid | 1/4 |
| | Gas | 3/8 | Gas | 3/8 |
| 12 | Liquid | 1/4 | Liquid | 1/4 |
| | Gas | 3/8 | Gas | 3/8 |
| 15 | Liquid | 1/4 | Liquid | 1/4 |
| | Gas | 3/8 | Gas | 3/8 |
| 17 | Liquid | 1/4 | Liquid | 1/4 |
| | Gas | 1/2 | Gas | 1/2 |
| 24 | Liquid | 1/4 | Liquid | 1/4 |
| | Gas | 5/8 | Gas | 5/8 |

| Outdoor unit union diameter | | |
|-----------------------------|--------|-----|
| For | | |
| Indoor unit A | Liquid | 1/4 |
| | Gas | 1/2 |
| Indoor unit B | Liquid | 1/4 |
| | Gas | 3/8 |
| Indoor unit C | Liquid | 1/4 |
| | Gas | 3/8 |
| Indoor unit D | Liquid | 1/4 |
| | Gas | 3/8 |

| Model | | | MXZ-2A20NA MXZ-2A20NA - 1 | |
|---------------------|--|---------|---------------------------|-----------|
| Item | | Unit | Cooling | Heating |
| Total | Capacity | Btu / h | 20,000 | 22,000 |
| | SHF | — | — | — |
| | Input | kW | 2.15 | 1.78 |
| Electrical circuit | Outdoor unit | | MXZ-2A20NA MXZ-2A20NA - 1 | |
| | Power supply (V, phase, Hz) | | 208/230, 1, 60 | |
| | Input | kW | 2.113 | 1.743 |
| | Comp. current (208/230V) | A | 10.08/9.11 | 8.24/7.45 |
| | Fan motor current (208/230V) | A | 0.43/0.39 | 0.43/0.39 |
| Refrigerant circuit | Condensing pressure | PSIG | 435 | 363 |
| | Suction pressure | PSIG | 128 | 101 |
| | Discharge temperature | °F | 190 | 169 |
| | Condensing temperature | °F | 122 | 106 |
| | Suction temperature | °F | 65 | 40 |
| | Comp. shell bottom temp. | °F | 146 | 144 |
| | Ref. pipe length [Total pipe length for multi-system] | ft. | 25 [50] | |
| | Refrigerant charge (R410A) | — | 5lb.15oz. | |
| Outdoor unit | Intake air temperature | DB | °F | 95 |
| | | WB | °F | 47 |
| | Fan speed | rpm | 650 | 43 |
| | Airflow | CFM | 1,485 | 700 |
| | | | 1,485 | 1,640 |



| Model | | | MXZ-3A30NA MXZ-3A30NA - [1] | |
|---------------------|--|---------|-----------------------------|------------|
| Item | | Unit | Cooling | Heating |
| Total | Capacity | Btu / h | 28,400 | 28,600 |
| | SHF | — | — | — |
| | Input | kW | 3.25 | 2.18 |
| Electrical circuit | Outdoor unit | | MXZ-3A30NA MXZ-3A30NA - [1] | |
| | Power supply (V, phase, Hz) | | 208/230, 1, 60 | |
| | Input | kW | 3.197 | 2.127 |
| | Comp. current (208/230V) | A | 15.45/13.97 | 10.15/9.18 |
| | Fan motor current (208/230V) | A | 0.43/0.39 | 0.43/0.39 |
| Refrigerant circuit | Condensing pressure | PSIG | 506 | 330 |
| | Suction pressure | PSIG | 136 | 96 |
| | Discharge temperature | °F | 190 | 150 |
| | Condensing temperature | °F | 132 | 100 |
| | Suction temperature | °F | 48 | 30 |
| | Comp. shell bottom temp. | °F | 146 | 125 |
| | Ref. pipe length [Total pipe length for multi-system] | ft. | 25 [75] | |
| | Refrigerant charge (R410A) | — | 7lb.11oz. | |
| Outdoor unit | Intake air temperature | DB °F | 95 | 47 |
| | | WB °F | — | 43 |
| | Fan speed | rpm | 520 | 600 |
| | Airflow | CFM | 1,365 | 1,605 |



| Model | | | MXZ-4A36NA | |
|---------------------|--|---------|----------------|---------------|
| Item | | Unit | Cooling | Heating |
| Total | Capacity | Btu / h | 36,000 | 36,000 |
| | SHF | — | — | — |
| | Input | kW | 3.82 | 3.1 |
| Electrical circuit | Outdoor unit | | MXZ-4A36NA | |
| | Power supply (V, phase, Hz) | | 208/230, 1, 60 | |
| | Input | kW | 3.756 | 3.036 |
| | Comp. current (208/230V) | A | 17.85 / 16.14 | 14.36 / 12.98 |
| | Fan motor current (208/230V) | A | 0.43 / 0.39 | 0.43 / 0.39 |
| Refrigerant circuit | Condensing pressure | PSIG | 458 | 338 |
| | Suction pressure | PSIG | 136 | 93 |
| | Discharge temperature | °F | 194 | 158 |
| | Condensing temperature | °F | 125 | 100 |
| | Suction temperature | °F | 62 | 44 |
| | Comp. shell bottom temp. | °F | 180 | 140 |
| | Ref. pipe length [Total pipe length for multi-system] | ft. | 25 [100] | |
| | Refrigerant charge (R410A) | — | 8lb.13oz. | |
| Outdoor unit | Intake air temperature | DB | °F | 95 |
| | | WB | °F | 47 |
| | Fan speed | rpm | 750 | 43 |
| | Airflow | CFM | 2,068 | 750 |

8-1. OPERATING RANGE

(1) POWER SUPPLY

| | Model | Rating | Guaranteed Voltage |
|--------------|--|------------------------|--|
| Outdoor unit | MXZ-2A20NA MXZ-2A20NA - ① MXZ-3A30NA MXZ-3A30NA - ① MXZ-4A36NA | 208/230V 60Hz 1 ϕ | Min. 198V 208V 230V Max. 253V ----- ----- ----- ----- ----- |

(2) OPERATION

| Function | Intake air temperature Condition | Indoor | | Outdoor | |
|----------|---|---------|---------|---------|---------|
| | | DB (°F) | WB (°F) | DB (°F) | WB (°F) |
| Cooling | "A" Cooling steady state at rated compressor speed | 80 | 67 | 95 | (75) |
| | "B-2" Cooling steady state at rated compressor speed | 80 | 67 | 82 | (65) |
| | "B-1" Cooling steady state at minimum compressor speed | 80 | 67 | 82 | (65) |
| | Low ambient cooling steady state at minimum compressor speed | 80 | 67 | 67 | (53.5) |
| | Intermediate cooling steady state at intermediate compressor speed* | 80 | 67 | 87 | (69) |
| Heating | Standard rating-heating at rated compressor speed | 70 | 60 | 47 | 43 |
| | Low temperature heating at rated compressor speed | 70 | 60 | 17 | 15 |
| | Max. temperature heating at minimum compressor speed | 70 | 60 | 62 | 56.5 |
| | High temperature heating at minimum compressor speed | 70 | 60 | 47 | 43 |
| | Frost accumulation at rated compressor speed | 70 | 60 | 35 | 33 |
| | Frost accumulation at intermediate compressor speed* | 70 | 60 | 35 | 33 |

*At intermediate compressor speed

=("Cooling rated compressor speed" - "minimum compressor speed") / 3 + "minimum compressor speed".

MXZ-2A20NA MXZ-2A20NA - 1 MXZ-3A30NA MXZ-3A30NA - 1 MXZ-4A36NA

The standard specifications apply only to the operation of the air conditioner under normal conditions.

Since operating conditions vary according to the areas where these units are installed, the following information has been provided to clarify the operating characteristics of the air conditioner under the conditions indicated by the performance curve.

(1) GUARANTEED VOLTAGE

198 ~ 253V 60Hz

(2) AIR FLOW

Air flow should be set at MAX.


(3) MAIN READINGS

| | | |
|---|------|-----------|
| (1) Indoor intake air wet-bulb temperature : | °FWB | } Cooling |
| (2) Indoor outlet air wet-bulb temperature : | °FWB | |
| (3) Outdoor intake air dry-bulb temperature : | °FDB | |
| (4) Total input : | W | |
| (5) Indoor intake air dry-bulb temperature : | °FDB | } Heating |
| (6) Outdoor intake air wet-bulb temperature : | °FWB | |
| (7) Total input : | W | |

Indoor air wet/dry-bulb temperature difference on the left side of the following chart shows the difference between the indoor intake air wet/dry-bulb temperature and the indoor outlet air wet/dry-bulb temperature for your reference at service.


How to measure the indoor air wet-bulb/dry-bulb temperature difference

1. Attach at least 2 sets of wet-and dry-bulb thermometers to the indoor air intake as shown in the figure, and at least 2 sets of wet-and dry-bulb thermometers to the indoor air outlet. The thermometers must be attached to the position where air speed is high.
2. Attach at least 2 sets of wet-and dry-bulb thermometers to the outdoor air intake.
Cover the thermometers to prevent direct rays of the sun.
3. Check that the air filter is cleaned.
4. Open windows and doors of room.
5. Press the EMERGENCY OPERATION switch once(twice) to start the EMERGENCY COOL(HEAT) MODE.
6. Compressor starts running at 33Hz (COOL) or 45Hz (HEAT). The frequency at each operation mode is fixed.
7. When system stabilizes after more than 15 minutes, measure temperature and take an average temperature.
8. 10 minutes later, measure temperature again and check that the temperature does not change.

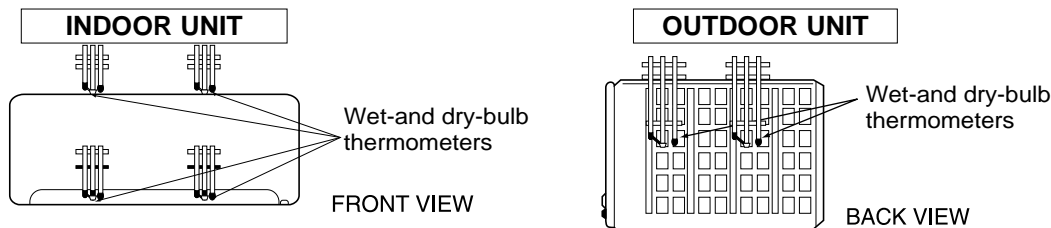


8-2. CAPACITY AND THE INPUT CURVES

MXZ-2A20NA MXZ-2A20NA - 1

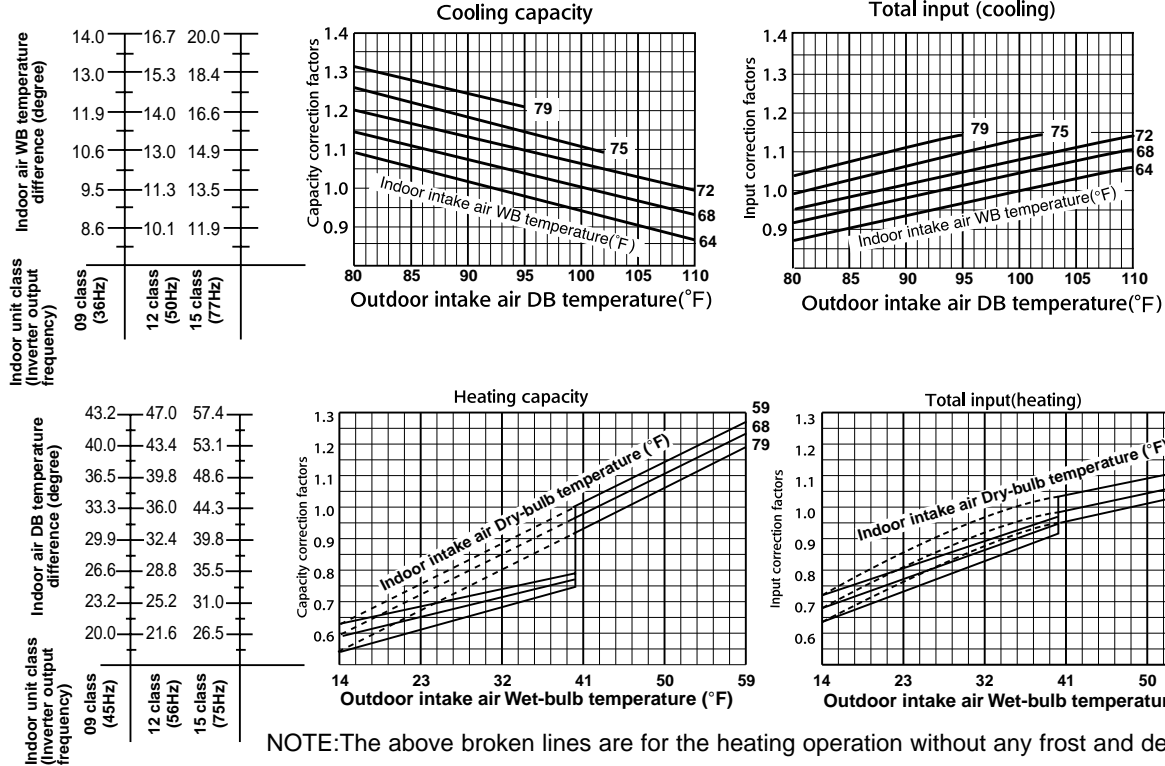


MXZ-3A30NA MXZ-3A30NA - 1 MXZ-4A36NA

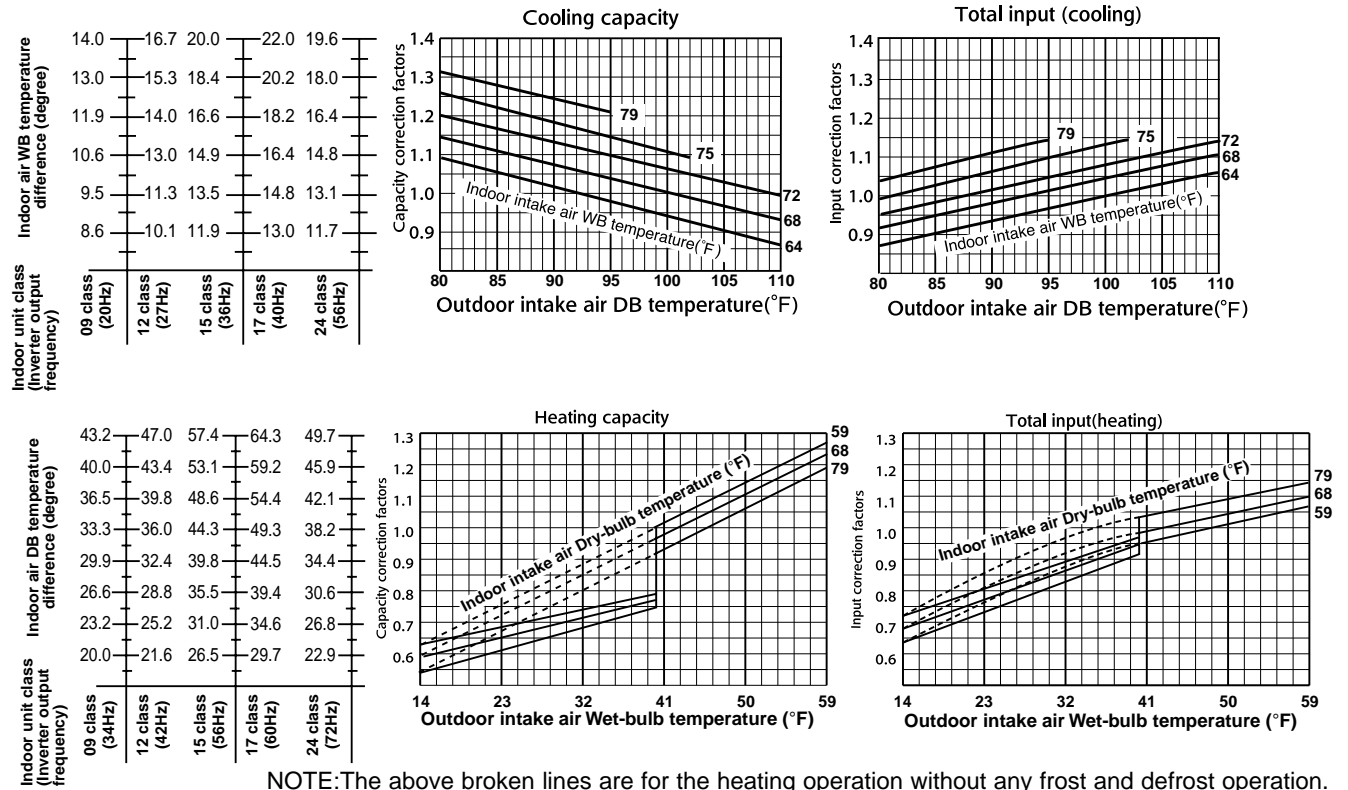


8-3. Capacity and input correction by means of inverter output frequency

(OUTDOOR UNIT : MXZ-2A20NA MXZ-2A20NA - 1)


1. 09-class unit in single operation

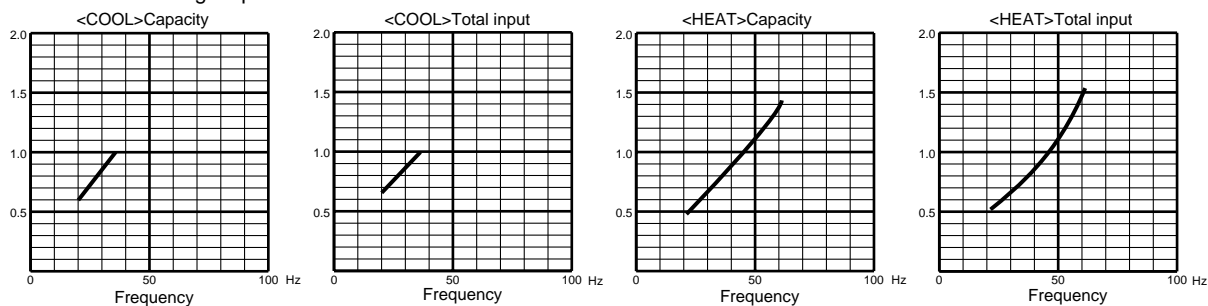

2. 12-class unit in single operation

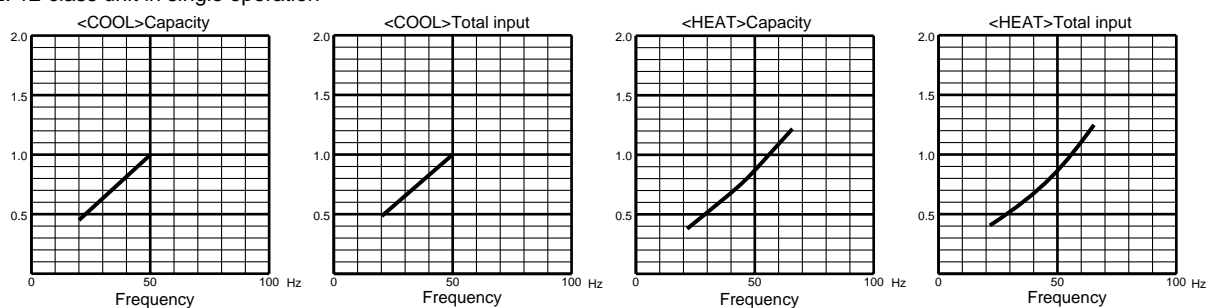


3. 15-class unit in single operation

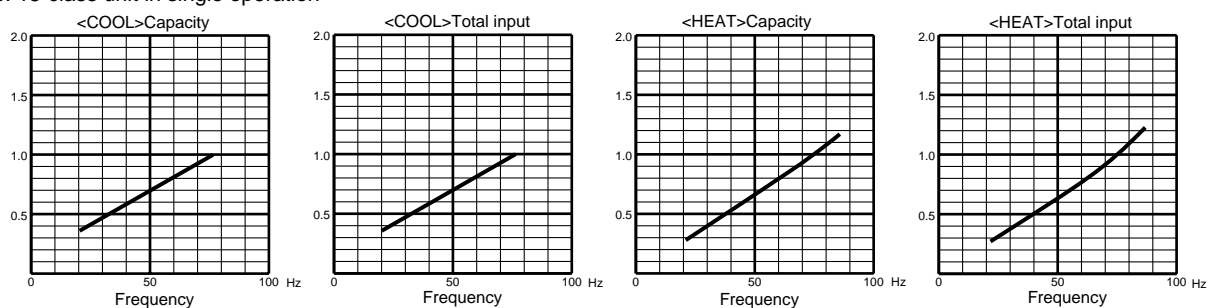


(OUTDOOR UNIT:MXZ-3A30NA MXZ-3A30NA - 1 MXZ-4A36NA)


1. 09-class unit in single operation

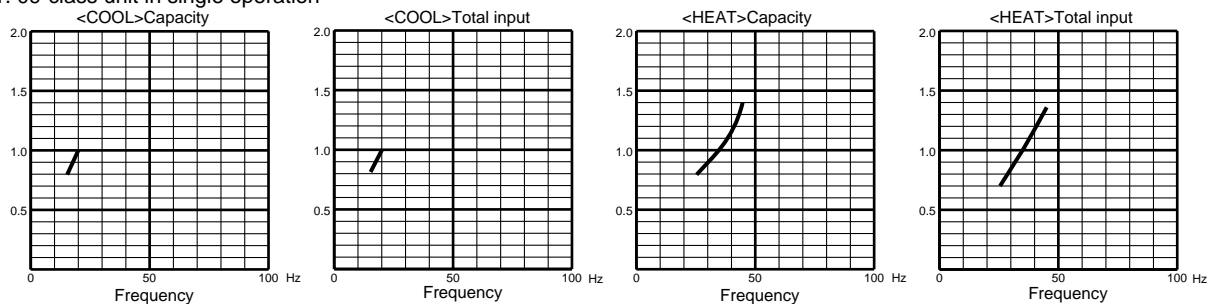


2. 12-class unit in single operation

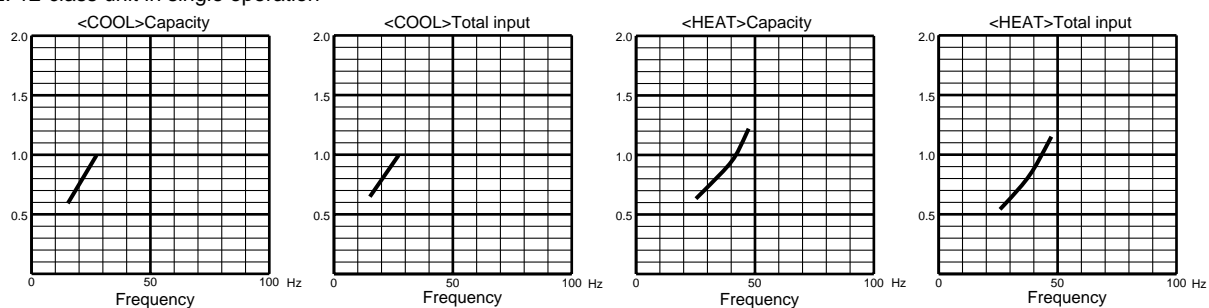


3. 15-class unit in single operation

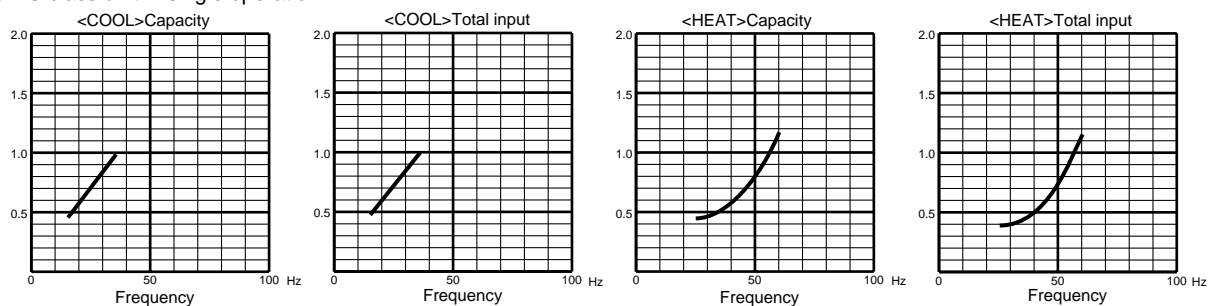

4. 17-class unit in single operation

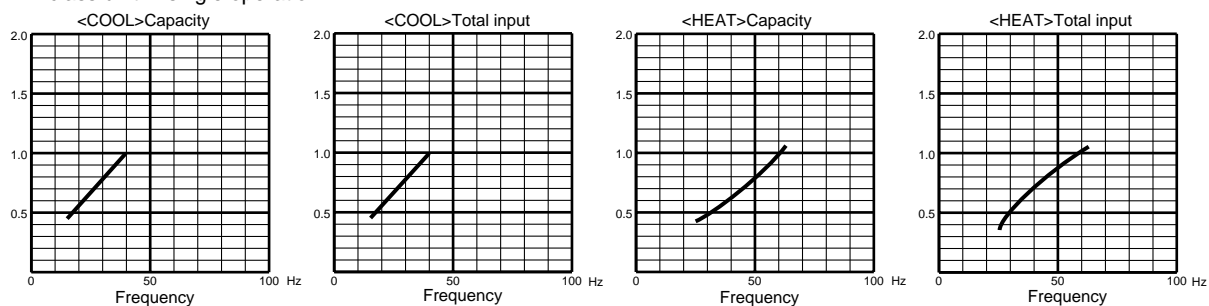

5. 24-class unit in single operation

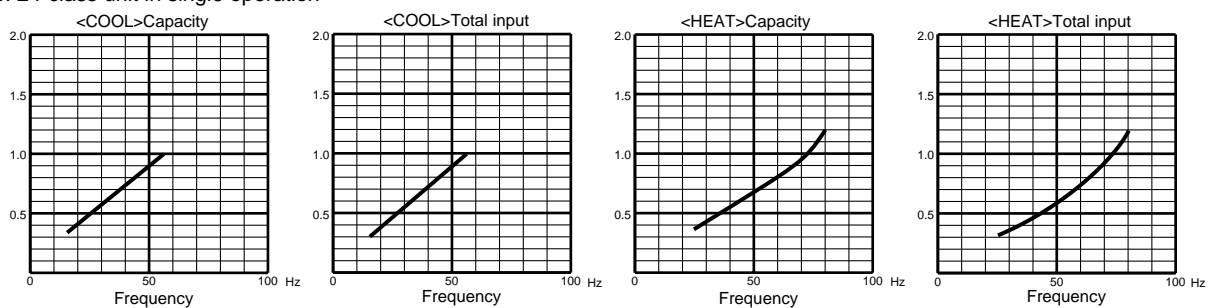

8-4. Outdoor low pressure and outdoor unit current



1. 09-class unit in single operation (OUTDOOR UNIT : MXZ-2A20NA MXZ-2A20NA - 1)

(1) COOL operation

- ① Data is based on the condition of indoor humidity 50%
- ② Air flow speed : High
- ③ Inverter output frequency : 33Hz


<How to work fixed-frequency operation>

1. Set emergency switch to COOL or HEAT. The switch is located on indoor unit.
2. Press emergency run ON/OFF button.
3. Compressor starts running at 33Hz (COOL) or 45Hz (HEAT).
4. Indoor fan runs at High speed and continues for 30 minutes.
5. To cancel this operation, press emergency run ON/OFF button or any button on remote controller.

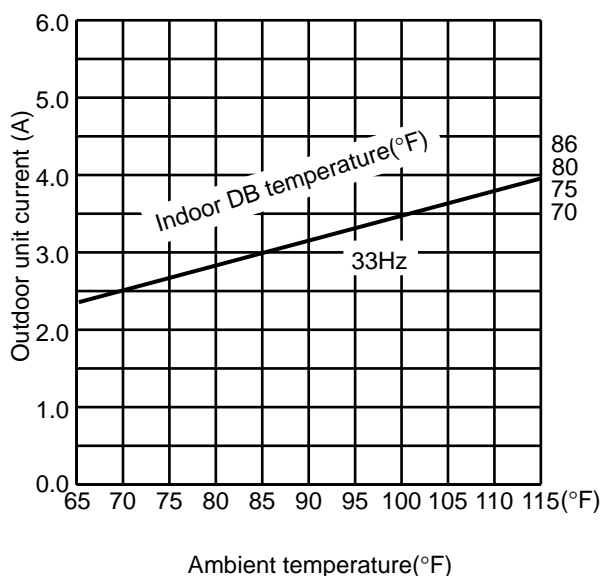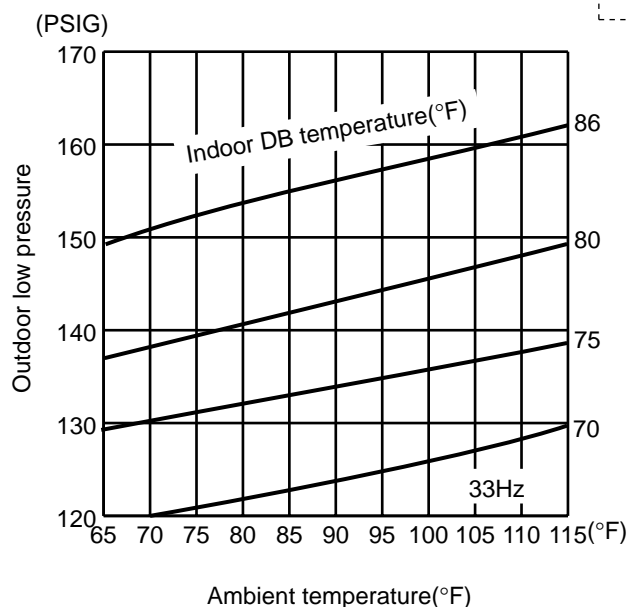

(2) HEAT operation

- ① Data is based on the condition of indoor humidity 75%
- ② Set air flow to High speed.
- ③ Inverter output frequency is 45Hz.

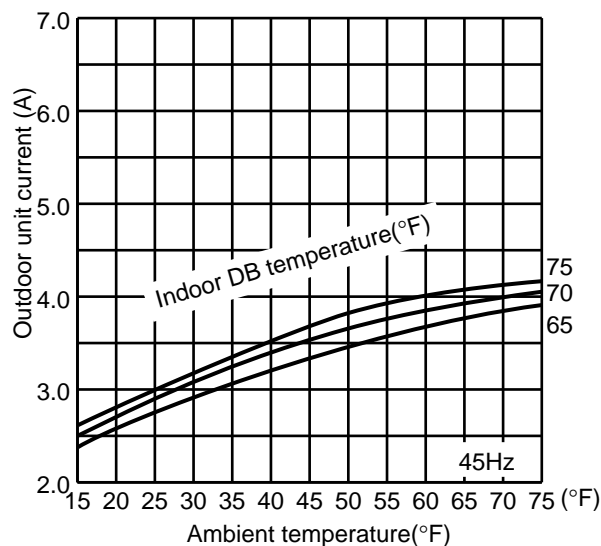



2. 12-class unit in single operation (OUTDOOR UNIT : MXZ-2A20NA MXZ-2A20NA - 1)

(1) COOL operation

- ① Data is based on the condition of indoor humidity 50%
- ② Air flow speed : High
- ③ Inverter output frequency : 33Hz


<How to work fixed-frequency operation>

1. Set emergency switch to COOL or HEAT. The switch is located on indoor unit.
2. Press emergency run ON/OFF button.
3. Compressor starts running at 33Hz (COOL) or 45Hz (HEAT).
4. Indoor fan runs at High speed and continues for 30 minutes.
5. To cancel this operation, press emergency run ON/OFF button or any button on remote controller.

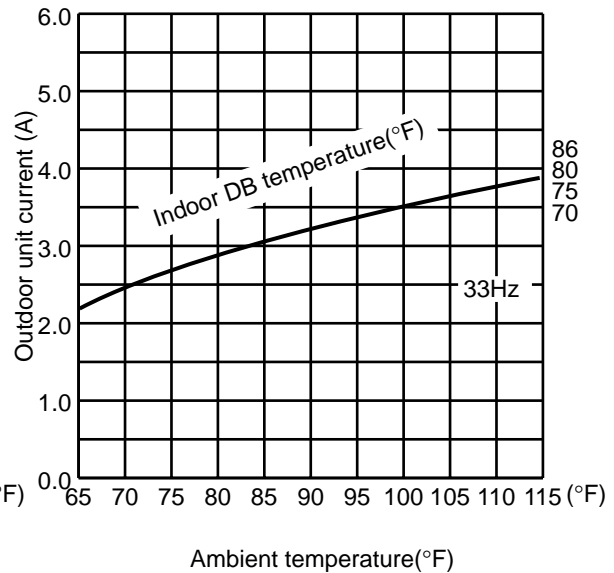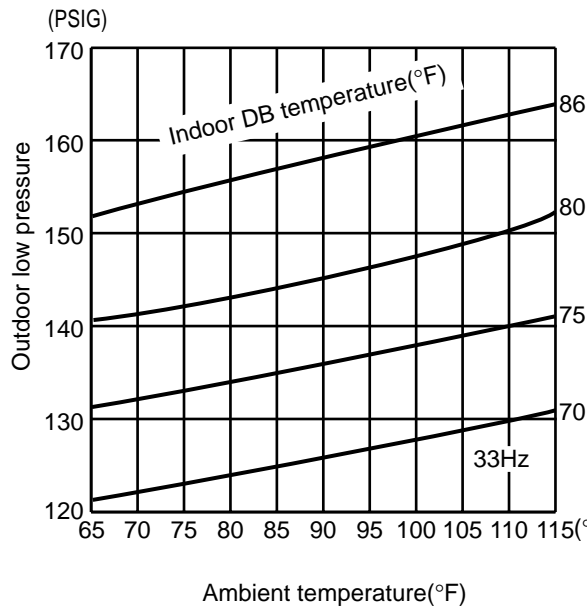

(2) HEAT operation

- ① Data is based on the condition of outdoor humidity 75%.
- ② Set air flow to High speed.
- ③ Inverter output frequency is 45Hz.

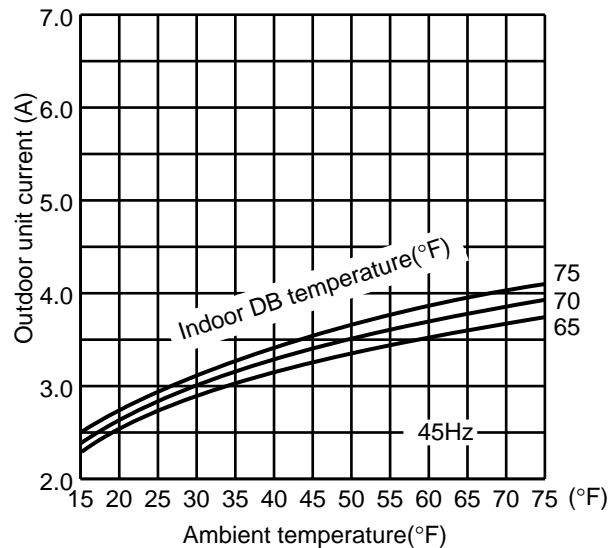



3. 15-class unit in single operation (OUTDOOR UNIT : MXZ-2A20NA MXZ-2A20NA - 1)

(1) COOL operation

- ① Data is based on the condition of indoor humidity 50%
- ② Air flow speed : High
- ③ Inverter output frequency : 33Hz


<How to work fixed-frequency operation>

1. Set emergency switch to COOL or HEAT. The switch is located on indoor unit.
2. Press emergency run ON/OFF button.
3. Compressor starts running at 33Hz (COOL) or 45Hz (HEAT).
4. Indoor fan runs at High speed and continues for 30 minutes.
5. To cancel this operation, press emergency run ON/OFF button or any button on remote controller.

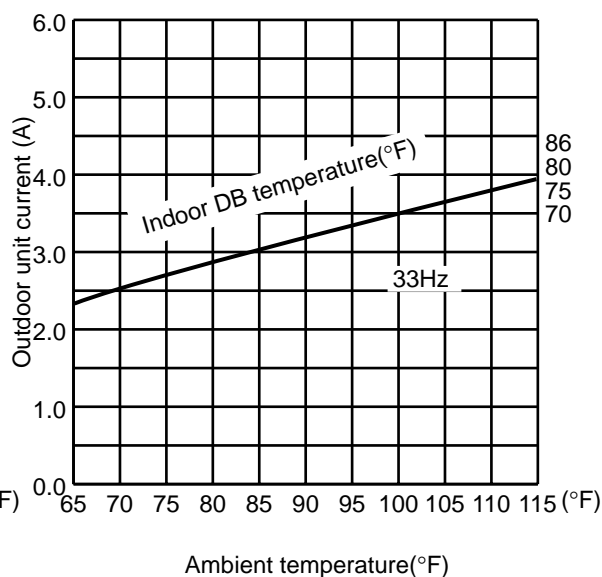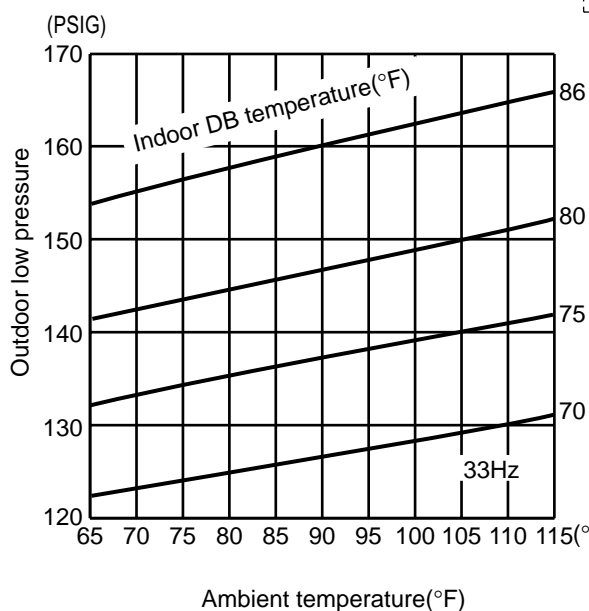

(2) HEAT operation

- ① Data is based on the condition of outdoor humidity 75%
- ② Set air flow to High speed.
- ③ Inverter output frequency is 45Hz.

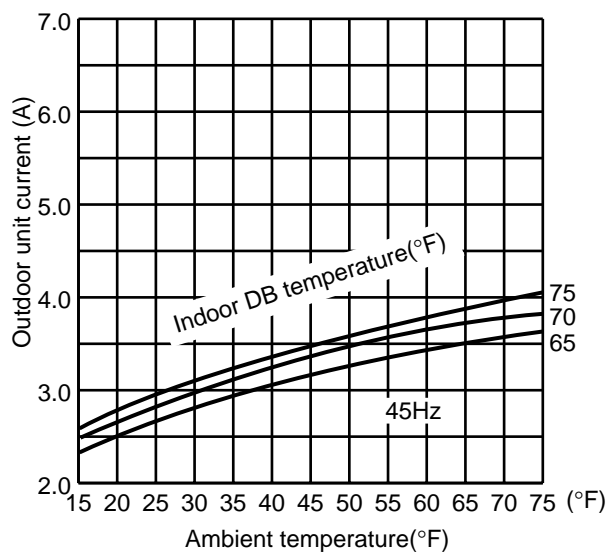



4. 09-class unit in single operation (OUTDOOR UNIT : MXZ-3A30NA MXZ-3A30NA - 1 MXZ-4A36NA)

(1) COOL operation

- ① Data is based on the condition of indoor humidity 50%
- ② Air flow speed : High
- ③ Inverter output frequency : 33Hz


<How to work fixed-frequency operation>

1. Set emergency switch to COOL or HEAT. The switch is located on indoor unit.
2. Press emergency run ON/OFF button.
3. Compressor starts running at 33Hz (COOL) or 45Hz (HEAT).
4. Indoor fan runs at High speed and continues for 30 minutes.
5. To cancel this operation, press emergency run ON/OFF button or any button on remote controller.

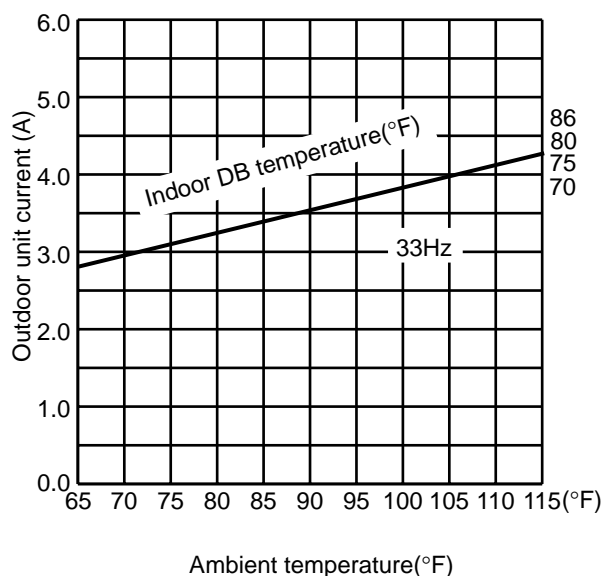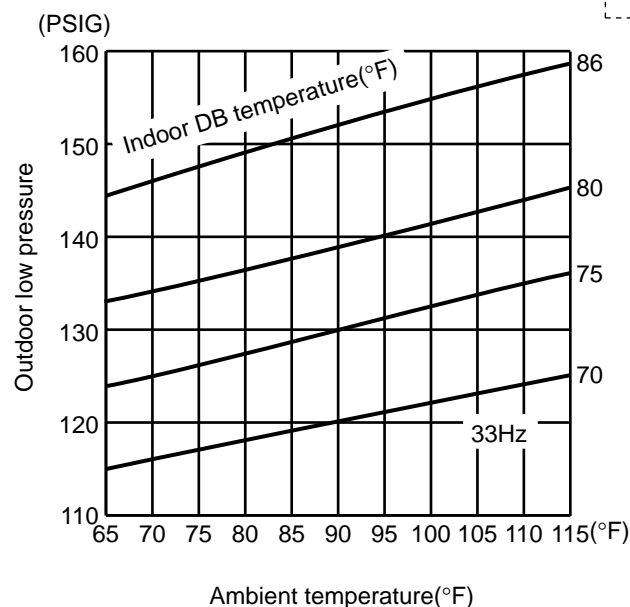

(2) HEAT operation

- ① Data is based on the condition of outdoor humidity 75%.
- ② Set air flow to High speed.
- ③ Inverter output frequency is 45Hz.

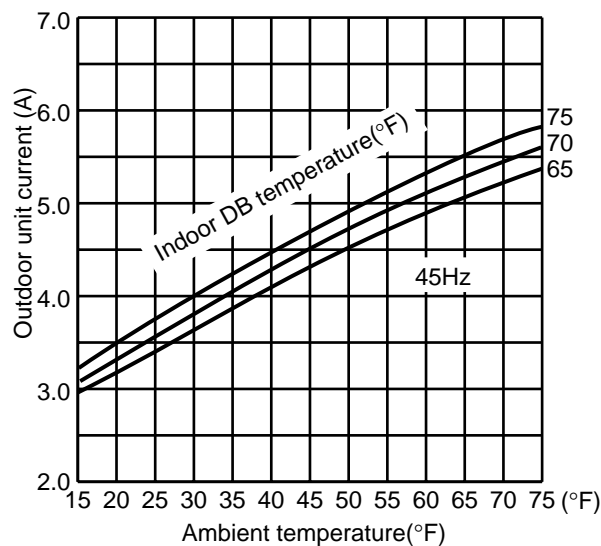



5. 12-class unit in single operation (OUTDOOR UNIT : MXZ-3A30NA MXZ-3A30NA - 1 MXZ-4A36NA)

(1) COOL operation

- ① Data is based on the condition of indoor humidity 50%
- ② Air flow speed : High
- ③ Inverter output frequency : 33Hz


<How to work fixed-frequency operation>

1. Set emergency switch to COOL or HEAT. The switch is located on indoor unit.
2. Press emergency run ON/OFF button.
3. Compressor starts running at 33Hz (COOL) or 45Hz (HEAT).
4. Indoor fan runs at High speed and continues for 30 minutes.
5. To cancel this operation, press emergency run ON/OFF button or any button on remote controller.

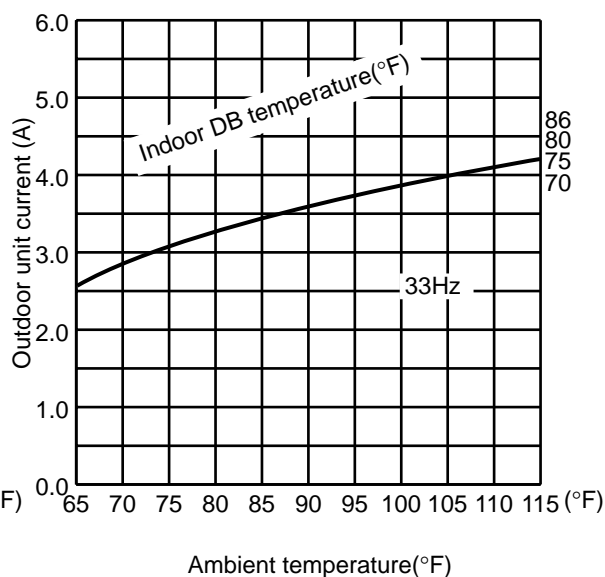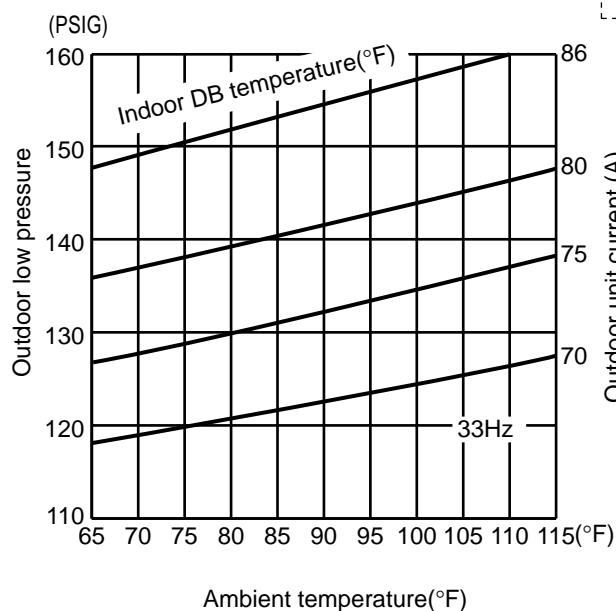

(2) HEAT operation

- ① Data is based on the condition of outdoor humidity 75%.
- ② Set air flow to High speed.
- ③ Inverter output frequency is 45Hz.

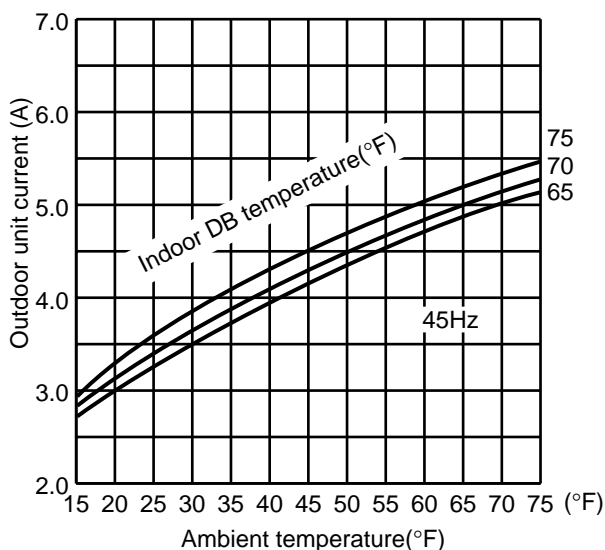



6. 15-class unit in single operation (OUTDOOR UNIT : MXZ-3A30NA MXZ-3A30NA - 1 MXZ-4A36NA)

(1) COOL operation

- ① Data is based on the condition of indoor humidity 50%
- ② Air flow speed : High
- ③ Inverter output frequency : 33Hz


<How to work fixed-frequency operation>

1. Set emergency switch to COOL or HEAT. The switch is located on indoor unit.
2. Press emergency run ON/OFF button.
3. Compressor starts running at 33Hz (COOL) or 45Hz (HEAT).
4. Indoor fan runs at High speed and continues for 30 minutes.
5. To cancel this operation, press emergency run ON/OFF button or any button on remote controller.

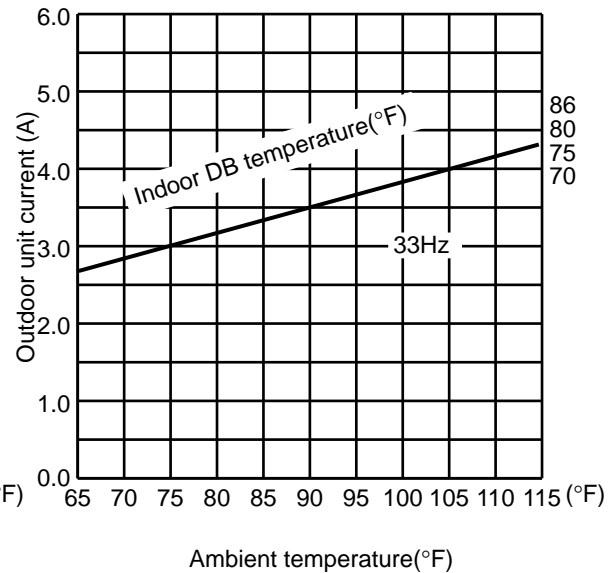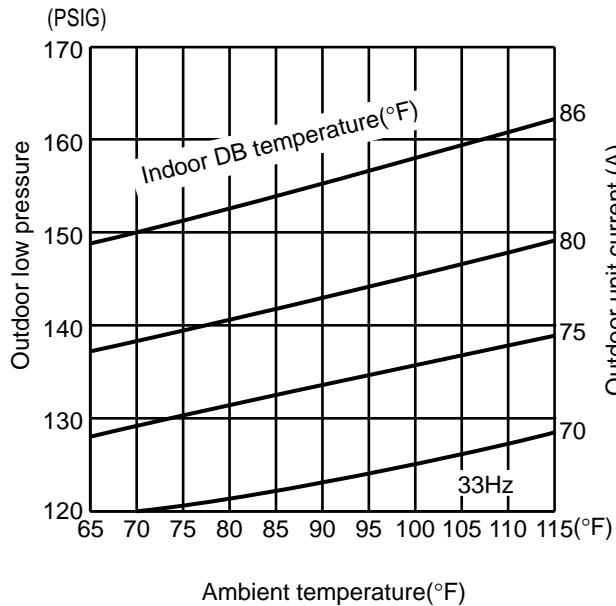

(2) HEAT operation

- ① Data is based on the condition of outdoor humidity 75%
- ② Set air flow to High speed.
- ③ Inverter output frequency is 45Hz.

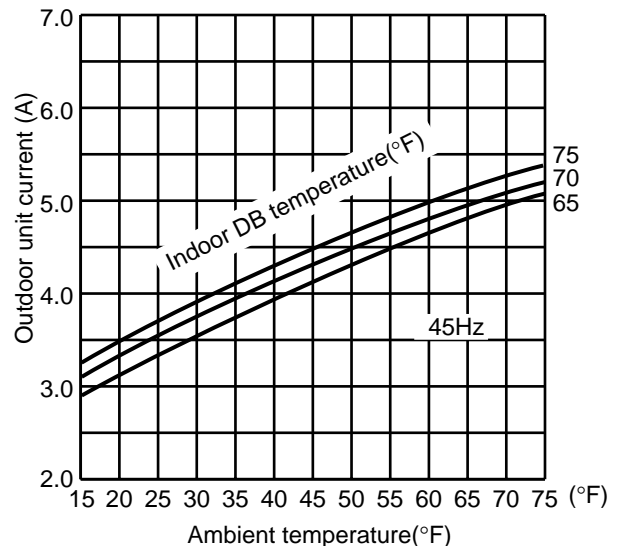



7. 17-class unit in single operation (OUTDOOR UNIT : MXZ-3A30NA MXZ-3A30NA - 1 MXZ-4A36NA)

(1) COOL operation

- ① Data is based on the condition of indoor humidity 50%
- ② Air flow speed : High
- ③ Inverter output frequency : 33Hz


<How to work fixed-frequency operation>

1. Set emergency switch to COOL or HEAT. The switch is located on indoor unit.
2. Press emergency run ON/OFF button.
3. Compressor starts running at 33Hz (COOL) or 45Hz (HEAT).
4. Indoor fan runs at High speed and continues for 30 minutes.
5. To cancel this operation, press emergency run ON/OFF button or any button on remote controller.

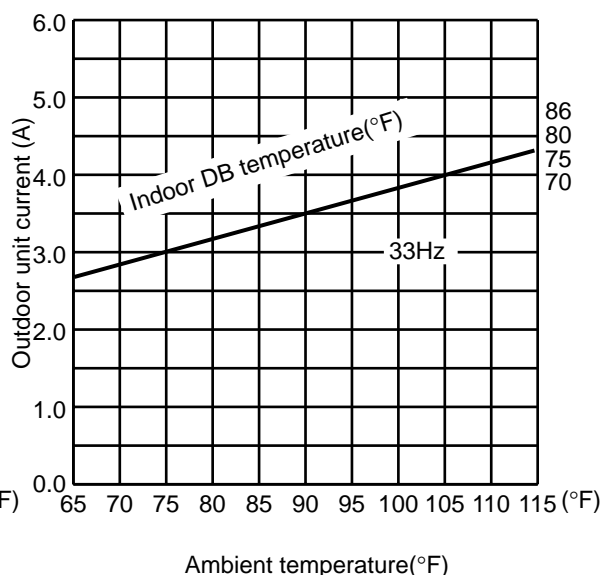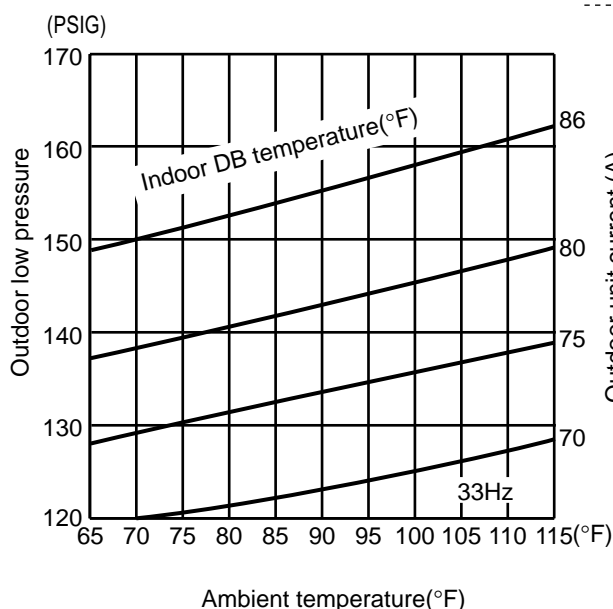

(2) HEAT operation

- ① Data is based on the condition of outdoor humidity 75%.
- ② Set air flow to High speed.
- ③ Inverter output frequency is 45Hz.

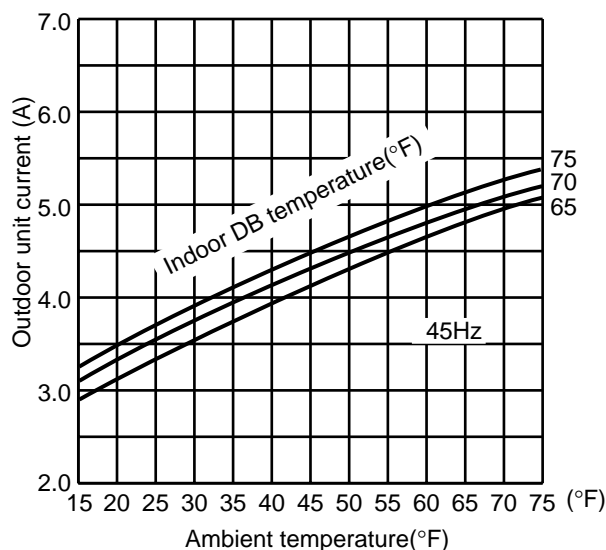



8. 24-class unit in single operation (OUTDOOR UNIT : MXZ-3A30NA MXZ-3A30NA - 1 MXZ-4A36NA)

(1) COOL operation

- ① Data is based on the condition of indoor humidity 50%
- ② Air flow speed : High
- ③ Inverter output frequency : 33Hz


<How to work fixed-frequency operation>

1. Set emergency switch to COOL or HEAT. The switch is located on indoor unit.
2. Press emergency run ON/OFF button.
3. Compressor starts running at 33Hz (COOL) or 45Hz (HEAT).
4. Indoor fan runs at High speed and continues for 30 minutes.
5. To cancel this operation, press emergency run ON/OFF button or any button on remote controller.

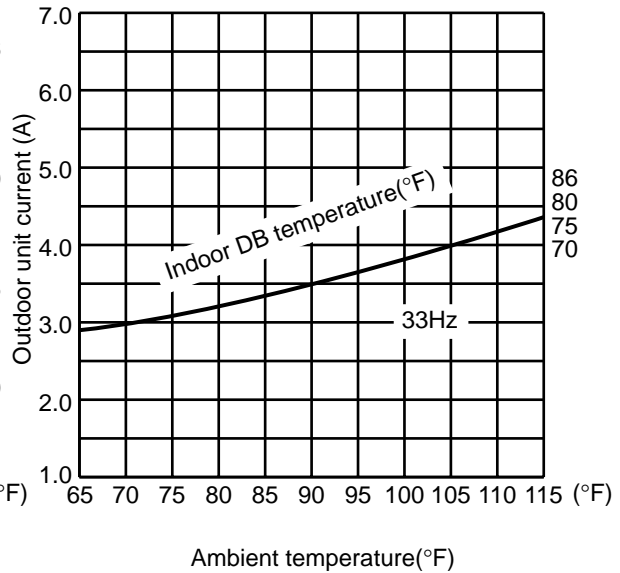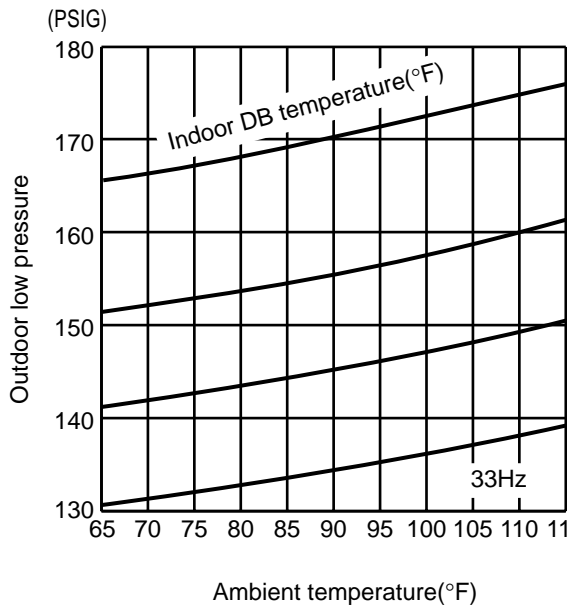

(2) HEAT operation

- ① Data is based on the condition of outdoor humidity 75%
- ② Set air flow to High speed.
- ③ Inverter output frequency is 45Hz.

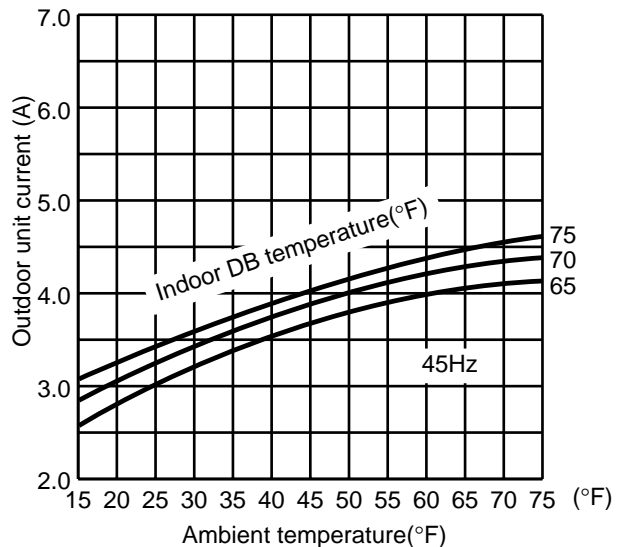

MXZ-2A20NA MXZ-2A20NA - ① MXZ-3A30NA MXZ-3A30NA - ① MXZ-4A36NA
Relation between main sensor and actuator

| Sensor | Purpose | Actuator | | | |
|---|-----------------------|------------|-----|-------------------|-------------|
| | | Compressor | LEV | Outdoor fan motor | 4-way valve |
| Discharge temperature thermistor | Protection | ○ | ○ | | |
| Indoor coil thermistor | Defrosting Protection | ○ | ○ | ○ | |
| Defrost thermistor | Defrosting | ○ | ○ | ○ | ○ |
| Gas pipe temperature thermistor (MXZ-2A20NA, MXZ-3A30NA) | Control | | ○ | | |
| Fin temperature thermistor | Protection | ○ | | ○ | |
| Ambient temperature thermistor | Control | ○ | ○ | ○ | |
| Outdoor heat exchanger temperature | Protection | ○ | ○ | ○ | |
| Capacity code | Control | ○ | ○ | | |

10-1. Pre-heat control <MXZ-2A20NA - ①, MXZ-3A30NA - ①, MXZ-4A36NA >

If moisture gets into the refrigerant cycle, or when refrigerant is liquefied and collected in the compressor, it may interfere the start-up of the compressor.

To improve start-up condition, the compressor is energized even while it is not operating.


This is to generate heat at the winding.

The compressor uses about 50 W when pre-heat control is turned ON.

Pre-heat control is ON at initial setting.

[How to deactivate pre-heat control]

- ① Turn OFF the power supply for the air conditioner before making the setting.
- ② Set the 4th Dip Switch of SW1 on the outdoor electronic control P.C. board to ON to deactivate pre-heat control function (MXZ-2A20NA - ①).
Set the 4th Dip Switch of SW2 on the outdoor electronic control P.C. board to ON to deactivate pre-heat control function (MXZ-3A30NA - ①, MXZ-4A36NA).

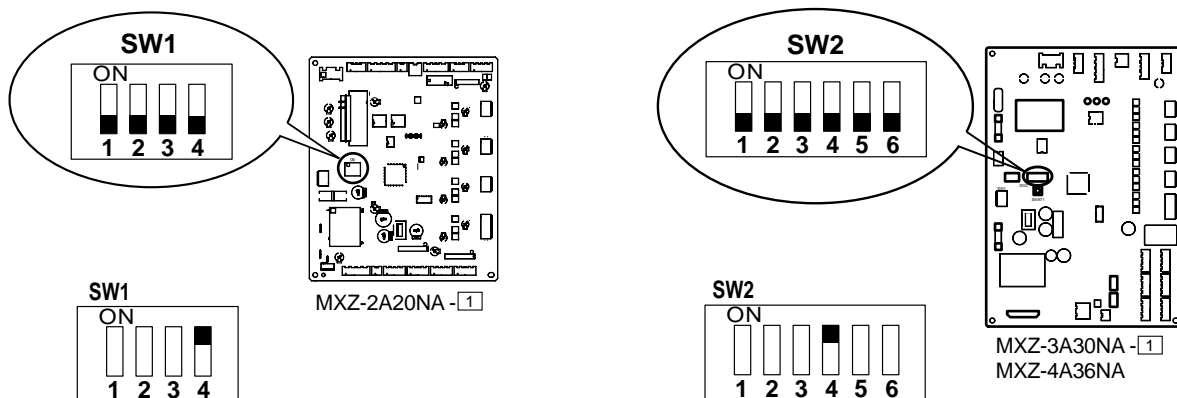

- ③ Turn ON the power supply for the air conditioner.

NOTE: Pre-heat control will be turned OFF when the breaker is turned OFF.


10-2. Auto line correcting <MXZ-3A30NA - 1 , MXZ-4A36NA >

Outdoor unit has an auto line correcting function which automatically detects and corrects improper wiring or piping.

Improper wiring or piping can be automatically detected by pressing the piping/wiring correction switch (SW871). When improper wiring or piping is detected, wiring lines are corrected. This will be completed in about 10 to 15 minutes.

[How to activate this function]

1. Check that outside temperature is above 0°C.
(This function does not work when outside temperature is not above 0°C.)
2. Check that the stop valves of the liquid pipe and gas pipe are open.
3. Check that the wiring between indoor and outdoor unit is correct.
(If the wiring is not correct, this function does not work.)
4. Turn ON the power supply and wait at least 1 minute.
5. Press the piping/wiring correction switch (SW871) on the electronic control P.C. board.
Do not touch energized parts.

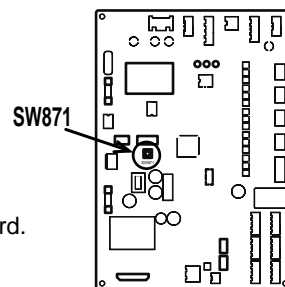

LED indication during detection:

| LED1(Red) | LED2(Yellow) | LED3(Green) |
|-----------|--------------|-------------|
| Lighting | Lighting | Blinking |

LED indication after detection:

| LED1(Red) | LED2(Yellow) | LED3(Green) | Indication |
|-------------------|--------------|-------------|--|
| Lighting | Goes out | Lighting | Completed (Detected successfully) |
| Blinking | Blinking | Blinking | Cannot be corrected |
| Other indications | | | Refer to "SAFETY PRECAUTIONS WHEN LED FLASHES" located behind the service panel. |

※ Be sure to check for closed valves, cracked pipes or clogged pipes.

6. Press the switch to cancel.

LED indication after cancel :

| LED1(Red) | LED2(Yellow) | LED3(Green) |
|-----------|--------------|-------------|
| Lighting | Lighting | Goes out |

NOTE : Indoor unit cannot be operated while this function is activated.

When this function is activated while indoor unit is operating, the operation will be stopped.

Operate indoor unit after the auto line correcting is finished.

Pressing the switch during detection cancels this function.

The record of auto line correcting can be confirmed in the following way:

Press the switch for more than 5 seconds.

LED will show the record of auto correcting for about 30 seconds as shown in the table below:

| Number of blinks | | | Wiring line |
|------------------|--------------|-------------|---------------|
| LED1(Red) | LED2(Yellow) | LED3(Green) | |
| Once | Once | Lighting | Not corrected |
| 3 times | 3 times | Lighting | Corrected |

NOTE : Activate this function to confirm the correct wiring after replacing the electronic control P.C. board.

(Previous records are deleted when the electronic control P.C. board is replaced.)


The record cannot be shown if auto line correcting is not canceled (Refer to "How to activate this function").

MXZ-2A20NA MXZ-2A20NA - ① MXZ-3A30NA MXZ-3A30NA - ① MXZ-4A36NA
11-1. Cautions on troubleshooting
1. Before troubleshooting, check the following:

- 1) Check the power supply voltage.
- 2) Check the indoor/outdoor connecting wire for mis-wiring.

2. Take care of the following during servicing.

- 1) Before servicing the air conditioner, be sure to turn off the unit first with the remote controller, and then after confirming the horizontal vane is closed, turn off the breaker and/or disconnect the power plug.
- 2) Be sure to turn OFF the power supply before removing the front panel, the cabinet, the top panel, and the electronic control P.C. board.
- 3) When removing the electrical parts, be careful to the residual voltage of smoothing capacitor.
- 4) When removing the electronic control P.C. board, hold the edge of the board with care NOT to apply stress on the components.
- 5) When connecting or disconnecting the connectors, hold the housing of the connector. DO NOT pull the lead wires.

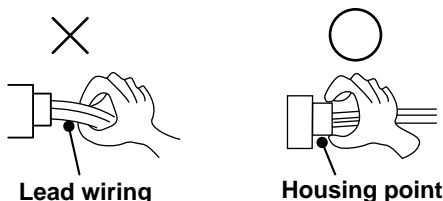
3. Troubleshooting procedure

- 1) First, check if the OPERATION INDICATOR lamp on the indoor unit is flashing on and off to indicate an abnormality. To make sure, check how many times the abnormality indication is flashing on and off before starting service work.
- 2) If the electronic control P.C. board seems to be defective, check the copper foil pattern for disconnection and the components for bursting and discoloration.
- 3) When troubleshooting, refer to 11-2, and 11-3. and 11-4.

11-2. Failure mode recall function

This air conditioner can memorize the abnormal condition which has occurred once.

Even though LED indication listed on the troubleshooting check table (11-4.) disappears, the memorized failure details can be recalled.

This mode is very useful when the unit needs to be repaired for the abnormality which doesn't recur.

1. Type of failure mode recall function

There are 2 types in failure mode recall function as shown below.

① Indoor and outdoor unit failure mode recall function

With this function, failure mode of indoor unit and a part of failure mode of outdoor unit can be recalled.

② The details of outdoor unit failure mode recall function

With this function, more detailed failure mode of outdoor unit can be recalled.

Refer to the service manual of indoor unit for how to recall the failure mode and the details of indoor unit failure mode.

The outdoor unit failure mode is indicated by the operation indicator lamp on the indoor unit and the LED of outdoor unit. See "11-2.2. Failure mode table".

2. Outdoor unit failure mode table

| The left lamp of OPERATION INDICATOR lamp (Indoor unit) | Abnormal point (Failure mode / protection) | LED indication (Outdoor P.C. board) | | Condition | Correspondence | Indoor/outdoor unit failure mode recall function |
|---|---|--|----------|--|---|--|
| | | LED 1 | LED 2 | | | |
| OFF | None (Normal) | — | — | — | — | — |
| 2-time flash | Outdoor power system | Lighting | Lighting | When overcurrent protection stop is continuously performed three times within 1 minute after the compressor gets started, or when converter protection stop or bus-bar voltage protection stop is continuously performed three times within 3 minutes after start-up. | <ul style="list-style-type: none">• Check the connection of the compressor connecting wire.• Refer to 11-6.㉔ "How to check inverter / compressor".• Check the stop valve. | ○ |
| 3-time flash | Discharge temperature thermistor | Lighting | Once | When thermistor shorts or opens during compressor running. | <ul style="list-style-type: none">• Refer to 11-6.㉔ "Check of outdoor thermistors". | ○ |
| | Defrost thermistor | Lighting | Once | | | |
| | Ambient temperature thermistor | Lighting | Twice | | | |
| | Fin temperature thermistor | Lighting | 3 times | | | |
| | P.C. board temperature thermistor | Lighting | 4 times | | | |
| | Outdoor heat exchanger temperature thermistor | Lighting | 9 times | | <ul style="list-style-type: none">• Replace the outdoor electronic control P.C. board. | |
| | Gas pipe temperature thermistor A | Lighting | 10 times | <ul style="list-style-type: none">• Refer to 11-6.㉔ "Check of outdoor thermistors". | | |
| | Gas pipe temperature thermistor B | Lighting | 11 times | | | |
| | Gas pipe temperature thermistor C | Lighting | 12 times | | | |
| 4-time flash | Overcurrent | Once | Goes out | When 28A current flows into intelligent power module. | <ul style="list-style-type: none">• Reconnect compressor connector.• Refer to 11-6.㉔ "How to check inverter/ compressor".• Check the stop valve. | — |
| 5-time flash | Discharge temperature | Lighting | Lighting | When discharge temperature exceeds 240.8°F during operation. Compressor can restart if discharge temperature thermistor reads 212°F or less 3 minutes later. | <ul style="list-style-type: none">• Check refrigerant circuit and refrigerant amount.• Refer to 11-6.㉔ "Check of LEV". | — |
| 6-time flash | High pressure | Lighting | Lighting | When high-pressure is detected with the high-pressure switch (HPS) during operation. (MXZ-3A30NA, MXZ-3A30NA-□□, MXZ-4A36NA) When the outdoor heat exchanger temperature exceeds 158°F during cooling or the indoor gas pipe temperature exceeds 158°F during heating. | <ul style="list-style-type: none">• Check refrigerant circuit and refrigerant amount.• Check the stop valve. | — |
| 7-time flash | Fin temperature | 3 times | Goes out | When the fin temperature exceeds 188.6°F during operation. | <ul style="list-style-type: none">• Check around outdoor unit.• Check outdoor unit air passage.• Refer to 11-6.㉔ "Check of outdoor fan motor". | — |
| | P.C. board temperature | 4 times | Goes out | When the P.C. board temperature exceeds 158°F during operation. | | |
| 8-time flash | Outdoor fan motor | Lighting | Lighting | When failure occurs continuously three times within 30 seconds after the fan gets started. | <ul style="list-style-type: none">• Refer to 11-6.㉔ "Check of outdoor fan motor". | — |
| 9-time flash | Nonvolatile memory data | Lighting | 5 times | When nonvolatile memory data cannot be read properly. | <ul style="list-style-type: none">• Replace the outdoor electronic control P.C. board. | ○ |
| 10-time flash | Discharge temperature | Lighting | Lighting | When the frequency of the compressor is kept 80Hz or more and the discharge temperature is kept under 102.2°F for more than 20 minutes. | <ul style="list-style-type: none">• Check refrigerant circuit and refrigerant amount.• Refer to 11-6.㉔ "Check of LEV". | — |

NOTE : Blinking patterns of this mode differ from the ones of Troubleshooting check table (11-4.).


| The left lamp of OPERATION INDICATOR lamp(Indoor unit) | Abnormal point (Failure mode / protection) | LED indication (Outdoor P.C. board) | | Condition | Correspondence | Indoor/outdoor unit failure mode recall function |
|--|--|--|-------------|---|---|--|
| | | LED 1 | LED 2 | | | |
| 11-time flash | Communication error between P.C. boards | Lighting | 6 times | Communication error occurs between the electronic control P.C. board and power board for more than 10 seconds. | • Check the connecting wire between outdoor electronic control P.C. board and power board. | — |
| | | | | When the communication between boards protection stop is continuously performed twice. | | ○ |
| | Current sensor | Lighting | 7 times | When a short or open circuit is detected in the current sensor during compressor operating. | • Replace the power board. | — |
| | | | | Current sensor protection stop is continuously performed twice. | | ○ |
| | Zero cross detecting circuit | 5 times | Goes out | When zero cross signal cannot be detected while the compressor is operating. | • Check the connecting wire among electronic control P.C. board, noise filter P.C. board and power board. | — |
| | | | | The protection stop of the zero cross detecting circuit is continuously performed 10 times. | | ○ |
| | Converter | 5 times | Goes out | When a failure is detected in the operation of the converter during operation. | • Replace the power board. | — |
| | Bus-bar voltage (1) | 5 times | Goes out | When the bus-bar voltage exceeds 400V or falls to 200V or below during compressor operating. | | |
| | Bus-bar voltage (2) *Even if this protection stop is performed continuously three times, it does not mean the abnormality in outdoor power system. | 6 times | Goes out | When the bus-bar voltage exceeds 400V or falls to 50V or below during compressor operating. | | |
| 15-time flash | LEV for drain | Lighting | Lighting | When the indoor unit detects any abnormal in the LEV for drain. | • Refer to 11-6.④ "Check of LEV". • Check the drain pump of the indoor unit. | — |

NOTE : Blinking patterns of this mode differ from the ones of Troubleshooting check table (11-4.).

11-3. Instruction of troubleshooting

- Check the indoor unit with referring to the indoor unit service manual, and confirm that there is any problem in the indoor unit.

Then, check the outdoor unit with referring to this page.

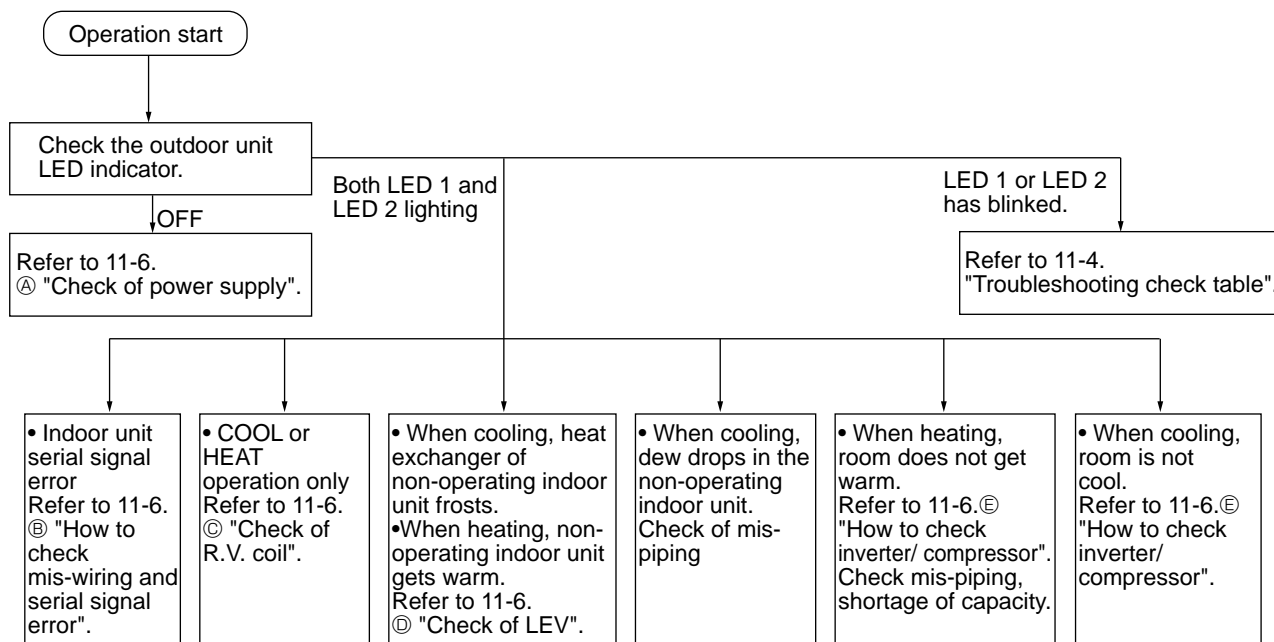

11-4. Troubleshooting check table


| No. | Symptom | Indication | | Abnormal point / Condition | Condition | Correspondence |
|-----------------|--|------------|--|--|--|---|
| | | LED1(Red) | LED2(Yellow) | | | |
| 1 | Outdoor unit does not operate. | Lighting | Once | LEV for drain | When the indoor unit detects any abnormality in the LEV for drain. | • Refer to 11-6.㉔ "Check of LEV". • Check the drain pump of the indoor unit. |
| 2 | | Lighting | Twice | Outdoor power system | When over current protection stop is continuously performed three times within 1 minute after the compressor gets started, or when converter protection stop or bus-bar voltage protection stop is continuously performed three times within 3 minutes after start-up. | • Check the connection of the compressor connecting wire. • Refer to 11-6.㉕ "How to check inverter/compressor". • Check the stop valve. |
| 3 | | Lighting | 3 times | Discharge temperature thermistor | When a short circuit is detected in the thermistor during operation, or when an open circuit is detected in the thermistor after 10 minutes of compressor start-up. | • Refer to 11-6.㉖ "Check of outdoor thermistors". |
| 4 | | Lighting | 4 times | Fin temperature thermistor P.C board temperature thermistor | When a short or open circuit is detected in the thermistor during operation. | • Refer to 11-6.㉖ "Check of outdoor thermistors". • Replace the outdoor electronic control P.C. board. |
| 5 | | Lighting | 5 times | Ambient temperature thermistor | When a short or open circuit is detected in the thermistor during operation. | • Refer to 11-6.㉖ "Check of outdoor thermistors". |
| | | | | Outdoor heat exchanger temperature thermistor | When a short circuit is detected in the thermistor during operation, or when an open circuit is detected in the thermistor after 5 minutes (in cooling) and 10 minutes (in heating) of compressor start-up. | |
| | | | | Defrost thermistor | When a short circuit is detected in the thermistor during operation, or when an open circuit is detected in the thermistor after 5 minutes of compressor start-up. | |
| 6 | | Lighting | 7 times | Nonvolatile memory data | When the nonvolatile memory data cannot be read properly. | • Replace the outdoor electronic control P.C. board. |
| 7 | | Lighting | 8 times | Current sensor | Current sensor protection stop is continuously performed twice. | • Replace the power board. |
| 8 | | Lighting | 10 times | Gas pipe temperature thermistor A Gas pipe temperature thermistor B Gas pipe temperature thermistor C | When a short or open circuit is detected in the thermistor during cooling. (A,B : MXZ-2A20NA, MXZ-3A30NA) (C : MXZ-3A30NA) | • Refer to 11-6.㉖ "Check of outdoor thermistors". |
| 9 | | Lighting | 11 times | Communication error between P.C. boards | When the communication protection stop between boards is continuously performed twice. | • Check the connecting wire between outdoor electronic control P.C. board and power board. |
| 10 | | Lighting | 12 times | Zero cross detecting circuit | The protection stop of the zero cross detecting circuit is continuously performed 10 times. | • Check the connecting wire among outdoor electronic control P.C. board, noise filter P.C. board and power board. |
| 11 | 'Outdoor unit stops and restarts 3 minutes later' is repeated. | Twice | Goes out | IPM protection | When overcurrent is detected after 30 minutes of compressor start-up. | • Reconnect compressor connector. |
| Lock protection | | | | When overcurrent is detected within 30 minutes of compressor start-up | • Refer to 11-6.㉕ "How to check inverter/compressor". • Check the stop valve. • Check the power module (PAM module). | |
| 12 | | 3 times | Goes out | Discharge temperature protection | When discharge temperature exceeds 240.8°F during operation. Compressor can restart if discharge temperature thermistor reads 212°F or less 3 minutes later. | • Check the amount of gas and refrigerant circuit. • Refer to 11-6.㉔ "Check of LEV". |
| 13 | | 4 times | Goes out | Fin temperature protection | When the fin temperature exceeds 188.6°F during operation. | • Check refrigerant circuit and refrigerant amount. |
| | | | | P.C. board temperature protection | When the P.C. board temperature exceeds 158°F during operation. | • Refer to 11-6.㉕ "Check of outdoor fan motor". |
| 14 | | 5 times | Goes out | High-pressure protection | When high-pressure is detected with the high-pressure switch (HPS) during operation. (MXZ-3A30NA, MXZ-3A30NA-□, MXZ-4A36NA) | • Check around of gas and the refrigerant circuit. • Check of stop valve. |
| | | | | | When the outdoor heat exchanger temperature exceeds 158°F during cooling or when indoor gas pipe temperature exceeds 158°F during heating. | |
| 15 | | 8 times | Goes out | Converter protection | When a failure is detected in the operation of the converter during operation. | • Replace the power board. |
| 16 | | 9 times | Goes out | Bus-bar voltage protection (1) | When the bus-bar voltage exceeds 400V or falls to 200V or below during compressor operating. | • Replace the power board. |
| | | | | Bus-bar voltage protection (2) | When the bus-bar voltage exceeds 400V or falls to 50V or below during compressor operating. | |
| 17 | 13 times | Goes out | Outdoor fan motor | When failure occurs continuously three times within 30 seconds after the fan gets started. | • Refer to 11-6.㉕ "Check of outdoor fan motor". | |
| 18 | Lighting | 8 times | Current sensor protection | When a short or open circuit is detected in the current sensor during compressor operating. | • Replace the power board. | |
| 19 | Lighting | 11 times | Communication between P.C. boards protection | Communication error occurs between the outdoor electronic control P.C. board and power board for more than 10 seconds. | • Check the connecting wire between outdoor electronic control P.C. board and power board. | |
| 20 | Lighting | 12 times | Zero cross detecting circuit protection | When zero cross signal cannot be detected while the compressor is operating. | • Check the connecting wire among outdoor electronic control P.C. board, noise filter P.C. board and power board. | |

NOTE 1. The location of LED is illustrated at the right figure. Refer to 11-7.1.



2. LED is lighted during normal operation.

The flashing frequency shows the number of times the LED blinks after every 2.5-second OFF.

(Example) When the flashing frequency is "2".

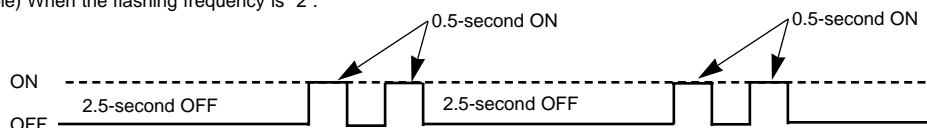

Outdoor electronic control P.C. board (Parts side)
MXZ-2A20NA, MXZ-2A20NA-□, MXZ-3A30NA




| No. | Symptom | Indication | | Abnormal point / Condition | Condition | Correspondence |
|-----|---------------------------------|------------|--------------|--------------------------------------|--|---|
| | | LED1(Red) | LED2(Yellow) | | | |
| 21 | Outdoor unit operates. | Once | Lighting | Primary current protection | When the input current exceeds 15A. | These symptoms do not mean any abnormality of the product, but check the following points. • Check if indoor filters are clogged. • Check if refrigerant is short. • Check if indoor/outdoor unit air circulation is short cycled. |
| | | | | Secondary current protection | When the current of the compressor exceeds 15A. | |
| 22 | | Twice | Lighting | High-pressure protection | When the indoor gas pipe temperature exceeds 113°F during heating. | |
| | | | | Defrosting in cooling | When the indoor gas pipe temperature falls 37.4°F or below during cooling. | |
| 23 | | 3 times | Lighting | Discharge temperature protection | When the frequency of the compressor is kept 80Hz or more and the discharge temperature is kept under 122°F(COOL mode) /104°F(HEAT mode) for more than 40 minutes. | |
| 24 | | 4 times | Lighting | Low discharge temperature protection | When the frequency of the compressor is kept 80Hz or more and the discharge temperature is kept under 102.2°F for more than 20 minutes. | • Refer to 11-6.④ "Check of LEV". • Check refrigerant circuit and refrigerant amount. |
| 25 | | 5 times | Lighting | Cooling high-pressure protection | When the outdoor heat exchanger temperature exceeds 136.4°F during operation. | |
| 26 | Outdoor unit operates normally. | 9 times | Lighting | Inverter check mode | When the unit is operated with emergency operation switch. | — |
| 27 | | Lighting | Lighting | Normal | — | — |

NOTE 1. The location of LED is illustrated at the right figure. Refer to 11-7.1.


2. LED is lighted during normal operation.

The flashing frequency shows the number of times the LED blinks after every 2.5-second OFF.
(Example) When the flashing frequency is "2".

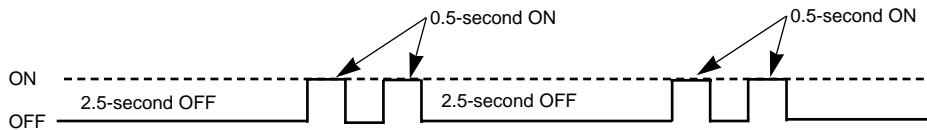


Outdoor electronic control P.C. board(Parts side)

MXZ-2A20NA, MXZ-2A20NA- [1], MXZ-3A30NA






MXZ-3A30NA- [1], MXZ-4A36NA



11-5. Trouble criterion of main parts

MXZ-2A20NA MXZ-2A20NA - 1 MXZ-3A30NA MXZ-3A30NA - 1 MXZ-4A36NA

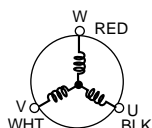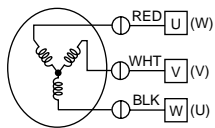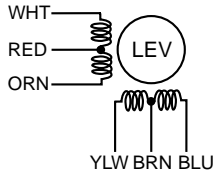
| Part name | Check method and criterion | | | | | | | | | |
|--|---|--|----------------|-----------|---------------|----------------|--|-----------------|--------------|--------------|
| Defrost thermistor (RT61) Ambient temperature thermistor (RT65) Outdoor heat exchanger temperature thermistor (RT68) | Measure the resistance with a tester. Refer to 11-7. "Test point diagram and voltage",1. "Outdoor electronic control P.C. board", the chart of thermistor. | | | | | | | | | |
| Gas pipe temperature thermistor (RT6A~C) MXZ-2A20NA MXZ-3A30NA | | | | | | | | | | |
| Discharge temperature thermistor (RT62) | Measure the resistance with a tester. Before measurement, hold the thermistor with your hands to warm it up. | | | | | | | | | |
| Fin temperature thermistor (RT64) | Refer to 11-7. "Test point diagram and voltage",1. "Outdoor electronic control P.C. board", the chart of thermistor. | | | | | | | | | |
| Compressor  | Measure the resistance between terminals using a tester. (Winding temperature : 14°F ~ 104°F) <table border="1"><thead><tr><th colspan="3">Normal (Each phase)</th></tr></thead><tbody><tr><td>MXZ-2A20NA</td><td>MXZ-2A20NA - 1</td><td>MXZ-3A30NA MXZ-3A30NA - 1 MXZ-4A36NA</td></tr><tr><td>0.39Ω~ 0.49Ω</td><td>0.86Ω~ 1.06Ω</td><td>1.29Ω~ 1.49Ω</td></tr></tbody></table> | Normal (Each phase) | | | MXZ-2A20NA | MXZ-2A20NA - 1 | MXZ-3A30NA MXZ-3A30NA - 1 MXZ-4A36NA | 0.39Ω~ 0.49Ω | 0.86Ω~ 1.06Ω | 1.29Ω~ 1.49Ω |
| Normal (Each phase) | | | | | | | | | | |
| MXZ-2A20NA | MXZ-2A20NA - 1 | MXZ-3A30NA MXZ-3A30NA - 1 MXZ-4A36NA | | | | | | | | |
| 0.39Ω~ 0.49Ω | 0.86Ω~ 1.06Ω | 1.29Ω~ 1.49Ω | | | | | | | | |
| Outdoor fan motor  | Measure the resistance between lead wires using a tester. (Part temperature : 14°F ~ 104°F) <table border="1"><thead><tr><th>Normal (Each phase)</th></tr></thead><tbody><tr><td>13.4Ω ~ 16.4Ω</td></tr></tbody></table> | Normal (Each phase) | 13.4Ω ~ 16.4Ω | | | | | | | |
| Normal (Each phase) | | | | | | | | | | |
| 13.4Ω ~ 16.4Ω | | | | | | | | | | |
| R.V. coil | Measure the resistance using a tester. (Part temperature : 14°F ~ 104°F) <table border="1"><thead><tr><th>Normal</th></tr></thead><tbody><tr><td>1.2kΩ ~ 1.56kΩ</td></tr></tbody></table> | Normal | 1.2kΩ ~ 1.56kΩ | | | | | | | |
| Normal | | | | | | | | | | |
| 1.2kΩ ~ 1.56kΩ | | | | | | | | | | |
| Linear expansion valve  | Measure the resistance using a tester.(Part temperature : 14°F ~ 104°F) <table border="1"><thead><tr><th>Color of lead wire</th><th>Normal</th></tr></thead><tbody><tr><td>WHT - RED</td><td rowspan="4">37.4Ω ~ 53.9Ω</td></tr><tr><td>RED - ORN</td></tr><tr><td>YLW - BRN</td></tr><tr><td>BRN - BLU</td></tr></tbody></table> | Color of lead wire | Normal | WHT - RED | 37.4Ω ~ 53.9Ω | RED - ORN | YLW - BRN | BRN - BLU | | |
| Color of lead wire | Normal | | | | | | | | | |
| WHT - RED | 37.4Ω ~ 53.9Ω | | | | | | | | | |
| RED - ORN | | | | | | | | | | |
| YLW - BRN | | | | | | | | | | |
| BRN - BLU | | | | | | | | | | |
| High pressure switch (HPS) MXZ-3A30NA MXZ-3A30NA - 1 MXZ-4A36NA | <table border="1"><thead><tr><th colspan="2">Pressure</th><th>Normal</th></tr></thead><tbody><tr><td rowspan="2">HPS</td><td>537 ± 22 PSIG</td><td>Close</td></tr><tr><td>696 ± 7/15 PSIG</td><td>Open</td></tr></tbody></table> | Pressure | | Normal | HPS | 537 ± 22 PSIG | Close | 696 ± 7/15 PSIG | Open | |
| Pressure | | Normal | | | | | | | | |
| HPS | 537 ± 22 PSIG | Close | | | | | | | | |
| | 696 ± 7/15 PSIG | Open | | | | | | | | |

11-6. Troubleshooting flow

MXZ-2A20NA MXZ-2A20NA - 1 MXZ-3A30NA MXZ-3A30NA - 1 MXZ-4A36NA

Outdoor unit does not operate. (LED display: display OFF)

Ⓐ Check of power supply

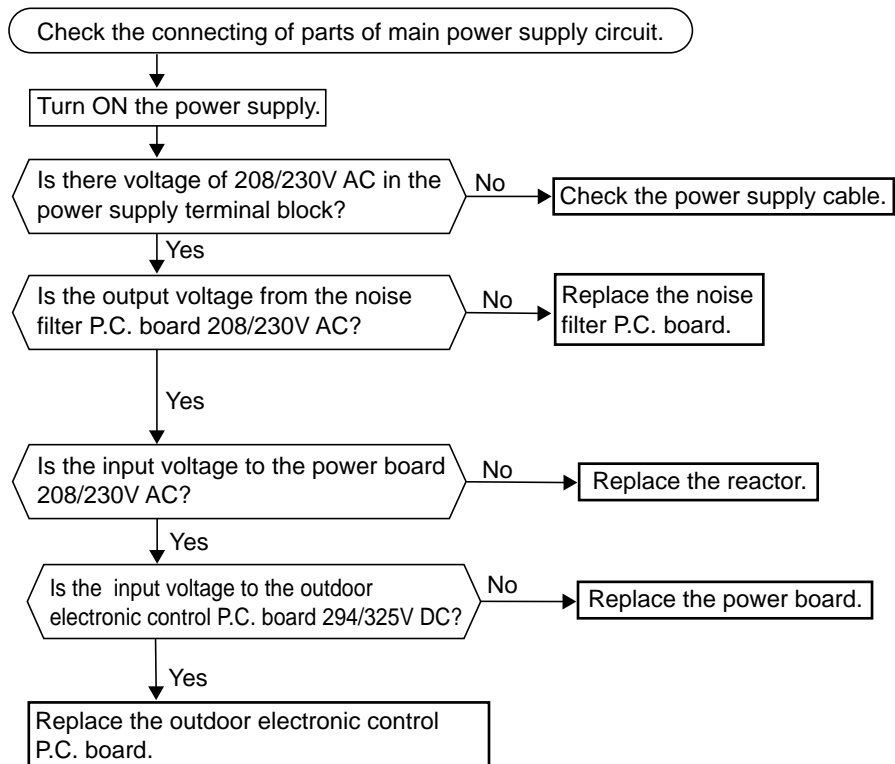

- When unit cannot operate neither by the remote controller nor by EMERGENCY OPERATION switch.
Indoor unit does not operate.
- When OPERATION INDICATOR lamp flashes ON and OFF in every 0.5-second.
Outdoor unit does not operate.

② How to check mis-wiring and serial signal error

LED indication for communication status

Communication status is indicated by the LED.

Unit status

Blinking: normal communication
Lighting: abnormal communication or not connected

Pattern 1 and 2 is repeatedly displayed alternately. Each pattern is displayed for 15 seconds.


NOTE: "Lighting" in the table below does not indicate abnormal communication.

MXZ-2A20NA

MXZ-2A20NA -[1]

MXZ-3A30NA

Outdoor electronic control P.C. board (Parts side)




| Pattern | LED 3 | LED 2 | LED 1 |
|---------|----------|---------------|---------------|
| 1 | Lighting | Unit B status | Unit A status |
| 2 | Goes out | Lighting | Unit C status |



MXZ-3A30NA -[1]

MXZ-4A36NA

Outdoor electronic control P.C. board (Parts side)



| Pattern | LED 1 | LED 2 | LED 3 |
|---------|---------------|---------------|---------------|
| 1 | Unit A status | Unit B status | Unit C status |
| 2 | Unit D status | Lighting | Goes out |

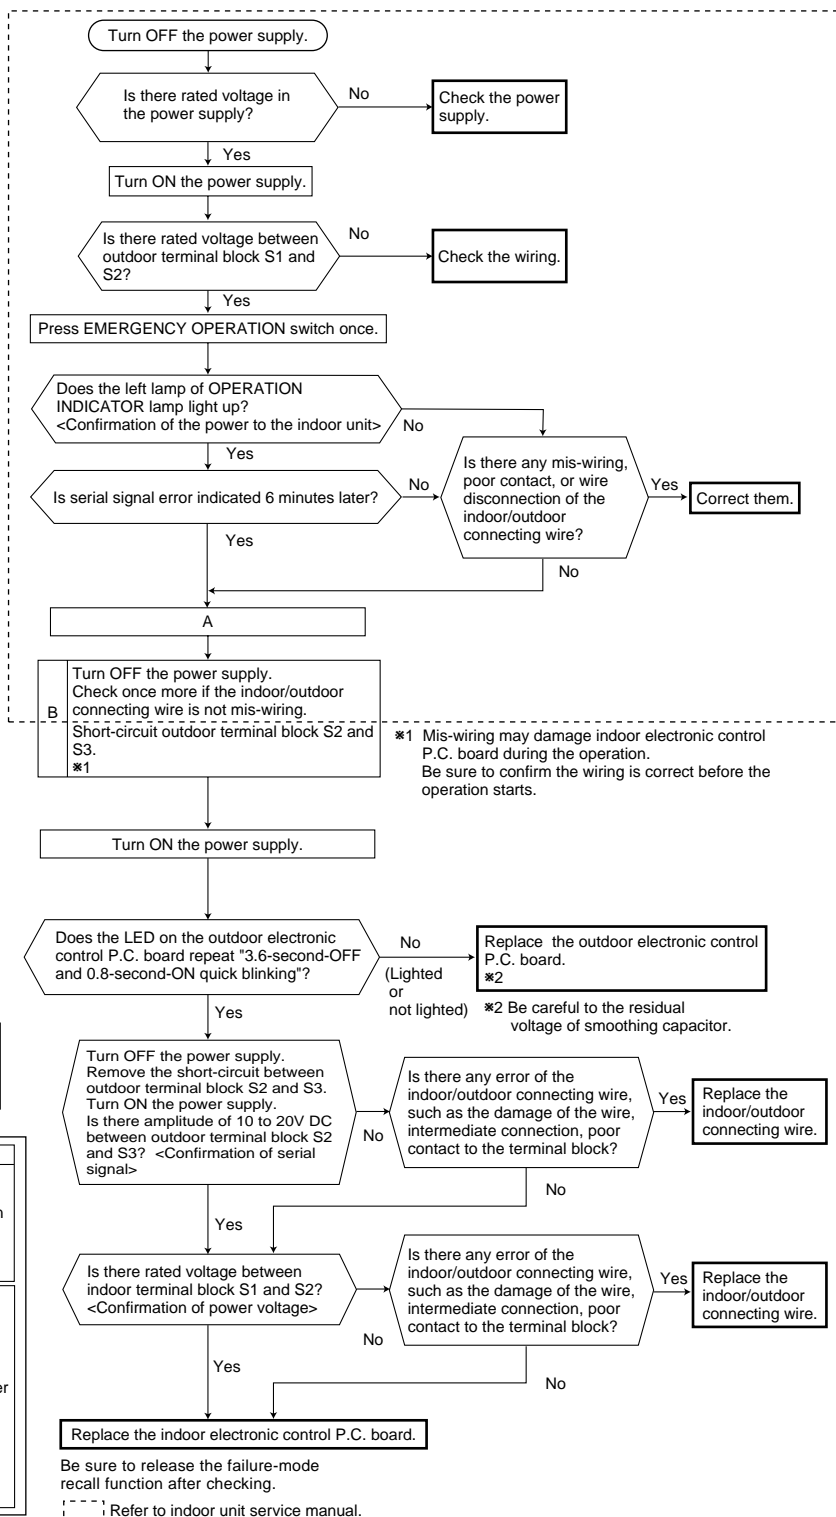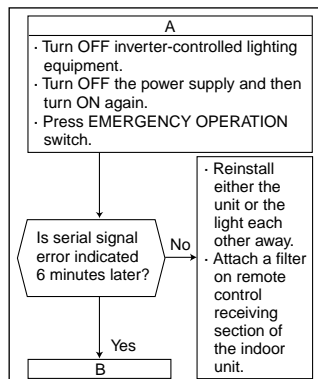

The cooling operation or heating operation does not operate. (LED display: Both LED1 and LED2 lighting)

© Check of R.V. coil

| | |
|-------|---------------------------------------|
| CN912 | Noise filter P.C. board |
| CN781 | Outdoor electronic control P.C. board |

• When heating operation does not work.

1. Disconnect the lead wire leading to the compressor.
2. 3 minutes after turning ON the power supply, start EMERGENCY OPERATION in HEAT mode.

Is there voltage of 208/230V AC between pin1 and pin 2 at connector CN912?

Yes

Turn OFF the power supply of indoor and outdoor unit.

Disconnect the connector CN912. Is there normal resistance to R.V. coil?

No

Replace the R.V. coil.

Yes

Replace the 4-way valve.

No

1. Turn OFF the power supply of indoor and outdoor unit, and disconnect the connector CN781.
2. 3 minutes after turning ON the power supply, start EMERGENCY OPERATION in HEAT mode.

Is there voltage of 12V DC between the connector CN781 pin 5 (+) and pin 3 (-) ?

No

Replace the outdoor electronic control P.C. board.

Yes

Replace the power P.C. board or the noise filter P.C. board.

• When cooling operation does not work.

1. Disconnect the lead wire leading to the compressor.
2. 3 minutes after turning ON the power supply, start EMERGENCY OPERATION in COOL mode.

Is there voltage of 208/230V AC between pin1 and pin 2 at connector CN912? *

Yes

* If the connector CN912 is not connected or R.V. coil is open, voltage occurs between terminals even when the control is OFF.

No

Replace the 4-way valve.

1. Turn OFF the power supply of the indoor and the outdoor unit, and disconnect the connector CN781.
2. 3 minutes after turning ON the power supply, start EMERGENCY OPERATION in COOL mode.

Is there voltage of 12V DC between the connector CN781 pin 5 (+) and pin 3 (-) ?

No


Replace the noise filter P.C. board.

Yes

Replace the outdoor electronic control P.C. board.


- When cooling, heat exchanger of non-operating indoor unit frosts.
- When heating, non-operating indoor unit get warm.

⑩ Check of LEV

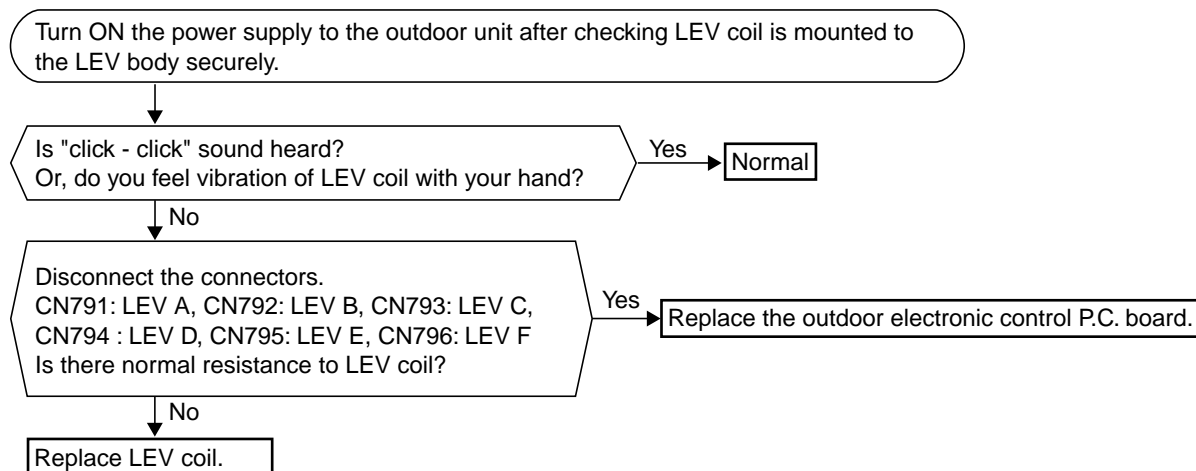


- When heating, room does not get warm.
- When cooling, room does not get cool.

⑤ How to check inverter/ compressor

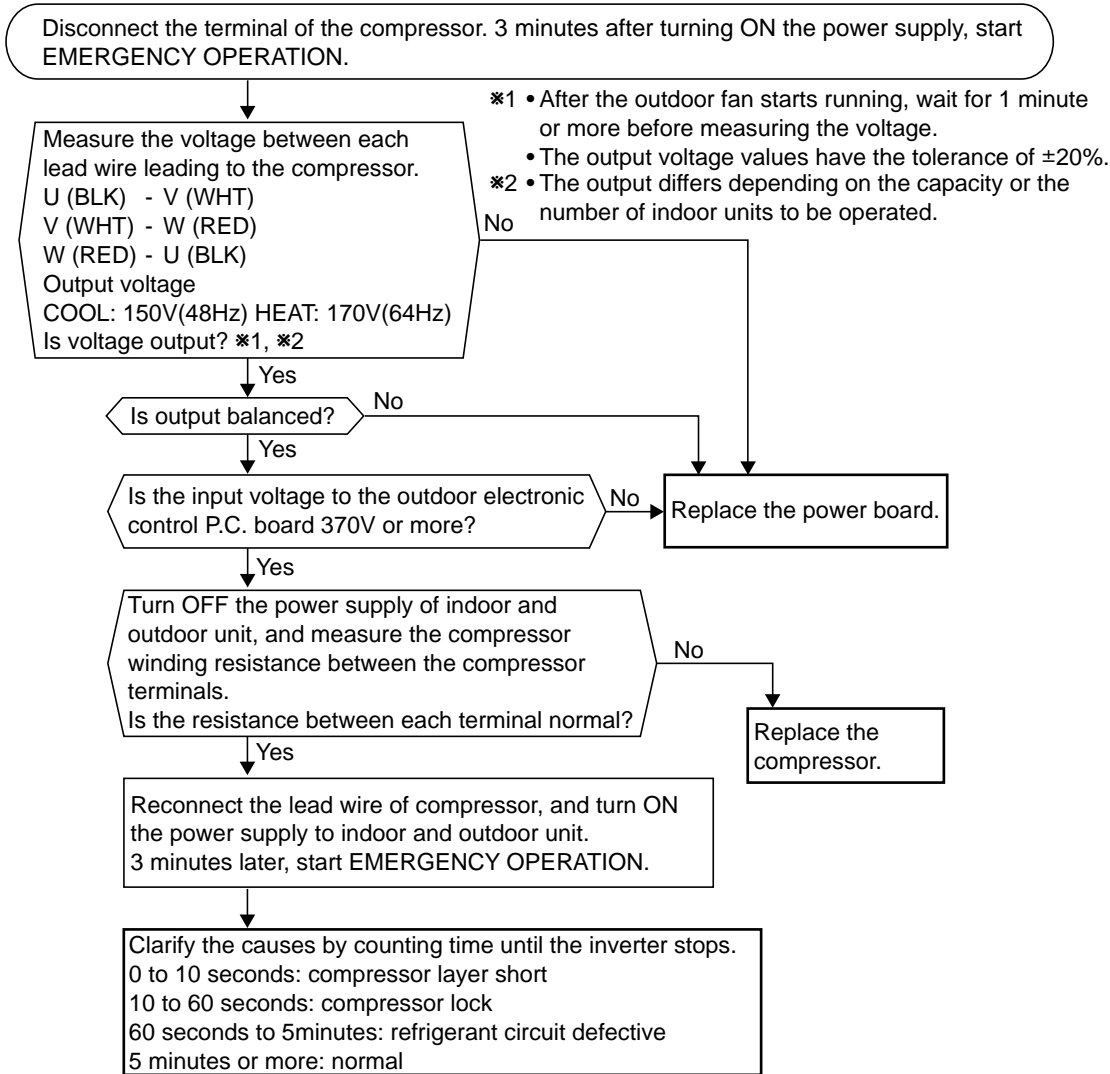

• When thermistor is abnormal.

Ⓔ Check of outdoor thermistors

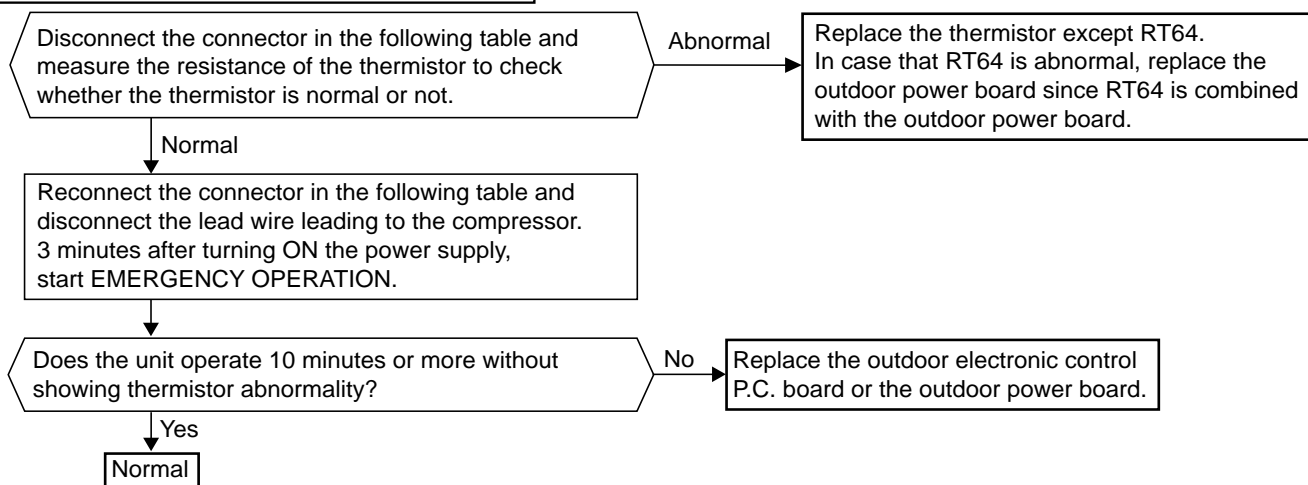


| Thermistor | Symbol | Connector, Pin No. | Board |
|------------------------------------|--------|-----------------------------|---------------------------------------|
| Defrost | RT61 | Between CN661 pin1 and pin2 | Outdoor electronic control P.C. board |
| Discharge temperature | RT62 | Between CN661 pin3 and pin4 | |
| Outdoor heat exchanger temperature | RT68 | Between CN661 pin7 and pin8 | |
| Gas pipe temperature (Unit A) * | RT6A | Between CN662 pin1 and pin2 | |
| Gas pipe temperature (Unit B) * | RT6B | Between CN662 pin3 and pin4 | |
| Gas pipe temperature (Unit C) * | RT6C | Between CN662 pin5 and pin6 | |
| Ambient temperature | RT65 | Between CN663 pin1 and pin2 | Outdoor power board |
| Fin temperature | RT64 | Between CN3 pin1 and pin2 | |

* Except MXZ-2A20NA - [1], MXZ-3A30NA - [1] and MXZ-4A36NA.

• Fan motor does not operate or stops operating shortly after starting the operation.


Ⓕ Check of outdoor fan motor

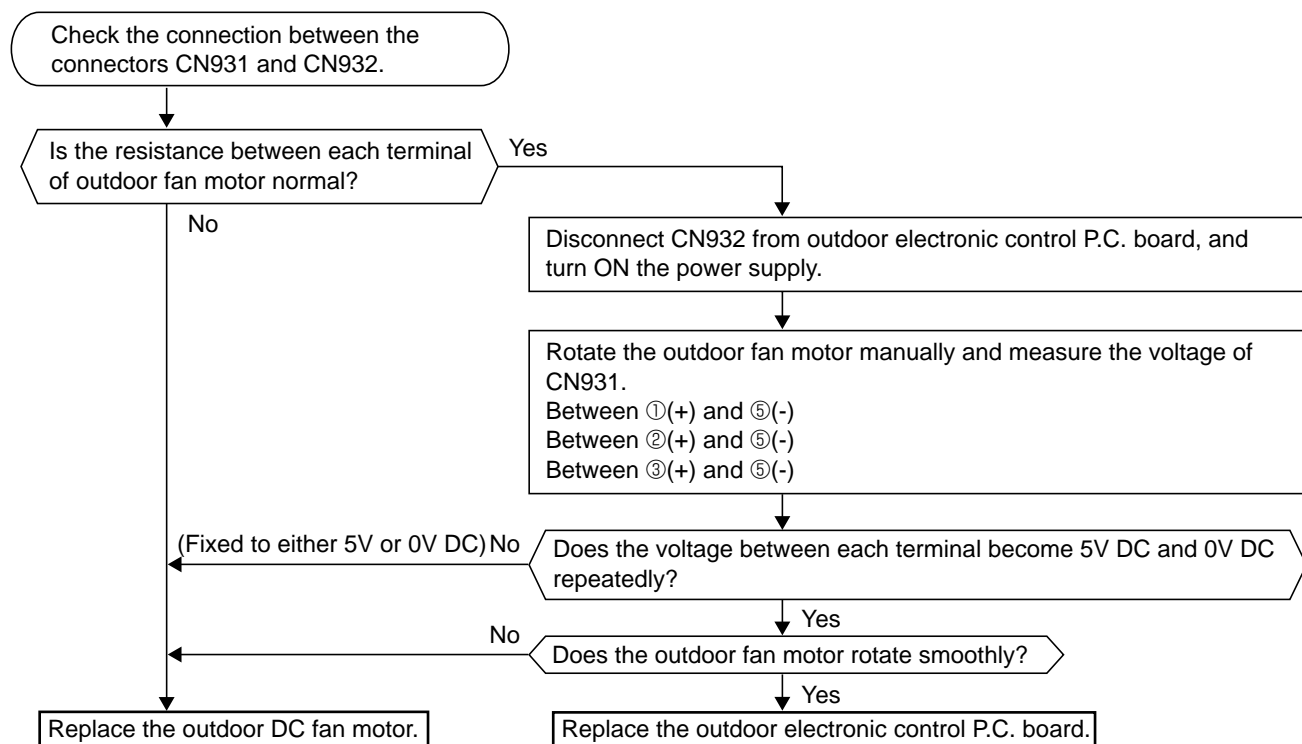

- When the operation frequency does not go up from lowest frequency.

⊕ Check of HPS

MXZ-3A30NA MXZ-3A30NA - ① MXZ-4A36NA

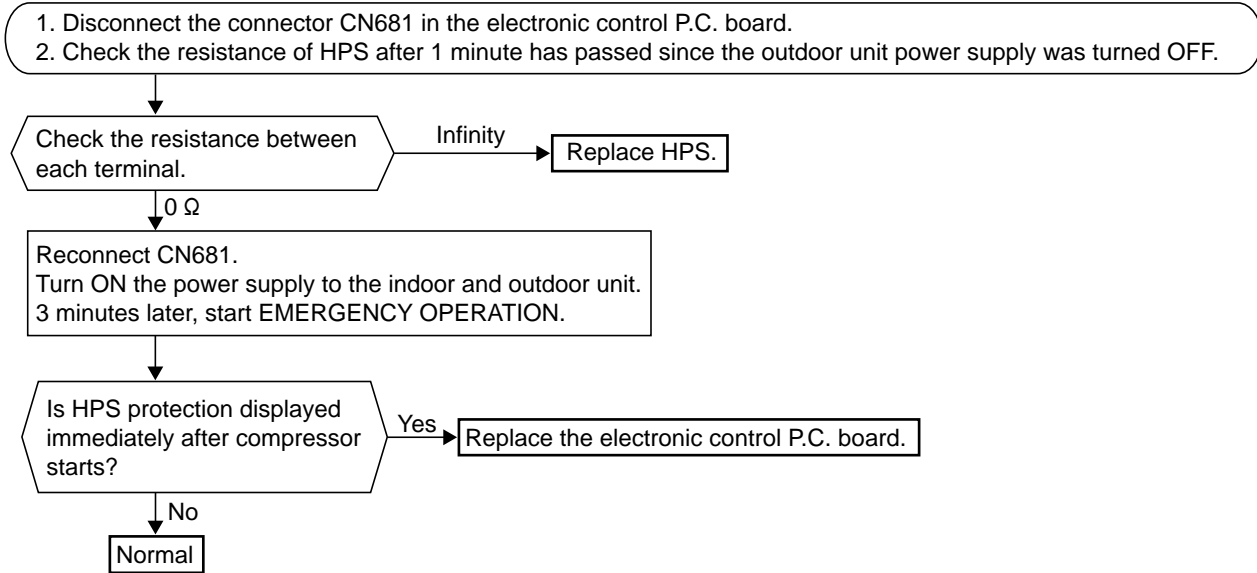

① The other cases



Indoor unit does not operate. (different operating models in multi system)

- When you try to run two indoor units simultaneously, one for cooling and the other for heating, the unit which transmits signal to the outdoor units earlier decides the operation mode.
- When the above situation occurs, set all the indoor units to the same mode, turn OFF the indoor units, and then turn them back ON.
- Though the top of the indoor unit sometimes gets warm, this does not mean malfunction. The reason is that the refrigerant gas continuously flows into the indoor unit even while it is not operating.


11-7. Test point diagram and voltage

1. Outdoor electronic control P.C. board


MXZ-2A20NA MXZ-2A20NA - 1 MXZ-3A30NA

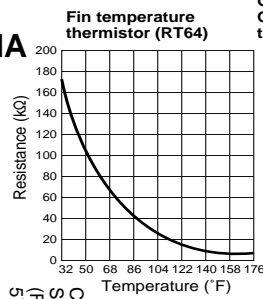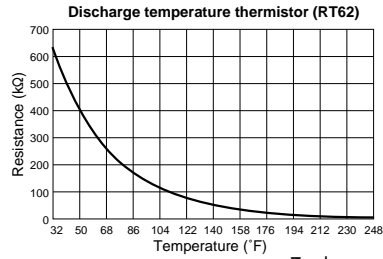





Defrost thermistor (RT61)
Ambient temperature thermistor (RT65)
Gas pipe temperature thermistor (RT6A, 6B, 6C)*
Outdoor heat exchanger thermistor (RT68)

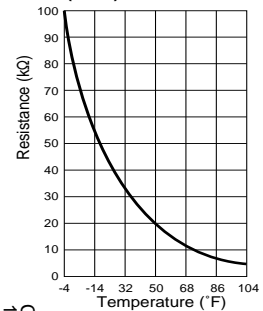

* Except MXZ-2A20NA - 1.

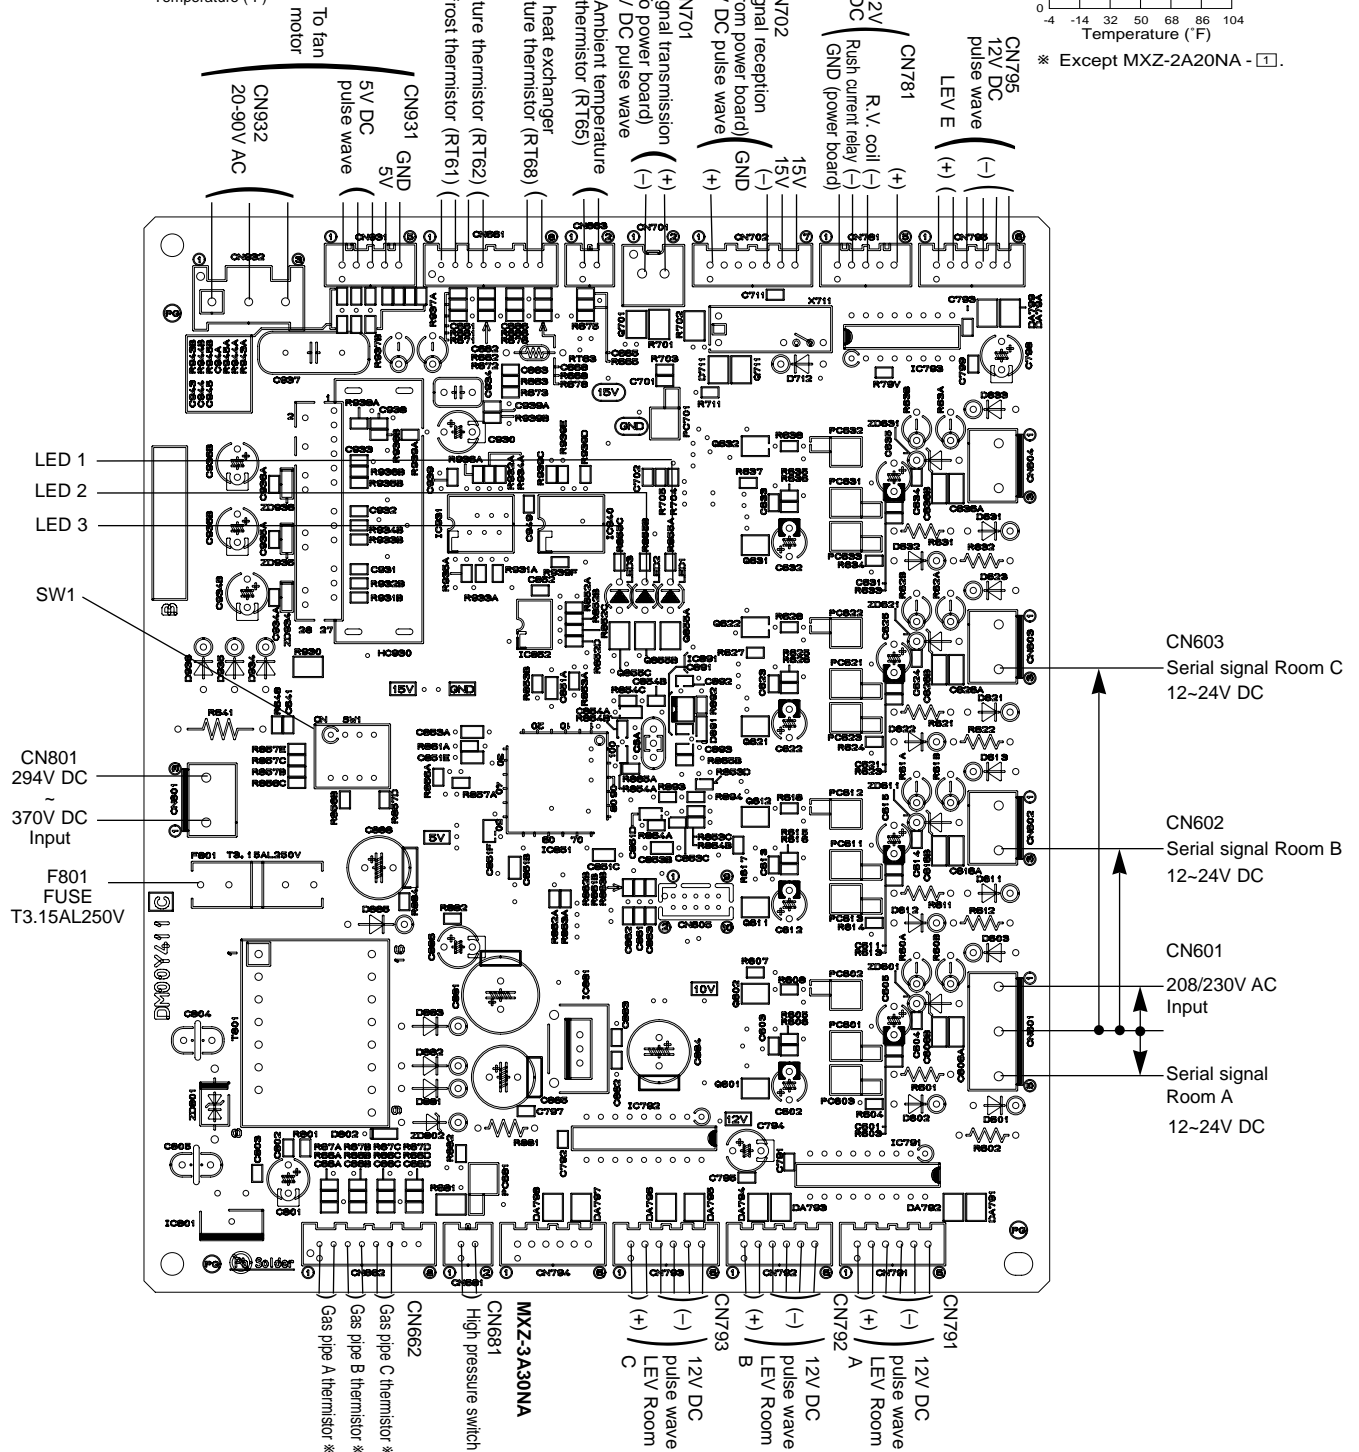


MXZ-3A30NA - 1 MXZ-4A36NA

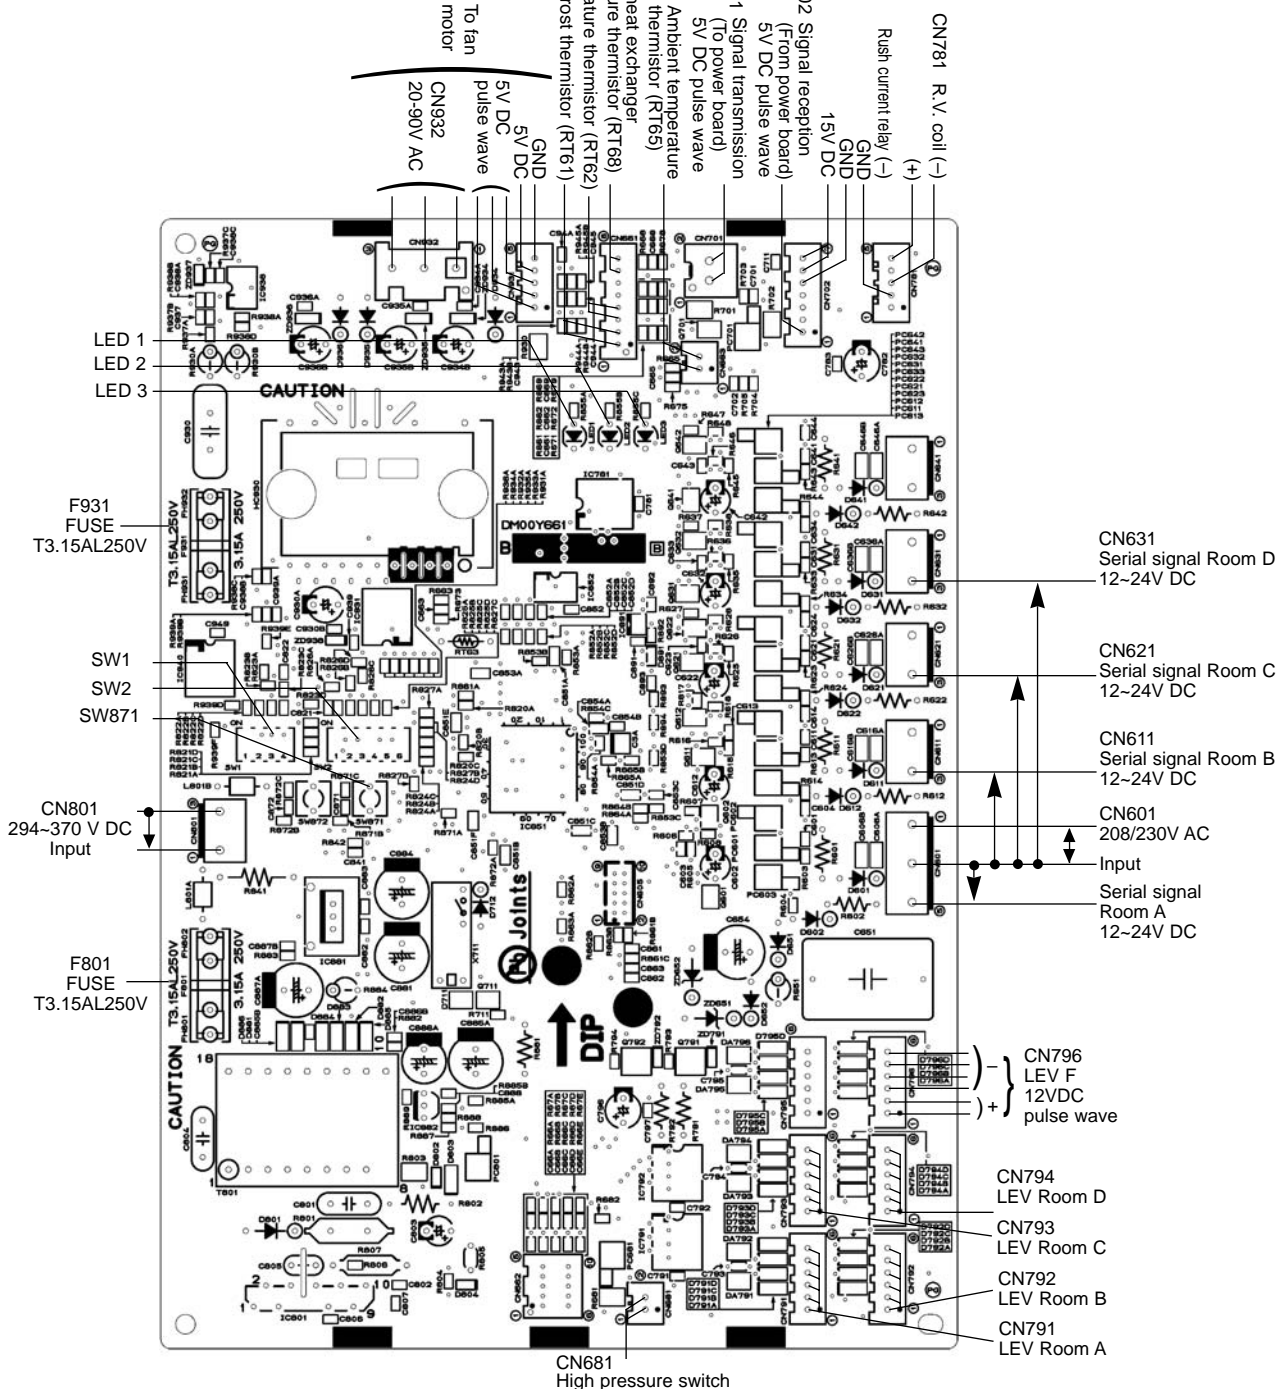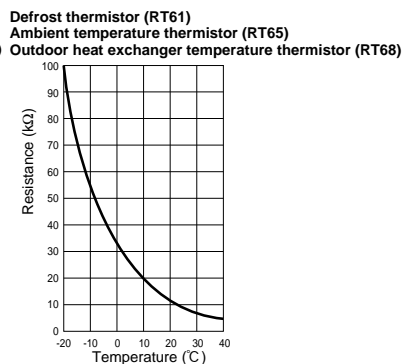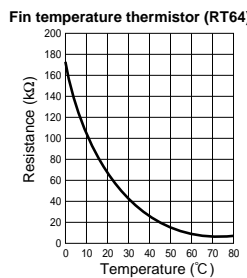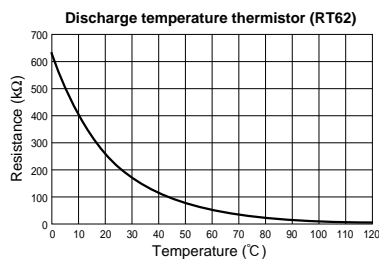


2. Noise filter P.C. board



MXZ-2A20NA MXZ-2A20NA - 1 MXZ-3A30NA

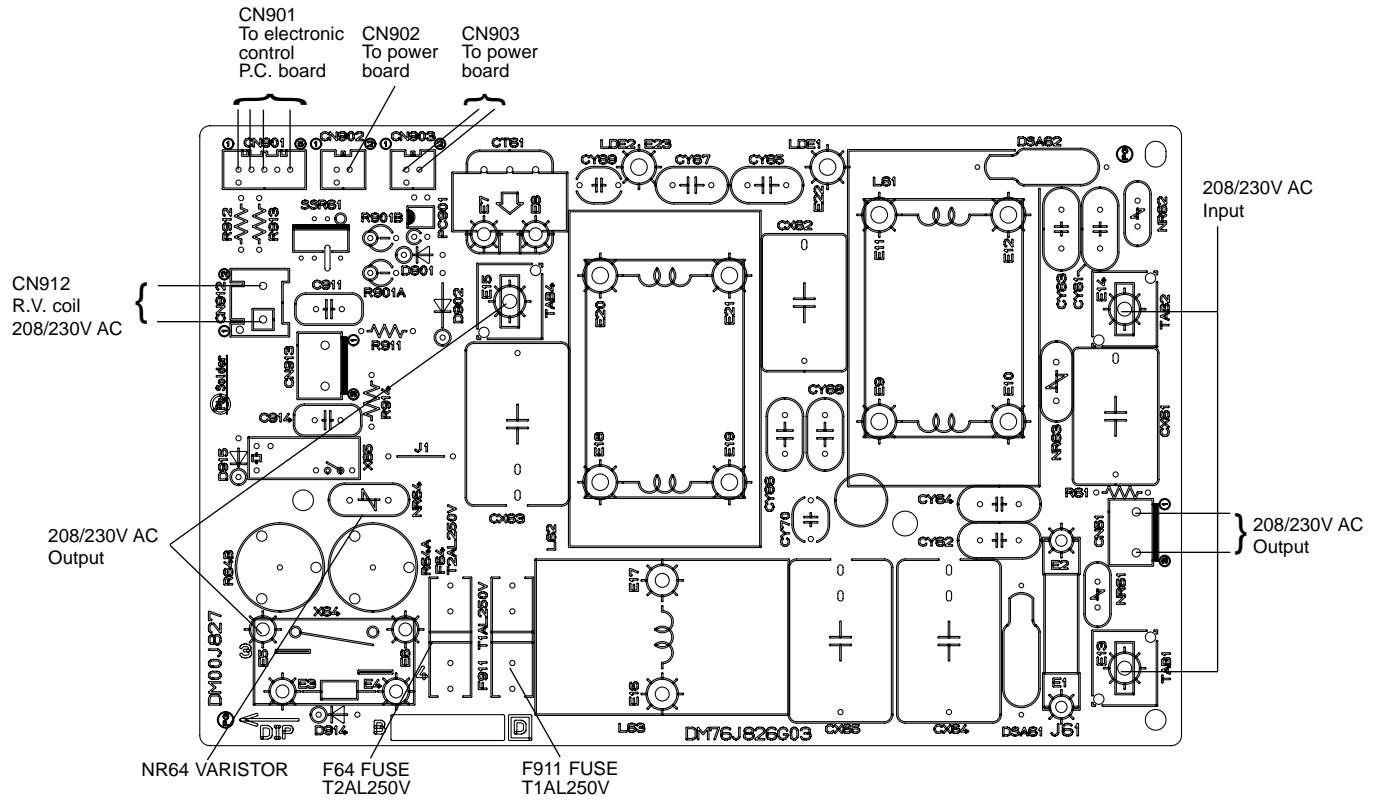

MXZ-3A30NA - 1 MXZ-4A36NA

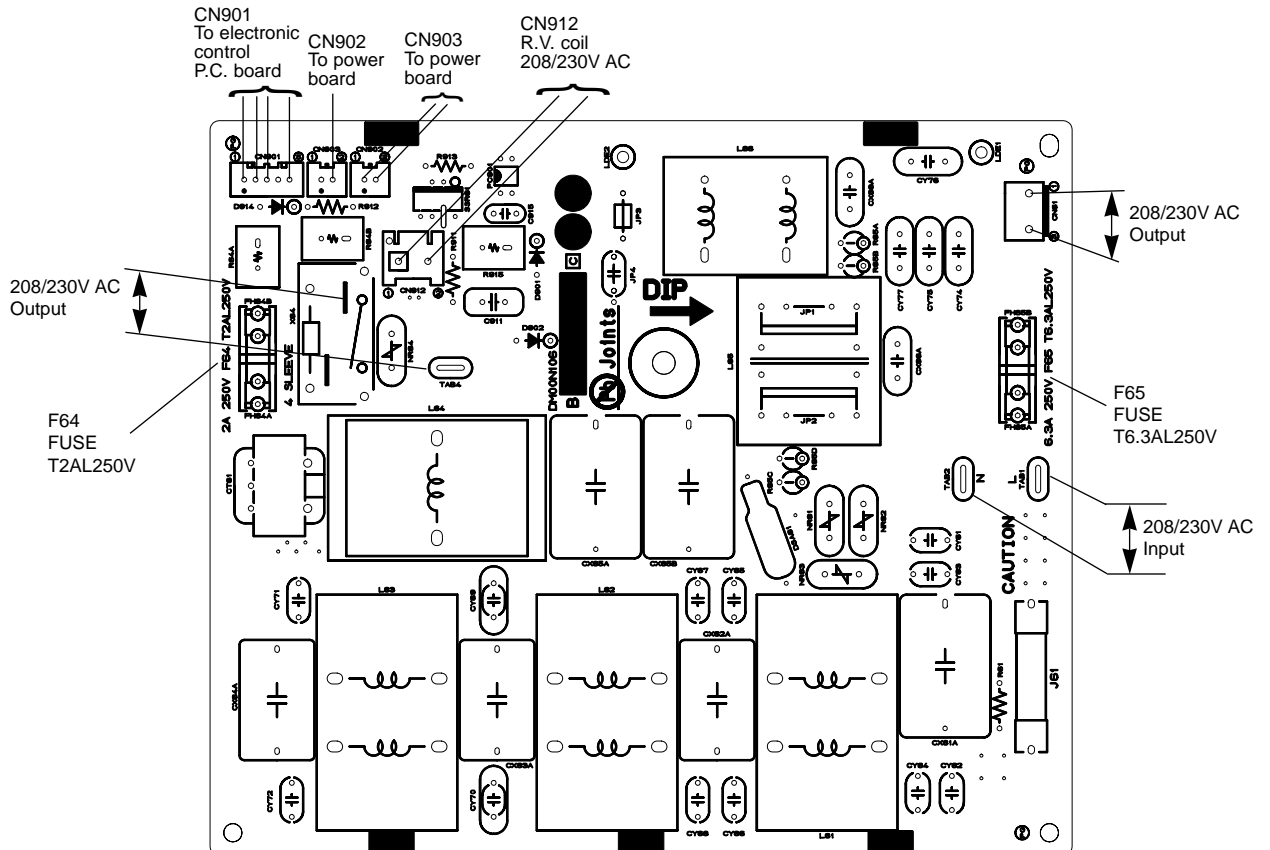


3. Outdoor Power board **MXZ-2A20NA MXZ-2A20NA - 1 MXZ-3A30NA MXZ-3A30NA - 1 MXZ-4A36NA**

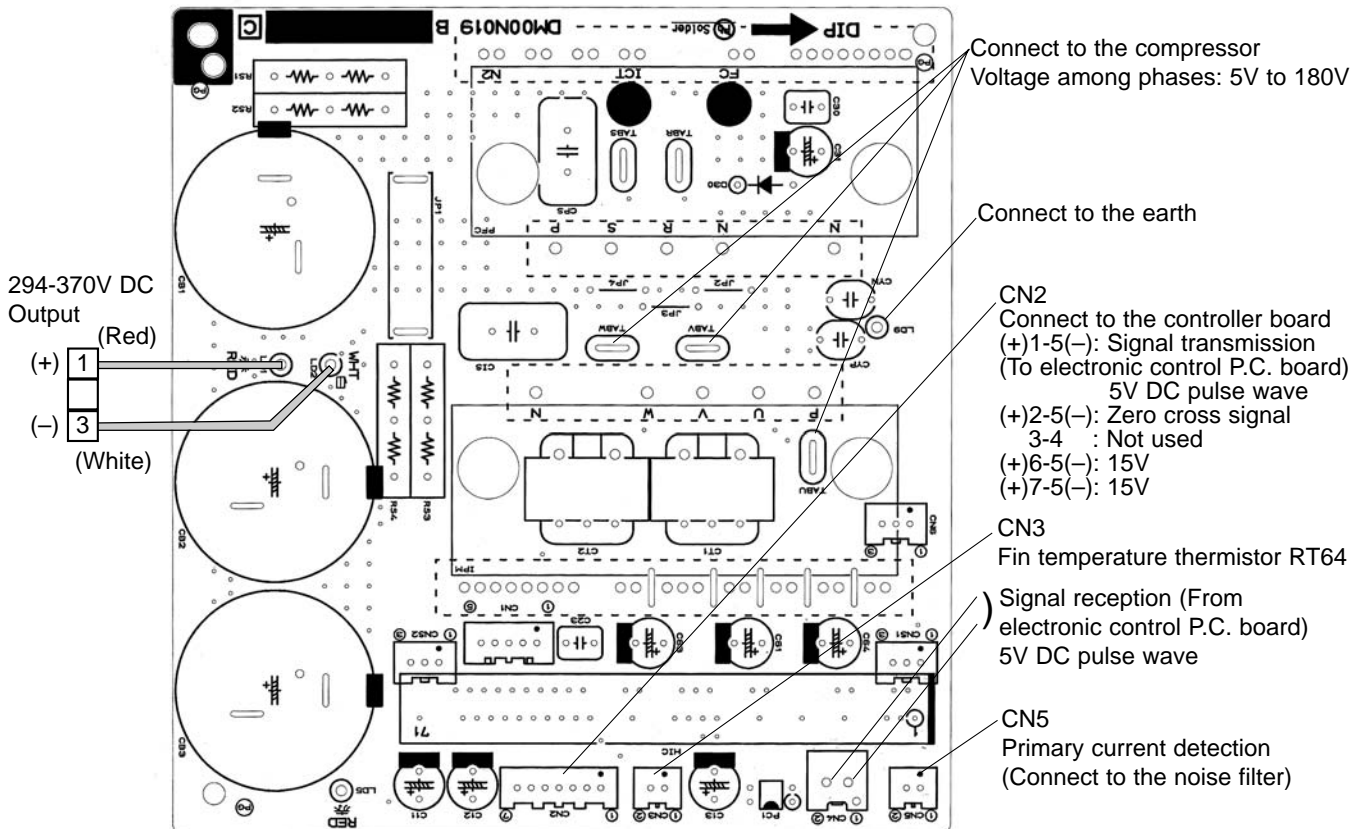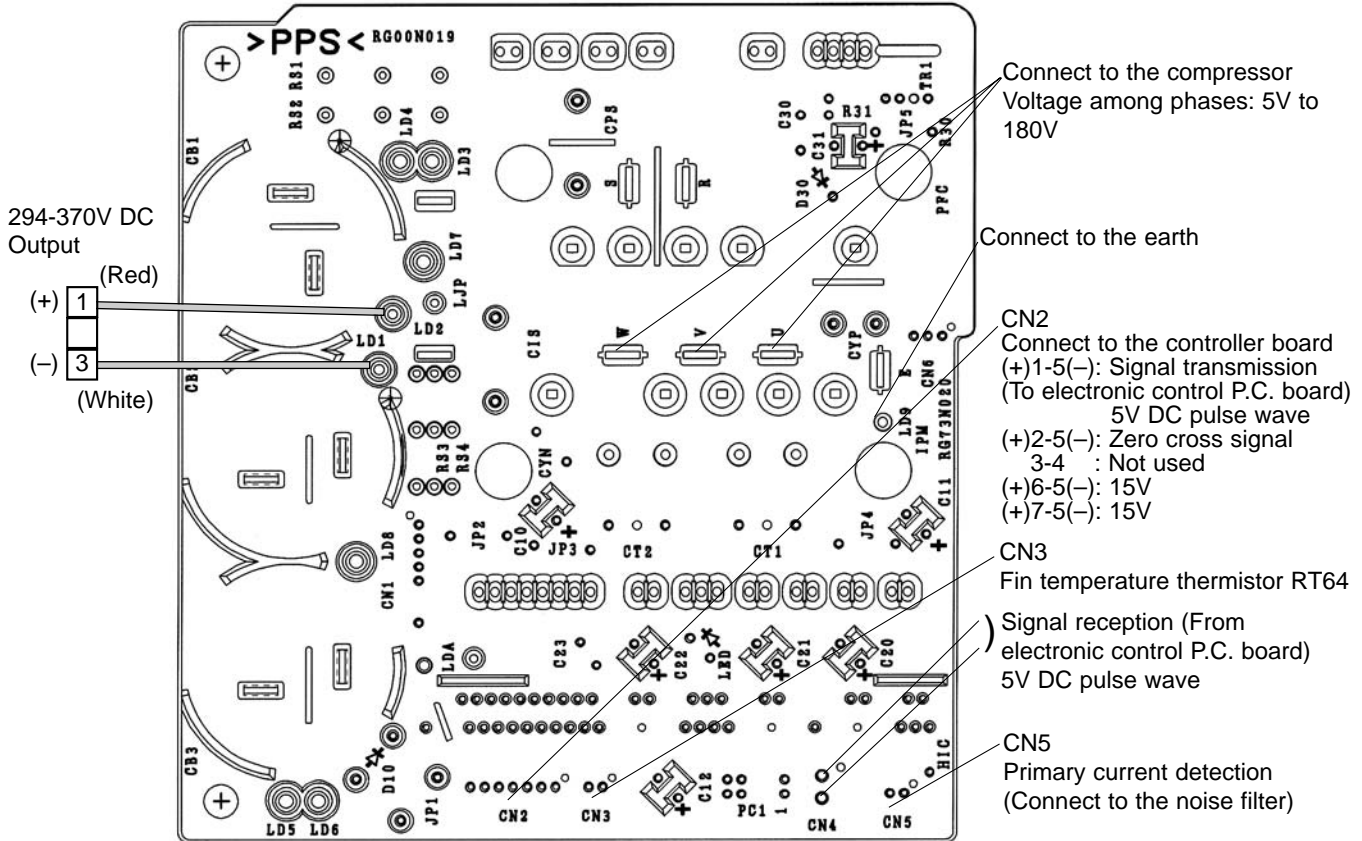


<"Terminal with locking mechanism" Detaching points>

The terminal which has the locking mechanism can be detached as shown below.
 There are two types (Refer to (1) and (2)) of the terminal with locking mechanism.
 The terminal without locking mechanism can be detached by pulling it out.
 Check the shape of the terminal before detaching.

(1) Slide the sleeve and check if there is a locking lever or not.


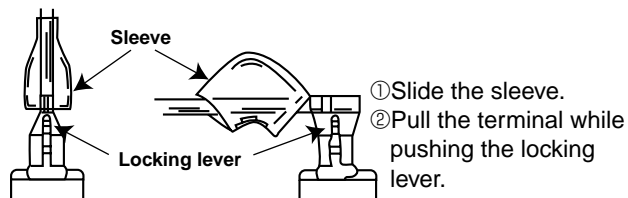


(2) The terminal with this connector has the locking mechanism.

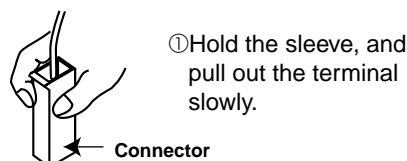

12-1. MXZ-2A20NA MXZ-2A20NA - 1

OUTDOOR UNIT
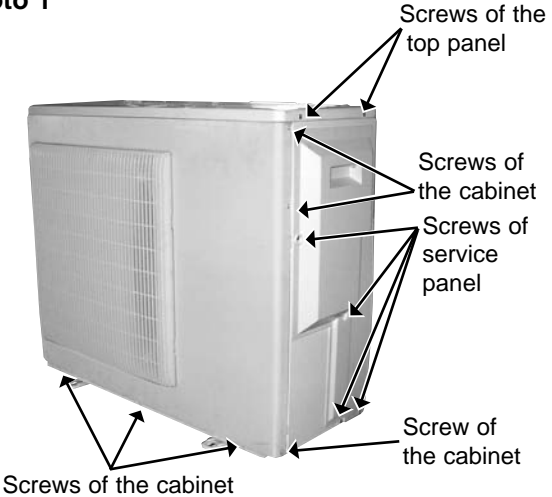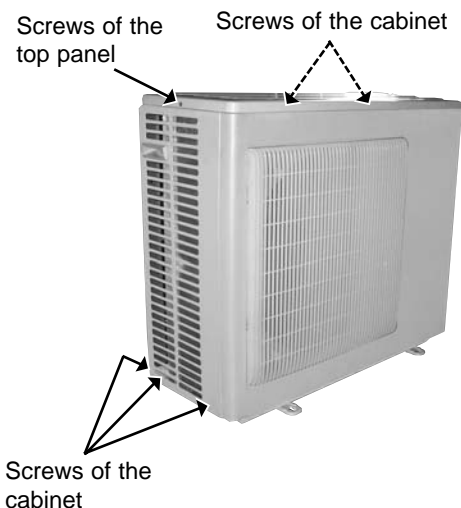
| OPERATING PROCEDURE | PHOTOS |
|---|--|
| <p>1. Removing the compressor</p> <p>(1) Remove the screws of the top panel, and remove the top panel.</p> <p>(2) Remove the screws of the service panel, and remove the service panel. Recover refrigerant gas.</p> <p>(3) Remove the screws of the cabinet, and remove the cabinet.</p> <p>(4) Remove the screws of the back panel, and remove the back panel (Photo 3).</p> <p>(5) Disconnect the compressor lead wire from terminal of the compressor (U, V, W).</p> <p>(6) Disconnect the outdoor electronic control P.C. board connectors: CN661, CN662 (MXZ-2A20NA), CN663, CN791, CN792, CN795, CN931, CN932 Disconnect the noise filter P.C. board connector: CN912</p> <p>(7) Remove the screws of the electrical parts, and remove the electrical parts (Photo 4).</p> <p>(8) Remove the propeller.</p> <p>(9) Remove the screws of the separator, and remove the separator (Photo 6).</p> <p>(10) Remove the sound proof felt (Photo 6).</p> <p>(11) Detach the welded parts of the compressor suction and discharge pipes (Photo 5).</p> <p>(12) Remove the compressor nuts and remove the compressor.</p> | <p>Photo 1</p>  <p>Photo 2</p>  |

OPERATING PROCEDURE

PHOTOS

Photo 5

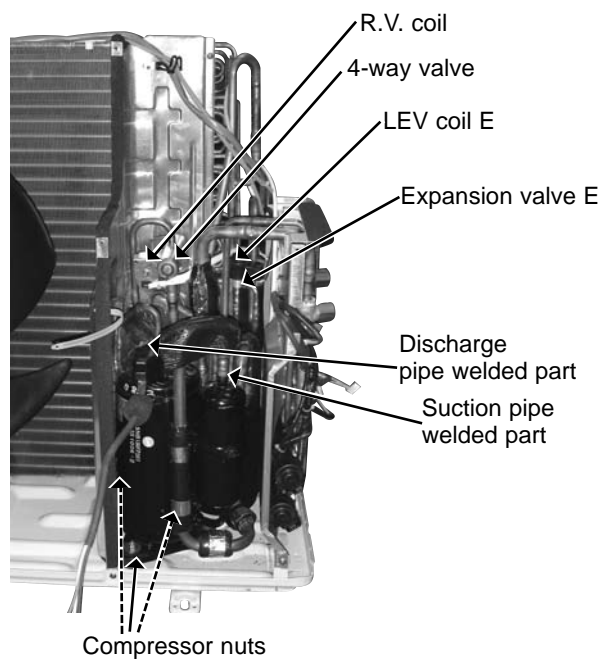


Photo 3


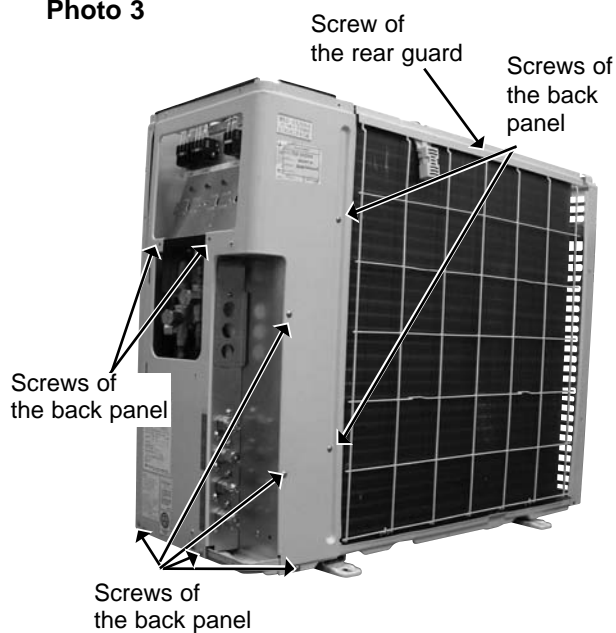



Photo 4

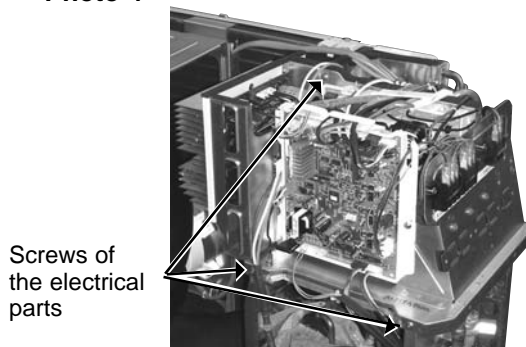




2. Removing the fan motor

- (1) Remove the top panel, the service panel, and the cabinet (Photo 1).
- (2) Disconnect the connectors CN931 and CN932 on the outdoor electronic control P.C. board.
- (3) Remove the propeller.
- (4) Remove the fan motor.



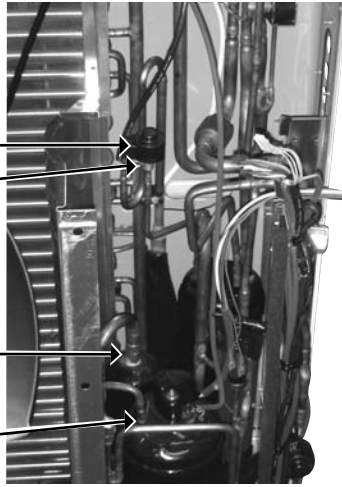
Photo 6

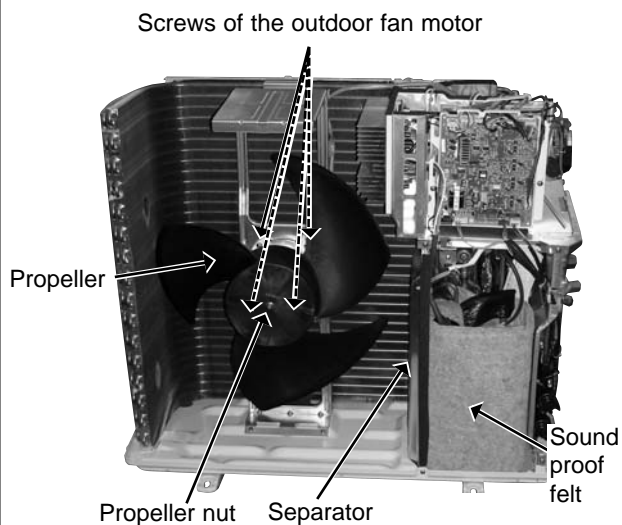

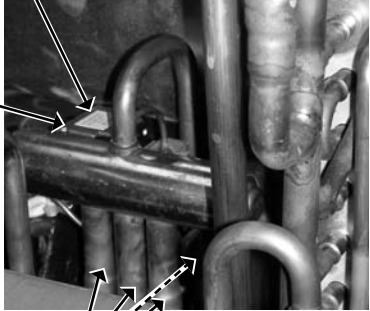
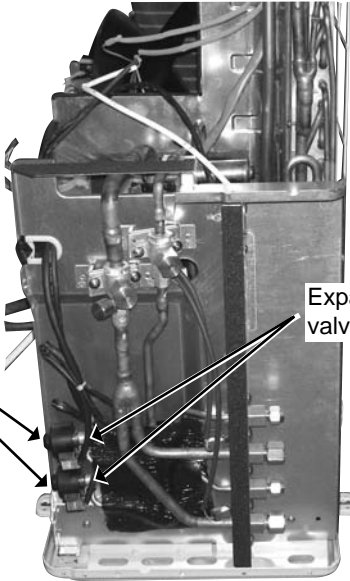
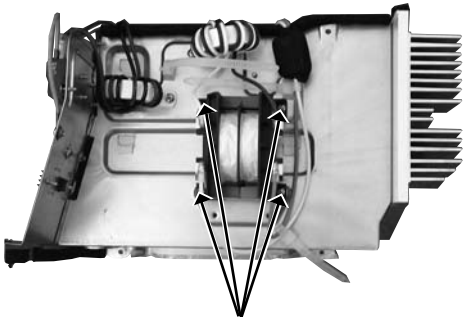



| OPERATING PROCEDURE | PHOTOS |
|--|---|
| <p>3. Removing the 4-way valve</p> <p>(1)Remove the top panel (Photo 1).</p> <p>(2)Remove the service panel, the cabinet and the back panel (Photo 1, 2, 3).</p> <p>Recover refrigerant gas.</p> <p>(3)Remove the electrical parts (Photo 4).</p> <p>(4)Detach the welded parts of 4-way valve and pipe.</p> | <p>Photo 7</p> <p>R.V. coil</p> <p>4-way valve</p> <p>Welded parts</p>  |
| <p>4. Removing the expansion valve</p> <p>(1)Remove the top panel (Photo 1).</p> <p>(2)Remove the service panel, the cabinet and the back panel (Photo 1, 2, 3).</p> <p>(Gas recovery is not required if the unit is pumped down.)</p> <p>(3)Remove the cabinet for removing LEV E (Photo 1, 2, 5).</p> <p>(4)Remove the electrical parts for removing LEV E (Photo 4, 5).</p> <p>(5)Remove the LEV coils.</p> <p>(6)Detach the welded parts of expansion valves and pipes.</p> | <p>Photo 8</p> <p>LEV coils</p> <p>Expansion valves</p>  |
| <p>5. Removing the reactor</p> <p>(1)Remove the top panel (Photo 1).</p> <p>(2)Remove the service panel, cabinet, back panel and the relay panel.</p> <p>(3)Disconnect the reactor lead wire from the terminal of the reactor.</p> <p>(4)Remove the screws of the reactor, and remove the reactor (Photo 9).</p> | <p>Photo 9</p> <p>Screws of the reactor</p>  |

12-2. MXZ-3A30NA OUTDOOR UNIT
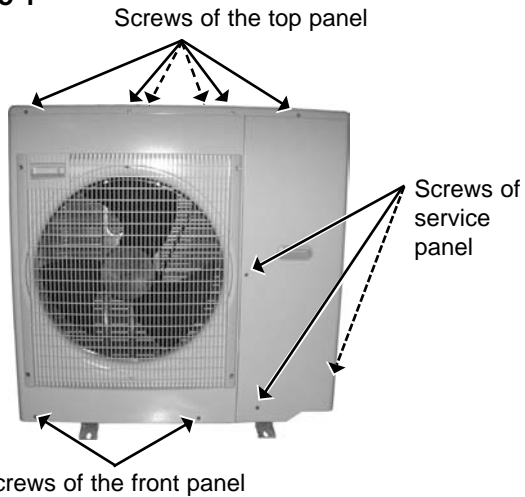
| OPERATING PROCEDURE | PHOTOS |
|---|--|
| <p>1. Removing the compressor</p> <p>(1) Remove the screws of the top panel, and remove the top panel (Photo 1).</p> <p>(2) Remove the screws of the service panel, and remove the service panel (Photo 1). Recover refrigerant gas.</p> <p>(3) Remove the screws of the front panel, and remove the front panel.</p> <p>(4) Disconnect the compressor lead wire from terminal of compressor (U, V, W).</p> <p>(5) Disconnect the outdoor electronic control P.C. board connectors: CN661, CN662, CN663, CN681, CN791, CN792, CN793, CN795, CN931, CN932 Disconnect the noise filter P.C. board connector: CN912</p> <p>(6) Remove the screws of the electrical parts, and remove the electrical parts (Photo 2).</p> <p>(7) Remove the propeller.</p> <p>(8) Remove the screws of the separator, and remove the separator.</p> <p>(9) Remove the sound proof felt.</p> <p>(10) Detach the welded parts of the compressor suction and discharge pipes (Photo 3).</p> <p>(11) Remove the compressor nuts and remove the compressor.</p> | <p>Photo 1</p>  <p>Screws of the top panel</p> <p>Screws of service panel</p> <p>Screws of the front panel</p> <p>Photo 2</p>  <p>Screws of the electrical parts</p> <p>Photo 3</p>  <p>LEV coil E</p> <p>Expansion valve E</p> <p>Suction pipe welded part</p> <p>Discharge pipe welded part</p> |

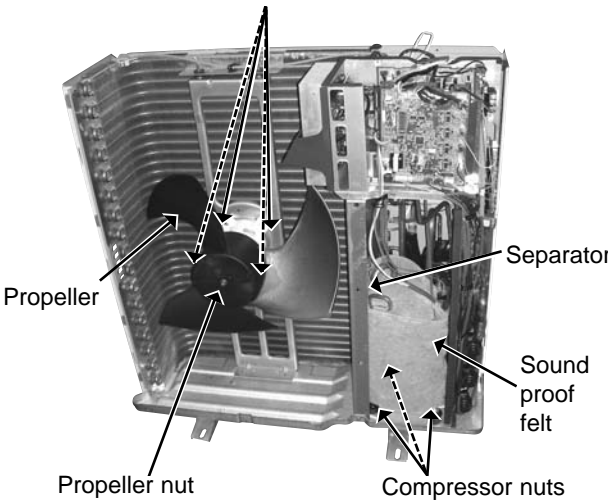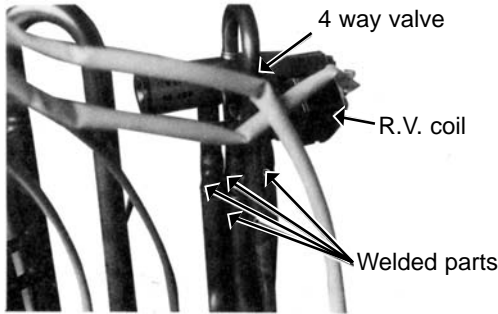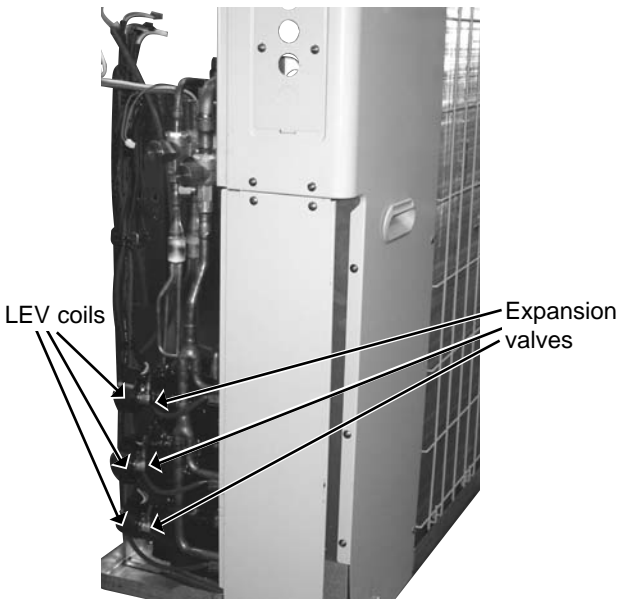

| OPERATING PROCEDURE | PHOTOS |
|--|---|
| <p>2. Removing the fan motor</p> <p>(1)Remove the top panel, the service panel, and the front panel (Photo 1).</p> <p>(2)Disconnect the connectors CN931 and CN932 on the outdoor electronic control P.C. board.</p> <p>(3)Remove the propeller.</p> <p>(4)Remove the fan motor.</p> | <p>Photo 4</p> <p>Screws of the outdoor fan motor</p>  |
| <p>3. Removing the 4-way valve</p> <p>(1)Remove the top panel (Photo 1).</p> <p>(2)Remove the service panel, rear panel, and pipe cover. Recover refrigerant gas.</p> <p>(3)Remove the electrical parts (Photo 2).</p> <p>(4)Detach the welded parts of 4-way valve and pipe.</p> | <p>Photo 5</p>  |
| <p>4. Removing the expansion valve</p> <p>(1)Remove the top panel (Photo 1).</p> <p>(2)Remove the service panel (Photo 1). (Gas recovery is not required if the unit is pumped down.)</p> <p>(3)Remove the front panel for removing LEV E (Photo 1, 3).</p> <p>(4)Remove the electrical parts for removing LEV E (Photo 2, 3).</p> <p>(5)Remove the LEV coils.</p> <p>(6)Detach the welded parts of expansion valves and pipes.</p> | <p>Photo 6</p>  |
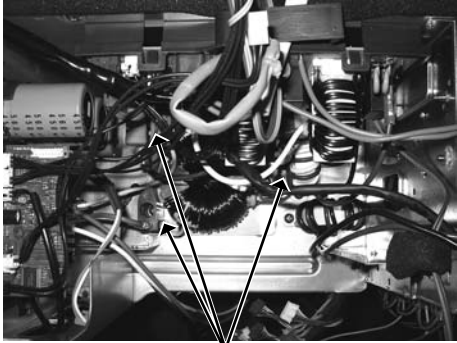
| OPERATING PROCEDURE | PHOTOS |
|---|---|
| <p>5. Removing the reactor</p> <p>(1)Remove the top panel (Photo 1).</p> <p>(2)Disconnect the reactor lead wire.</p> <p>(3)Remove the screws of the reactor, and remove the reactor.</p> | <p>Photo 7</p>  <p>Screws of the reactor</p> |

12-3. MXZ-3A30NA - 1 MXZ-4A36NA OUTDOOR UNIT


Photo : MXZ-3A30NA - 1

OPERATING PROCEDURE

1. Removing the compressor

- (1) Remove the screws of the top panel, and remove the top panel.
- (2) Remove the screws of the service panel, and remove the service panel.
Recover refrigerant gas.
- (3) Remove the screws of the front panel, and remove the front panel.
- (4) Remove the screws of the rear panel, and remove the rear panel.
- (5) Disconnect the compressor lead wire from terminal of compressor (U, V, W).
- (6) Disconnect the outdoor electronic control P.C. board connectors:
CN661, CN663, CN681, CN791, CN792, CN793, CN794 (MXZ-4A36NA), CN796, CN931, CN932
Disconnect the noise filter P.C. board connector:
CN912
- (7) Remove the screws of the electrical parts, and remove the electrical parts.
- (8) Remove the propeller.
- (9) Remove the screws of the separator, and remove the separator.
- (10) Remove the sound proof felt (Photo 5).
- (11) Detach the welded parts of the compressor suction and discharge pipes (Photo 4).
- (12) Remove the compressor nuts and remove the compressor.

Photo 4

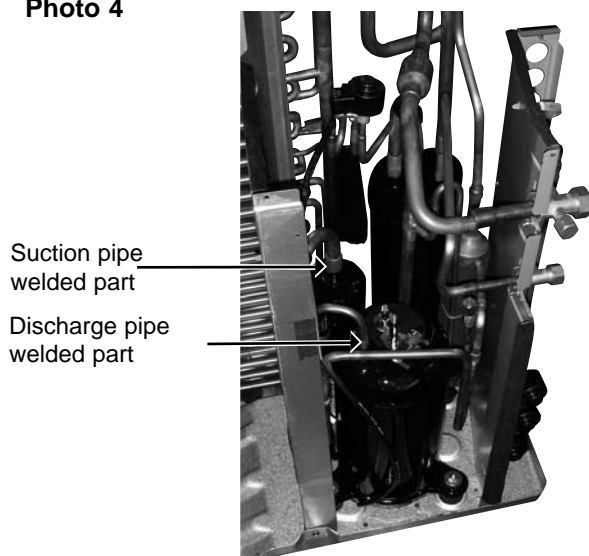

PHOTOS

Photo 1 Screws of the top panel

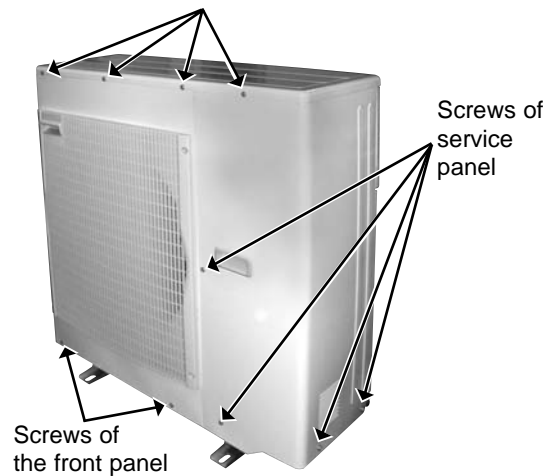


Photo 2







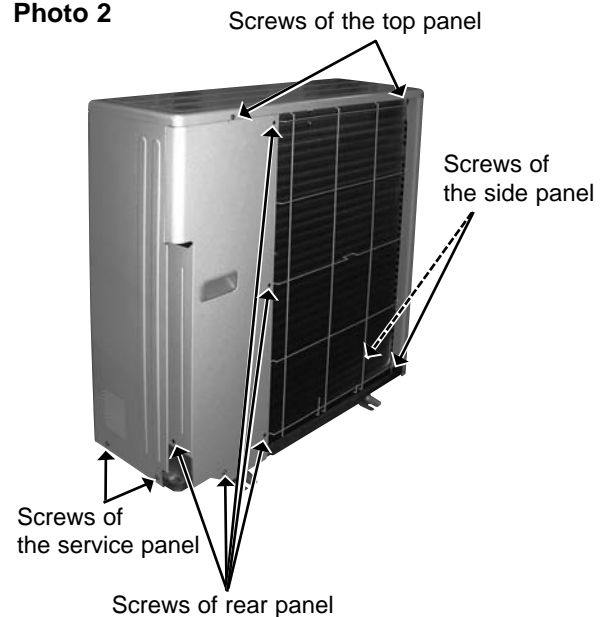


Photo 3

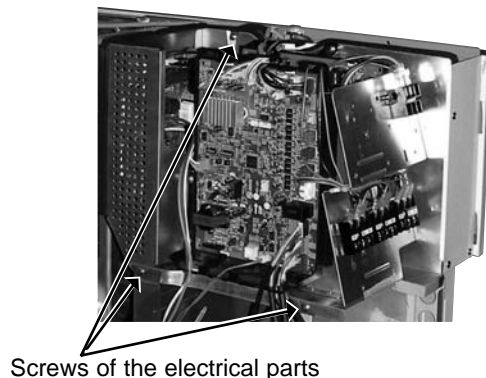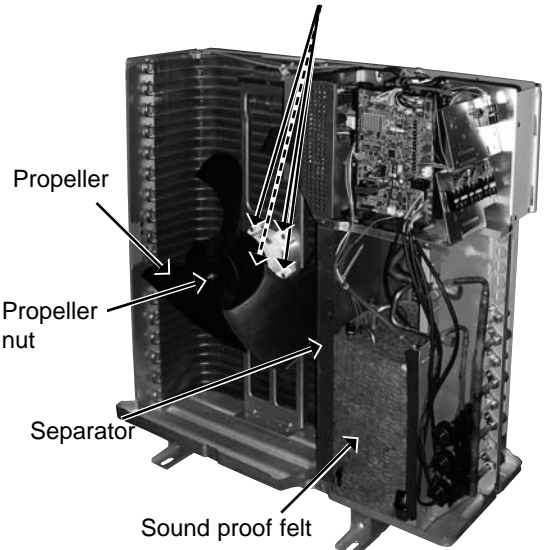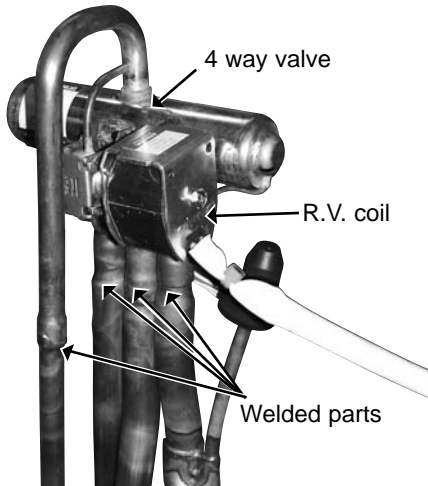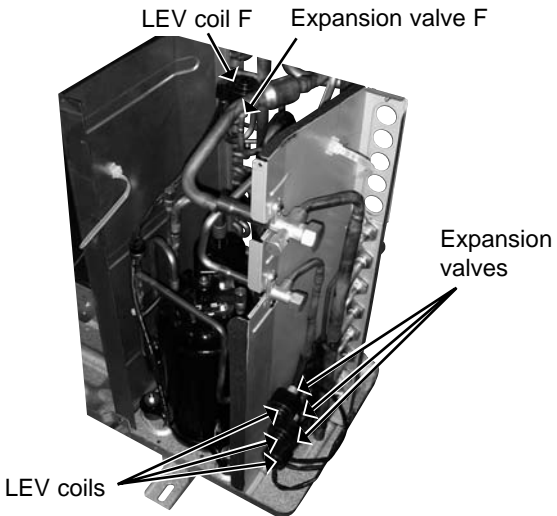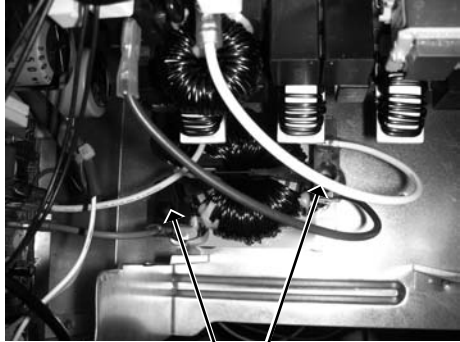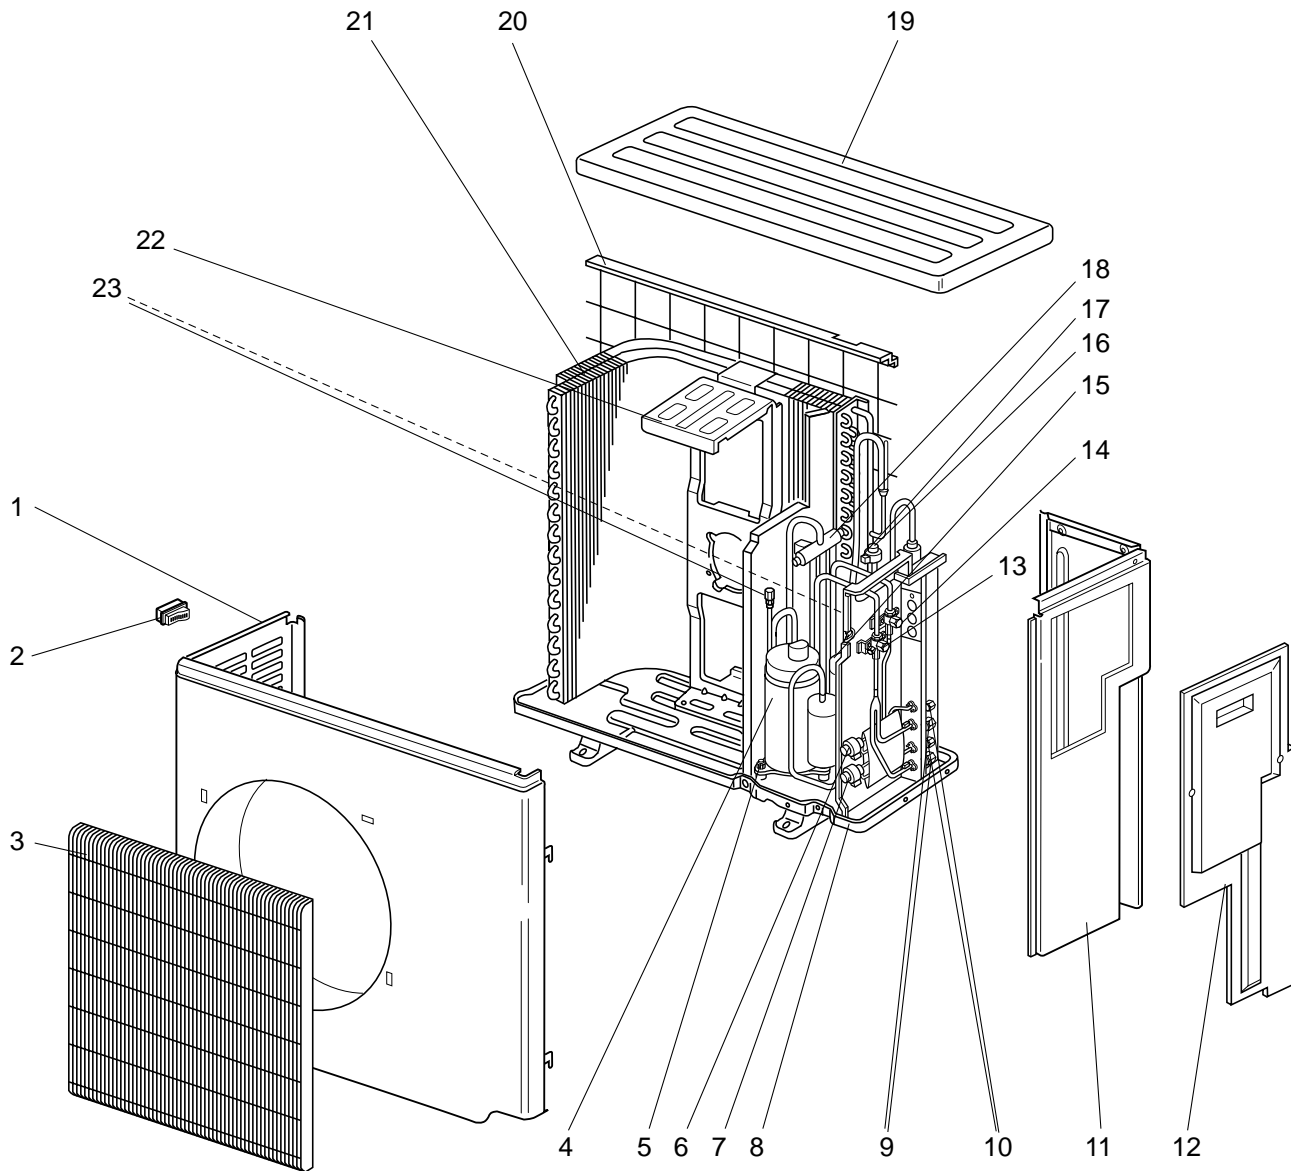

| OPERATING PROCEDURE | PHOTOS |
|---|---|
| <p>2. Removing the fan motor</p> <p>(1) Remove the top panel, the service panel, and the front panel (Photo 1, 2).</p> <p>(2) Disconnect the connectors CN931 and CN932 on the outdoor electronic control P.C. board.</p> <p>(3) Remove the propeller.</p> <p>(4) Remove the fan motor.</p> | <p>Photo 5 Screws of the outdoor fan motor</p>  <p>Propeller</p> <p>Propeller nut</p> <p>Separator</p> <p>Sound proof felt</p> |
| <p>3. Removing the 4-way valve</p> <p>(1) Remove the top panel (Photo 1, 2).</p> <p>(2) Remove the service panel, rear panel, and pipe cover (Photo 1,2).</p> <p>Recover refrigerant gas.</p> <p>(3) Remove the electrical parts (Photo 3).</p> <p>(4) Detach the welded parts of 4-way valve and pipe.</p> | <p>Photo 6</p>  <p>4 way valve</p> <p>R.V. coil</p> <p>Welded parts</p> |
| <p>4. Removing the expansion valve</p> <p>(1) Remove the top panel (Photo 1, 2).</p> <p>(2) Remove the service panel (Photo 1, 2).</p> <p>(Gas recovery is not required if the unit is pumped down.)</p> <p>(3) Remove the front panel for removing LEV F (Photo 1).</p> <p>(4) Remove the electrical parts for removing LEV F (Photo 3).</p> <p>(5) Remove the LEV coils.</p> <p>(6) Detach the welded parts of expansion valves and pipes.</p> | <p>Photo 7</p>  <p>LEV coil F</p> <p>Expansion valve F</p> <p>Expansion valves</p> <p>LEV coils</p> |

| OPERATING PROCEDURE | PHOTOS |
|---|---|
| <p>5. Removing the reactor</p> <p>(1) Remove the top panel (Photo 1, 2).</p> <p>(2) Disconnect the reactor lead wire.</p> <p>(3) Remove the screws of the reactor, and remove the reactor.</p> | <p>Photo 8</p>  <p>Screws of the reactor</p> |

MXZ-2A20NA**13-1. OUTDOOR UNIT STRUCTURAL PARTS AND FUNCTIONAL PARTS**

PARTS LIST (non-RoHS compliant)

MXZ-2A20NA

13-1. OUTDOOR UNIT STRUCTURAL PARTS AND FUNCTIONAL PARTS


Part numbers that are circled are not shown in the illustration.

| No. | Parts No. | Parts Name | Symbol in Wiring Diagram | Q'ty/unit | Remarks |
|-----|-------------|-----------------------|--------------------------|------------|-------------------------|
| | | | | MXZ-2A20NA | |
| 1 | E02 939 232 | CABINET | | 1 | |
| 2 | E02 817 009 | HANDLE | | 1 | |
| 3 | E02 939 521 | GRILLE | | 1 | |
| 4 | E02 B05 900 | COMPRESSOR | MC | 1 | SNB130FPDH1 |
| 5 | E02 065 506 | COMPRESSOR RUBBER SET | | 3 | 3RUBBERS SET |
| 6 | E02 851 640 | EXPANSION VALVE | | 1 | B room |
| | E02 939 493 | LEV COIL | LEV B | 1 | B room |
| 7 | E02 851 640 | EXPANSION VALVE | | 1 | A room |
| | E02 938 493 | LEV COIL | LEV A | 1 | A room |
| 8 | E02 939 290 | BASE | | 1 | |
| 9 | E02 939 666 | UNION(GAS) | | 2 | φ3/8 |
| 10 | E02 939 667 | UNION(LIQUID) | | 2 | φ1/4 |
| 11 | E02 939 233 | BACK PANEL | | 1 | |
| 12 | E02 939 245 | SERVICE PANEL | | 1 | |
| 13 | E02 B05 661 | BALL VALVE (GAS) | | 1 | φ5/8 |
| 14 | E02 939 662 | BALL VALVE (LIQUID) | | 1 | φ3/8 |
| 15 | E02 938 959 | POWER RECEIVER | | 1 | |
| 16 | E02 819 640 | EXPANSION VALVE | | 1 | E |
| 17 | E02 819 493 | LEV COIL | LEV E | 1 | |
| 18 | E02 A56 961 | 4-WAY VALVE | | 1 | |
| 19 | E02 819 297 | TOP PANEL | | 1 | |
| 20 | E02 939 523 | REAR GUARD | | 1 | |
| 21 | E02 B05 630 | HEAT EXCHANGER | | 1 | |
| 22 | E02 939 515 | MOTOR SUPPORT | | 1 | |
| 23 | E02 A49 641 | SERVICE PORT | | 2 | |
| 24 | E02 938 937 | CAPILLARY TUBE | | 8 | O.D.0.14×I.D.0.09×19.68 |
| 25 | E02 939 936 | CAPILLARY TUBE | | 2 | O.D.0.16×I.D.0.11×3.93 |
| 26 | E02 938 936 | CAPILLARY TUBE | | 1 | O.D.0.98×I.D.0.02×39.37 |
| 27 | E02 B05 299 | OIL SEPARATOR | | 1 | |

PARTS LIST (non-RoHS compliant)

MXZ-2A20NA

13-2. OUTDOOR UNIT FUNCTIONAL PARTS AND ELECTRICAL PARTS

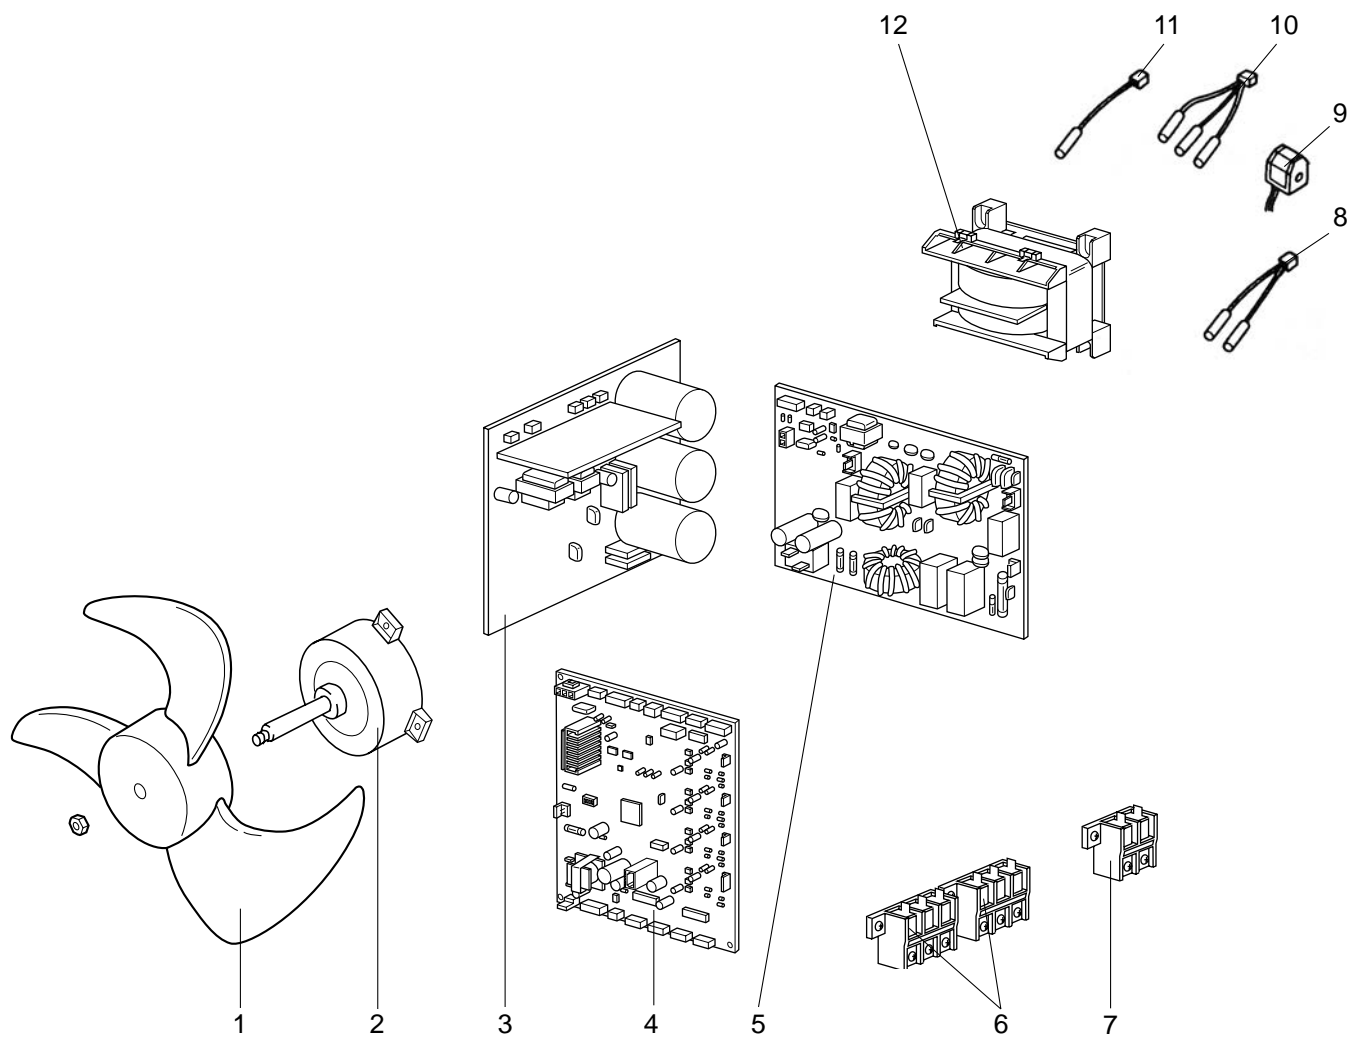

PARTS LIST (non-RoHS compliant)

MXZ-2A20NA


13-2. OUTDOOR UNIT FUNCTIONAL PARTS AND ELECTRICAL PARTS

| No. | Parts No. | Parts Name | Symbol in Wiring Diagram | Q'ty/unit | Remarks |
|-----|-------------|-------------------------------------|--------------------------------|------------|--|
| | | | | MXZ-2A20NA | |
| 1 | E02 851 501 | PROPELLER | | 1 | |
| 2 | E02 A58 301 | OUTDOOR FAN MOTOR | MF | 1 | RC0J60- □□ |
| 3 | E02 B05 440 | POWER BOARD | | 1 | Including heat sink and RT64 |
| 4 | E02 B05 450 | ELECTRONIC CONTROL P.C. BOARD | | 1 | |
| 5 | E02 B05 444 | NOISE FILTER P.C. BOARD | | 1 | |
| 6 | E02 927 374 | TERMINAL BLOCK | TB2,3 | 2 | Indoor unit connecting |
| 7 | E02 A53 374 | TERMINAL BLOCK | TB1 | 1 | Power supply |
| 8 | E02 977 307 | GAS PIPE TEMPERATURE THERMISTOR SET | RT6A,B | 1 | |
| 9 | E02 B05 490 | R.V. COIL | 21S4 | 1 | |
| 10 | E02 938 308 | THERMISTOR SET | RT61,62,68 | 1 | DEFROST, DISCHARGE OUTDOOR HEAT EXCHANGER |
| 11 | E02 938 309 | AMBIENT TEMPERATURE THERMISTOR | RT65 | 1 | |
| 12 | E02 938 337 | REACTOR | L | 1 | 20A 600μH |

PARTS LIST (non-RoHS compliant)

MXZ-3A30NA

13-3. OUTDOOR UNIT STRUCTURAL PARTS AND FUNCTIONAL PARTS

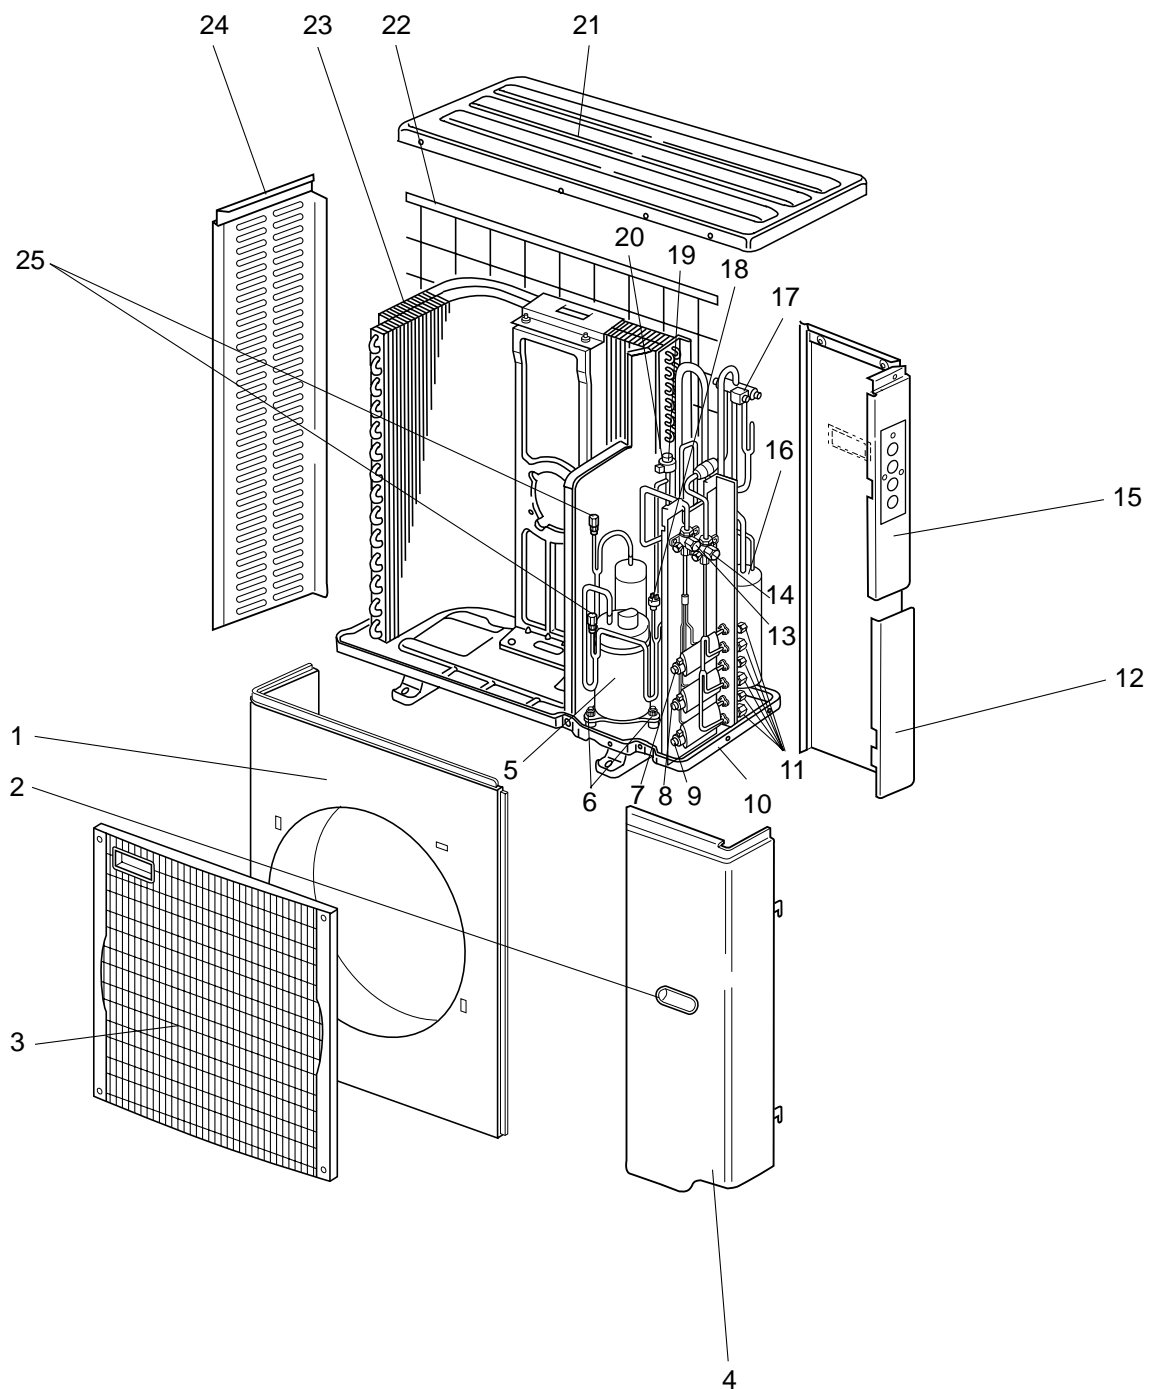

PARTS LIST (non-RoHS compliant)

MXZ-3A30NA

13-3. OUTDOOR UNIT STRUCTURAL PARTS AND FUNCTIONAL PARTS


Part numbers that are circled are not shown in the illustration.

| No. | Parts No. | Parts Name | Symbol in Wiring Diagram | Q'ty/unit | Remarks |
|-----|-------------|-------------------------|--------------------------|------------|------------------------------------|
| | | | | MXZ-3A30NA | |
| 1 | M21 TK0 232 | FRONT PANEL | | 1 | |
| 2 | M21 TK0 027 | HANDLE ASSEMBLY | | 2 | |
| 3 | M21 TK5 010 | GRILLE | | 1 | |
| 4 | M21 TK0 245 | SERVICE PANEL | | 1 | |
| 5 | T92 500 801 | COMPRESSOR | MC | 1 | TNB220FMCH |
| 6 | T2W TK0 505 | COMPRESSOR RUBBER SET | | 3 | 3RUBBERS SET |
| 7 | R01 E39 401 | EXPANSION VALVE | | 1 | C room |
| | T2W TK0 653 | LEV COIL | LEV C | 1 | C room |
| 8 | R01 E39 401 | EXPANSION VALVE | | 1 | B room |
| | T2W TK0 652 | LEV COIL | LEV B | 1 | B room |
| 9 | R01 E39 401 | EXPANSION VALVE | | 1 | A room |
| | T2W TK0 651 | LEV COIL | LEV A | 1 | A room |
| 10 | M21 TK0 290 | BASE ASSEMBLY | | 1 | |
| 11 | M21 42E 644 | UNION | | 1 | $\phi 1/2, \phi 3/8, \phi 1/4$ SET |
| 12 | T2W TK0 247 | PIPE COVER | | 1 | |
| 13 | M21 TK5 667 | BALL VALVE (LIQUID) 3/8 | | 1 | $\phi 3/8$ |
| 14 | T2W J7E 667 | BALL VALVE (GAS) 5/8 | | 1 | $\phi 5/8$ |
| 15 | M21 J7E 248 | REAR PANEL | | 1 | |
| 16 | T2W TK0 959 | POWER RECEIVER | | 1 | |
| 17 | T2W J7E 961 | 4-WAY VALVE | | 1 | |
| 18 | M21 NT1 646 | HIGH PRESSURE SWITCH | HPS | 1 | 4.8MPa(48.9kg/cm ²) |
| 19 | T2W WW8 401 | EXPANSION VALVE | | 1 | E |
| 20 | T2W TK0 651 | LEV COIL | LEV E | 1 | |
| 21 | M21 TK0 297 | TOP PANEL | | 1 | |
| 22 | T2W E40 523 | REAR GUARD | | 1 | |
| 23 | M21 J7E 630 | HEAT EXCHANGER | | 1 | |
| 24 | M21 TK0 249 | SIDE PANEL | | 1 | |
| 25 | M21 J7E 641 | SERVICE PORT | | 2 | |
| 26 | M21 SJ4 937 | CAPILLARY TUBE | | 2 | O.D.0.16×I.D.0.09×15.75 |
| 27 | M21 TK0 936 | CAPILLARY TUBE | | 3 | O.D.0.16×I.D.0.11×3.54 |
| 28 | T2W E59 936 | CAPILLARY TUBE | | 1 | O.D.0.10×I.D.0.02×39.37 |
| 29 | T2W J7E 656 | OIL SEPARATOR | | 1 | |

PARTS LIST (non-RoHS compliant)

MXZ-3A30NA

13-4. OUTDOOR UNIT FUNCTIONAL PARTS AND ELECTRICAL PARTS

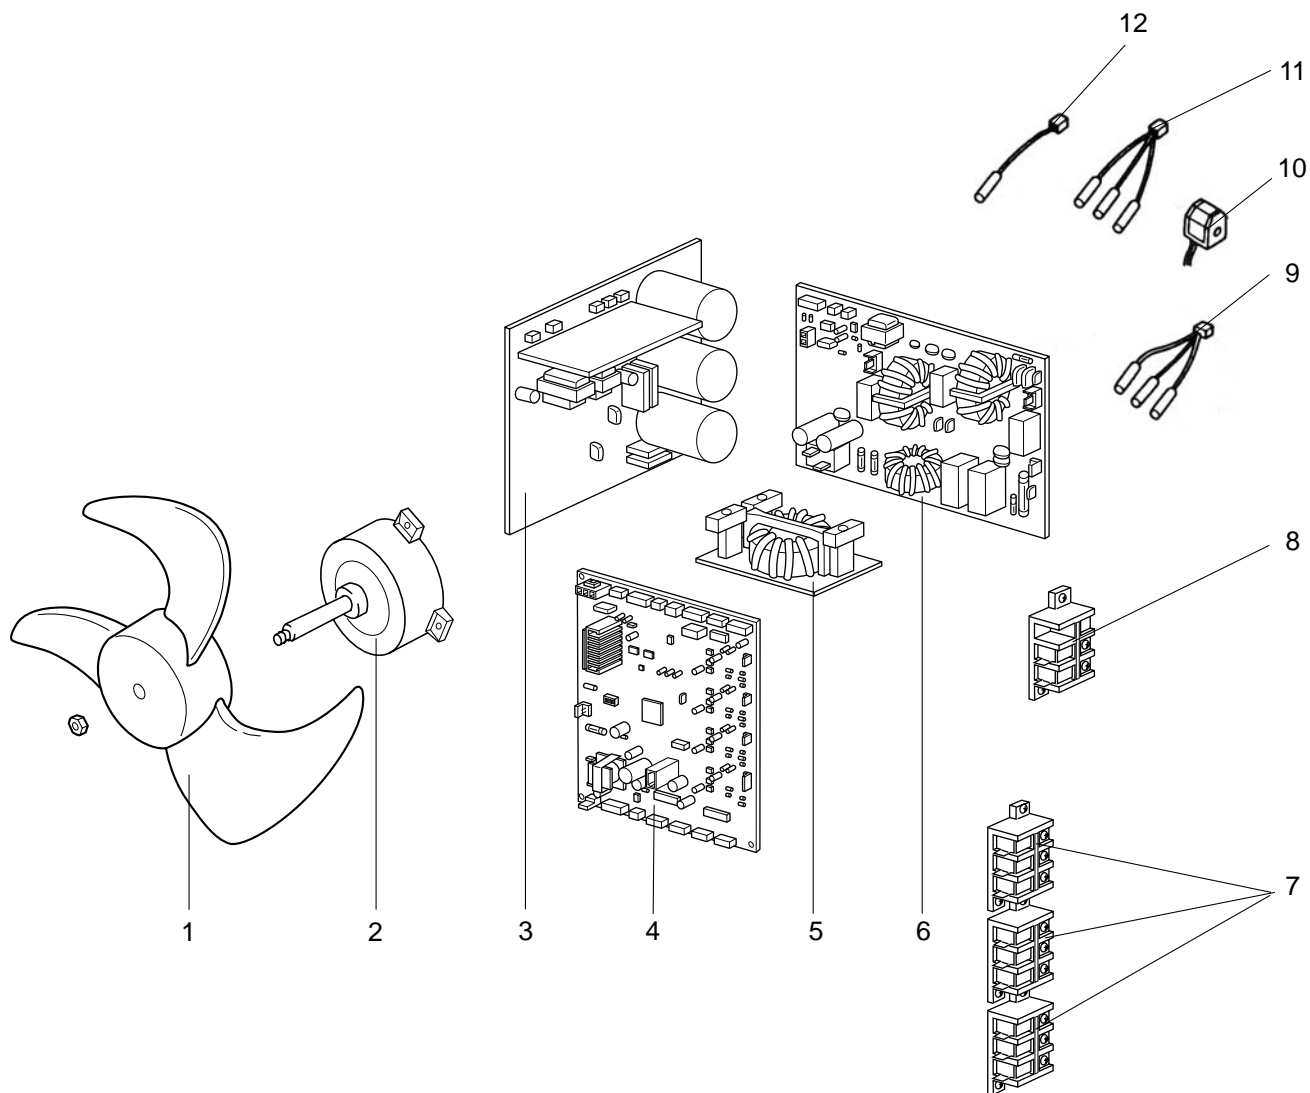

PARTS LIST (non-RoHS compliant)


MXZ-3A30NA

13-4. OUTDOOR UNIT FUNCTIONAL PARTS AND ELECTRICAL PARTS

| No. | Parts No. | Parts Name | Symbol in Wiring Diagram | Q'ty/unit | Remarks |
|-----|-------------|---------------------------------|--------------------------------|------------|---|
| | | | | MXZ-3A30NA | |
| 1 | M21 TK0 501 | PROPELLER | | 1 | |
| 2 | T2W J7E 301 | OUTDOOR FAN MOTOR | MF | 1 | RC0J60- □□ |
| 3 | T2W J7E 440 | POWER BOARD | | 1 | Including heat sink and RT64 |
| 4 | T2W J7E 451 | ELECTRONIC CONTROL P.C. BOARD | | 1 | |
| 5 | M21 TK0 337 | REACTOR | L | 1 | 20A 600μH |
| 6 | T2W J7E 424 | NOISE FILTER P.C. BOARD | | 1 | |
| 7 | T2W YH1 376 | TERMINAL BLOCK | TB2~4 | 3 | Indoor unit connecting |
| 8 | T2W J7E 376 | TERMINAL BLOCK | TB1 | 1 | Power supply |
| 9 | T2W E88 307 | GAS PIPE TEMPERATURE THERMISTOR | RT6A,B,C | 1 | |
| 10 | T2W J7E 398 | R.V. COIL | 21S4 | 1 | |
| 11 | M21 G0H 308 | THERMISTOR SET | RT61,62,68 | 1 | DEFROST, DISCHARGE, OUTDOOR HEAT EXCHANGER |
| 12 | M21 90V 309 | AMBIENT TEMPERATURE THERMISTOR | RT65 | 1 | |

MXZ-2A20NA MXZ-2A20NA - 1

14-1. OUTDOOR UNIT STRUCTURAL PARTS AND FUNCTIONAL PARTS

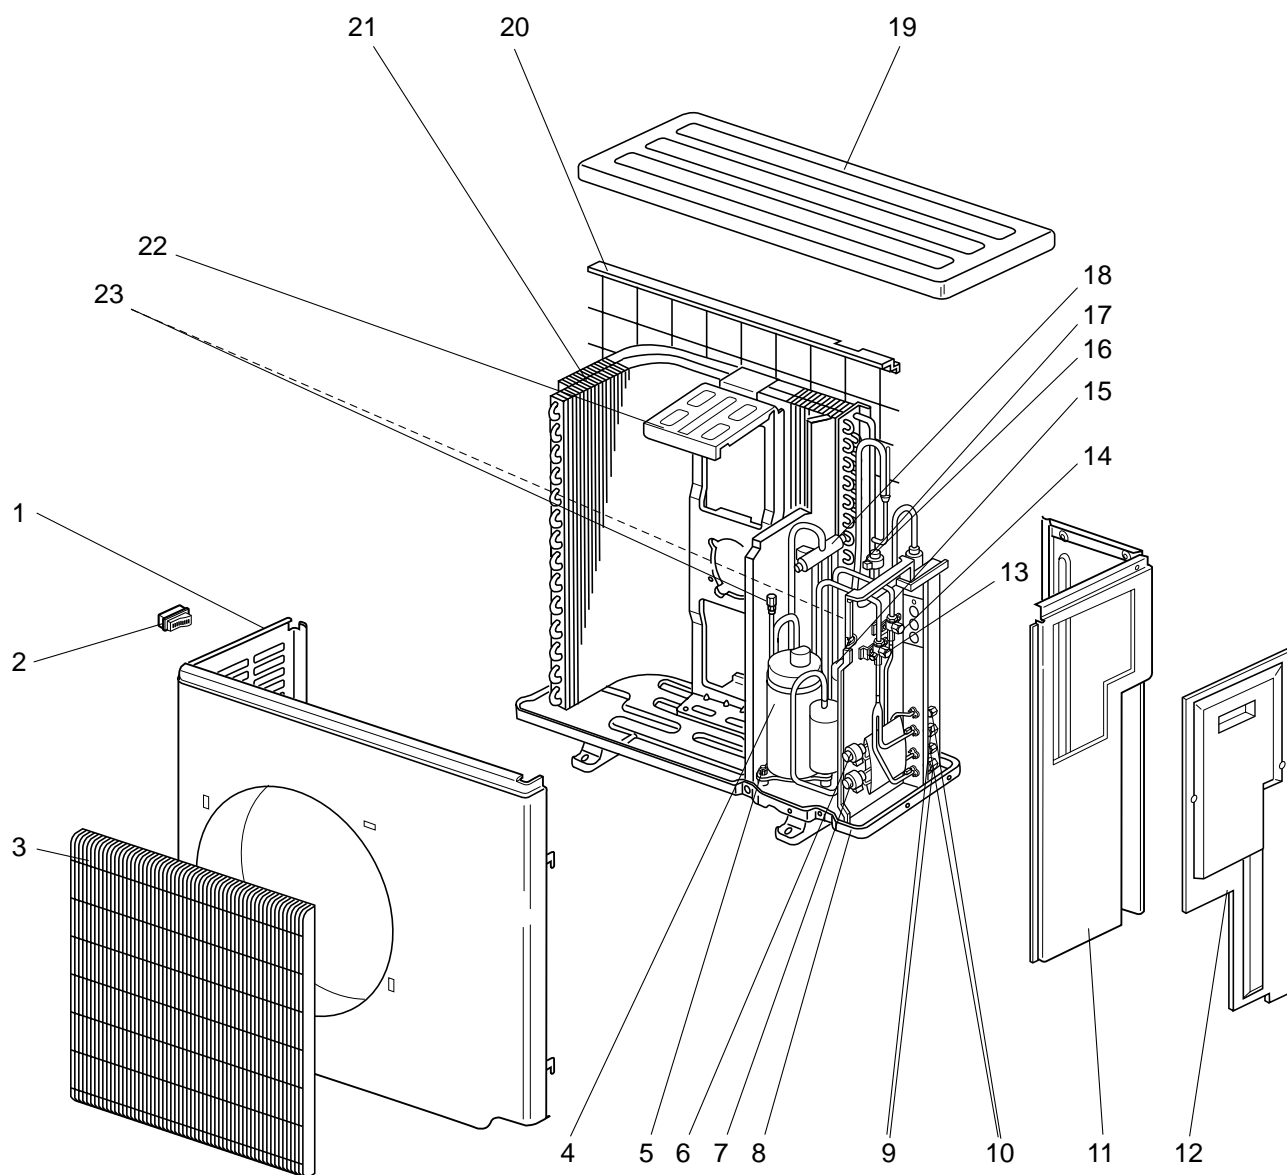

PARTS LIST (RoHS compliant)

MXZ-2A20NA MXZ-2A20NA - 1

14-1. OUTDOOR UNIT STRUCTURAL PARTS AND FUNCTIONAL PARTS


Part numbers that are circled are not shown in the illustration.

| No. | RoHS | Parts No. | Parts Name | Symbol in Wiring Diagram | Q'ty/unit | | Remarks |
|-----|------|-------------|-----------------------|--------------------------------|----------------|--------------------|-------------------------|
| | | | | | MXZ- 2A20NA | MXZ- 2A20NA - 1 | |
| 1 | G | E12 939 232 | CABINET | | 1 | 1 | |
| 2 | G | E12 817 009 | HANDLE | | 1 | 1 | |
| 3 | G | E12 939 521 | GRILLE | | 1 | 1 | |
| 4 | G | E12 B05 900 | COMPRESSOR | MC | 1 | | SNB130FPDH1 |
| | G | E12 C15 900 | COMPRESSOR | MC | | 1 | SNB130FQBH1 |
| 5 | G | E12 065 506 | COMPRESSOR RUBBER SET | | 3 | 3 | 3RUBBERS SET |
| 6 | G | E12 851 640 | EXPANSION VALVE | | 1 | 1 | B room |
| | G | E12 939 493 | LEV COIL | LEV B | 1 | 1 | B room |
| 7 | G | E12 851 640 | EXPANSION VALVE | | 1 | 1 | A room |
| | G | E12 938 493 | LEV COIL | LEV A | 1 | 1 | A room |
| 8 | G | E12 939 290 | BASE | | 1 | 1 | |
| 9 | G | E12 C06 666 | UNION(GAS) | | 2 | | φ3/8 |
| | G | E12 C18 666 | UNION(GAS) | | | 2 | φ3/8 |
| 10 | G | E12 C06 667 | UNION(LIQUID) | | 2 | | φ1/4 |
| | G | E12 C18 667 | UNION(LIQUID) | | | 2 | φ1/4 |
| 11 | G | E12 939 233 | BACK PANEL | | 1 | 1 | |
| 12 | G | E12 939 245 | SERVICE PANEL | | 1 | 1 | |
| 13 | G | E12 C15 661 | BALL VALVE (GAS) | | 1 | 1 | φ5/8 |
| 14 | G | E12 C06 662 | BALL VALVE (LIQUID) | | 1 | 1 | φ3/8 |
| 15 | G | E12 938 959 | POWER RECEIVER | | 1 | | |
| | G | E12 C18 959 | POWER RECEIVER | | | 1 | |
| 16 | G | E12 853 640 | EXPANSION VALVE | | 1 | 1 | E |
| 17 | G | E12 819 493 | LEV COIL | LEV E | 1 | 1 | |
| 18 | G | E12 A56 961 | 4-WAY VALVE | | 1 | 1 | |
| 19 | G | E12 819 297 | TOP PANEL | | 1 | 1 | |
| 20 | G | E12 939 523 | REAR GUARD | | 1 | 1 | |
| 21 | G | E12 B05 630 | HEAT EXCHANGER | | 1 | 1 | |
| 22 | G | E12 939 515 | MOTOR SUPPORT | | 1 | 1 | |
| 23 | G | E12 A49 641 | SERVICE PORT | | 2 | 2 | |
| 24 | G | E12 938 937 | CAPILLARY TUBE | | 8 | 8 | O.D.0.14×I.D.0.09×19.68 |
| 25 | G | E12 939 936 | CAPILLARY TUBE | | 2 | 2 | O.D.0.16×I.D.0.11×3.93 |
| 26 | G | E12 938 936 | CAPILLARY TUBE | | 1 | 1 | O.D.0.98×I.D.0.02×39.37 |
| 27 | G | E12 B05 299 | OIL SEPARATOR | | 1 | 1 | |

RoHS PARTS LIST (RoHS compliant)

MXZ-2A20NA MXZ-2A20NA - 1

14-2. OUTDOOR UNIT FUNCTIONAL PARTS AND ELECTRICAL PARTS

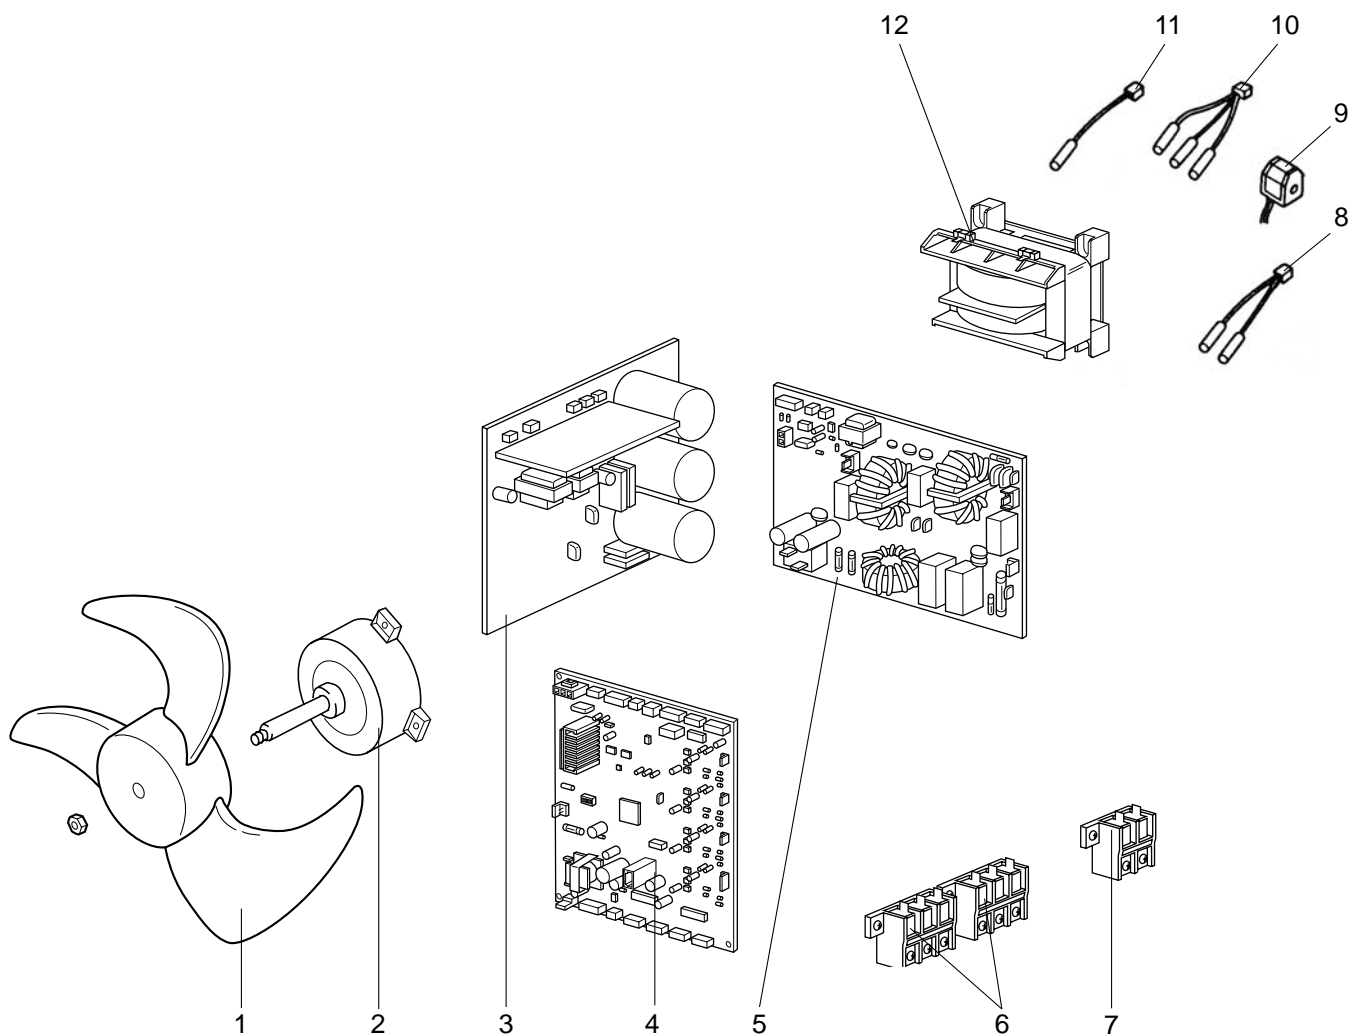

PARTS LIST (RoHS compliant)

MXZ-2A20NA MXZ-2A20NA - 1


14-2. OUTDOOR UNIT FUNCTIONAL PARTS AND ELECTRICAL PARTS

| No. | RoHS | Parts No. | Parts Name | Symbol in Wiring Diagram | Q'ty/unit | | Remarks |
|-----|------|-------------|-------------------------------------|--------------------------------|----------------|--------------------|---|
| | | | | | MXZ- 2A20NA | MXZ- 2A20NA - 1 | |
| 1 | G | E12 851 501 | PROPELLER | | 1 | 1 | |
| 2 | G | E12 A58 301 | OUTDOOR FAN MOTOR | MF | 1 | 1 | RC0J60- □□ |
| 3 | G | E12 B05 440 | POWER BOARD | | 1 | | Including heat sink and RT64 |
| | G | E12 C15 440 | POWER BOARD | | | 1 | Including heat sink and RT64 |
| 4 | G | E12 B05 450 | ELECTRONIC CONTROL P.C. BOARD | | 1 | | |
| | G | E12 C15 450 | ELECTRONIC CONTROL P.C. BOARD | | | 1 | |
| 5 | G | E12 B05 444 | NOISE FILTER P.C. BOARD | | 1 | 1 | |
| 6 | G | E12 927 374 | TERMINAL BLOCK | TB2,3 | 2 | 2 | Indoor unit connecting |
| 7 | G | E12 A53 374 | TERMINAL BLOCK | TB1 | 1 | 1 | Power supply |
| 8 | G | E12 977 307 | GAS PIPE TEMPERATURE THERMISTOR SET | RT6A,B | 1 | | |
| 9 | G | E12 B05 490 | R.V. COIL | 21S4 | 1 | 1 | |
| 10 | G | E12 938 308 | THERMISTOR SET | RT61,62,68 | 1 | 1 | DEFROST DISCHARGE OUTDOOR HEAT EXCHANGER |
| 11 | G | E12 938 309 | AMBIENT TEMPERATURE THERMISTOR | RT65 | 1 | 1 | |
| 12 | G | E12 938 337 | REACTOR | L | 1 | 1 | 20A 600μH |

RoHS PARTS LIST (RoHS compliant)

MXZ-3A30NA

14-3. OUTDOOR UNIT STRUCTURAL PARTS AND FUNCTIONAL PARTS

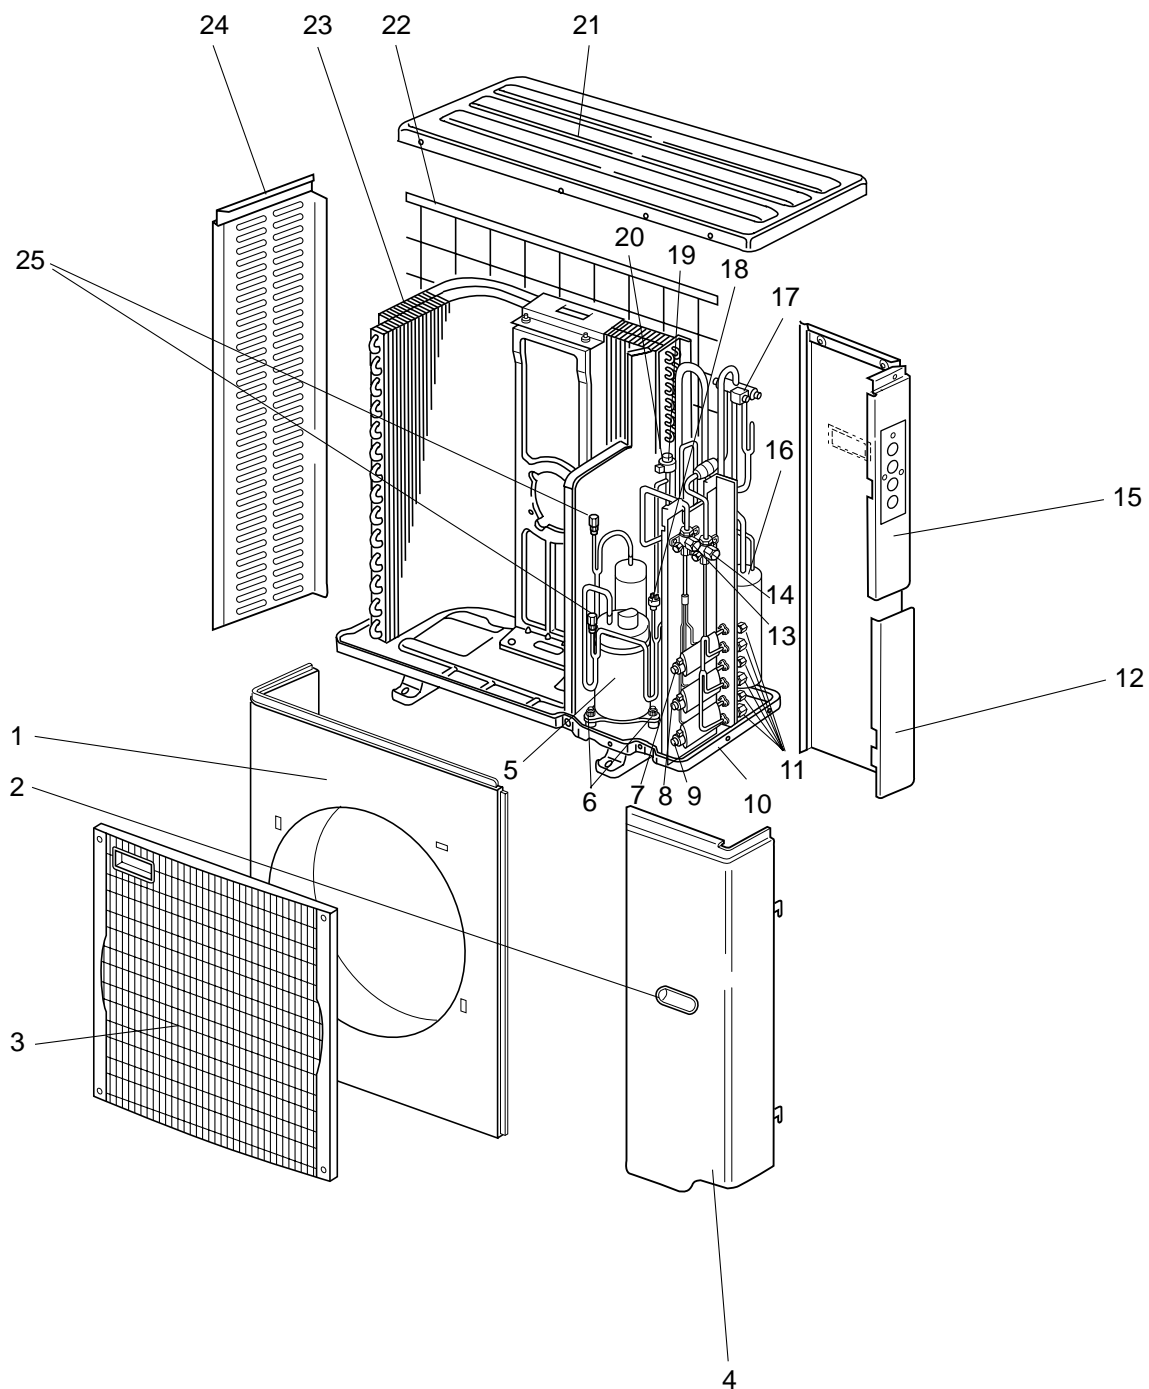

PARTS LIST (RoHS compliant)

MXZ-3A30NA

14-3. OUTDOOR UNIT STRUCTURAL PARTS AND FUNCTIONAL PARTS


Part numbers that are circled are not shown in the illustration.

| No. | RoHS | Parts No. | Parts Name | Symbol in Wiring Diagram | Q'ty/unit | Remarks |
|-----|------|-------------|-------------------------|--------------------------------|------------|---------------------------------|
| | | | | | MXZ-3A30NA | |
| 1 | G | M21 L2V 232 | FRONT PANEL | | 1 | |
| 2 | G | M21 L2V 027 | HANDLE ASSEMBLY | | 2 | |
| 3 | G | M21 L2V 010 | GRILLE | | 1 | |
| 4 | G | M21 L2V 245 | SERVICE PANEL | | 1 | |
| 5 | G | T92 505 801 | COMPRESSOR | MC | 1 | TNB220FMCH |
| 6 | G | M21 L2V 505 | COMPRESSOR RUBBER SET | | 3 | 3RUBBERS SET |
| 7 | G | M21 L2V 401 | EXPANSION VALVE | | 1 | C room |
| | G | M21 L2V 653 | LEV COIL | LEV C | 1 | C room |
| 8 | G | M21 L2V 401 | EXPANSION VALVE | | 1 | B room |
| | G | M21 L2V 652 | LEV COIL | LEV B | 1 | B room |
| 9 | G | M21 L2V 401 | EXPANSION VALVE | | 1 | A room |
| | G | M21 L2V 651 | LEV COIL | LEV A | 1 | A room |
| 10 | G | M21 L2V 290 | BASE ASSEMBLY | | 1 | |
| 11 | G | M21 L2V 644 | UNION | | 1 | φ1/2,φ3/8,φ1/4 SET |
| 12 | G | M21 L2V 247 | PIPE COVER | | 1 | |
| 13 | G | M21 L2V 667 | BALL VALVE (LIQUID) 3/8 | | 1 | φ3/8 |
| 14 | G | T2W L7V 668 | BALL VALVE (GAS) 5/8 | | 1 | φ5/8 |
| 15 | G | T2W L7V 248 | REAR PANEL | | 1 | |
| 16 | G | T2W L7V 959 | POWER RECEIVER | | 1 | |
| 17 | G | T2W L7V 642 | 4-WAY VALVE | | 1 | |
| 18 | G | M21 L2V 646 | HIGH PRESSURE SWITCH | HPS | 1 | 4.8MPa(48.9kg/cm ²) |
| 19 | G | M21 L2V 402 | EXPANSION VALVE | | 1 | E |
| 20 | G | M21 L2V 651 | LEV COIL | LEV E | 1 | |
| 21 | G | M21 L2V 297 | TOP PANEL | | 1 | |
| 22 | G | M21 L2V 523 | REAR GUARD | | 1 | |
| 23 | G | T2W L7V 630 | HEAT EXCHANGER | | 1 | |
| 24 | G | M21 L2V 249 | SIDE PANEL | | 1 | |
| 25 | G | T2W L7V 641 | SERVICE PORT | | 2 | |
| 26 | G | M21 L2V 937 | CAPILLARY TUBE | | 2 | O.D.0.16×I.D.0.09×15.75 |
| 27 | G | M21 L2V 936 | CAPILLARY TUBE | | 3 | O.D.0.16×I.D.0.11×3.54 |
| 28 | G | M21 L2V 938 | CAPILLARY TUBE | | 1 | O.D.0.10×I.D.0.02×39.37 |
| 29 | G | T2W L7V 656 | OIL SEPARATOR | | 1 | |

RoHS PARTS LIST (RoHS compliant)

MXZ-3A30NA

14-4. OUTDOOR UNIT FUNCTIONAL PARTS AND ELECTRICAL PARTS

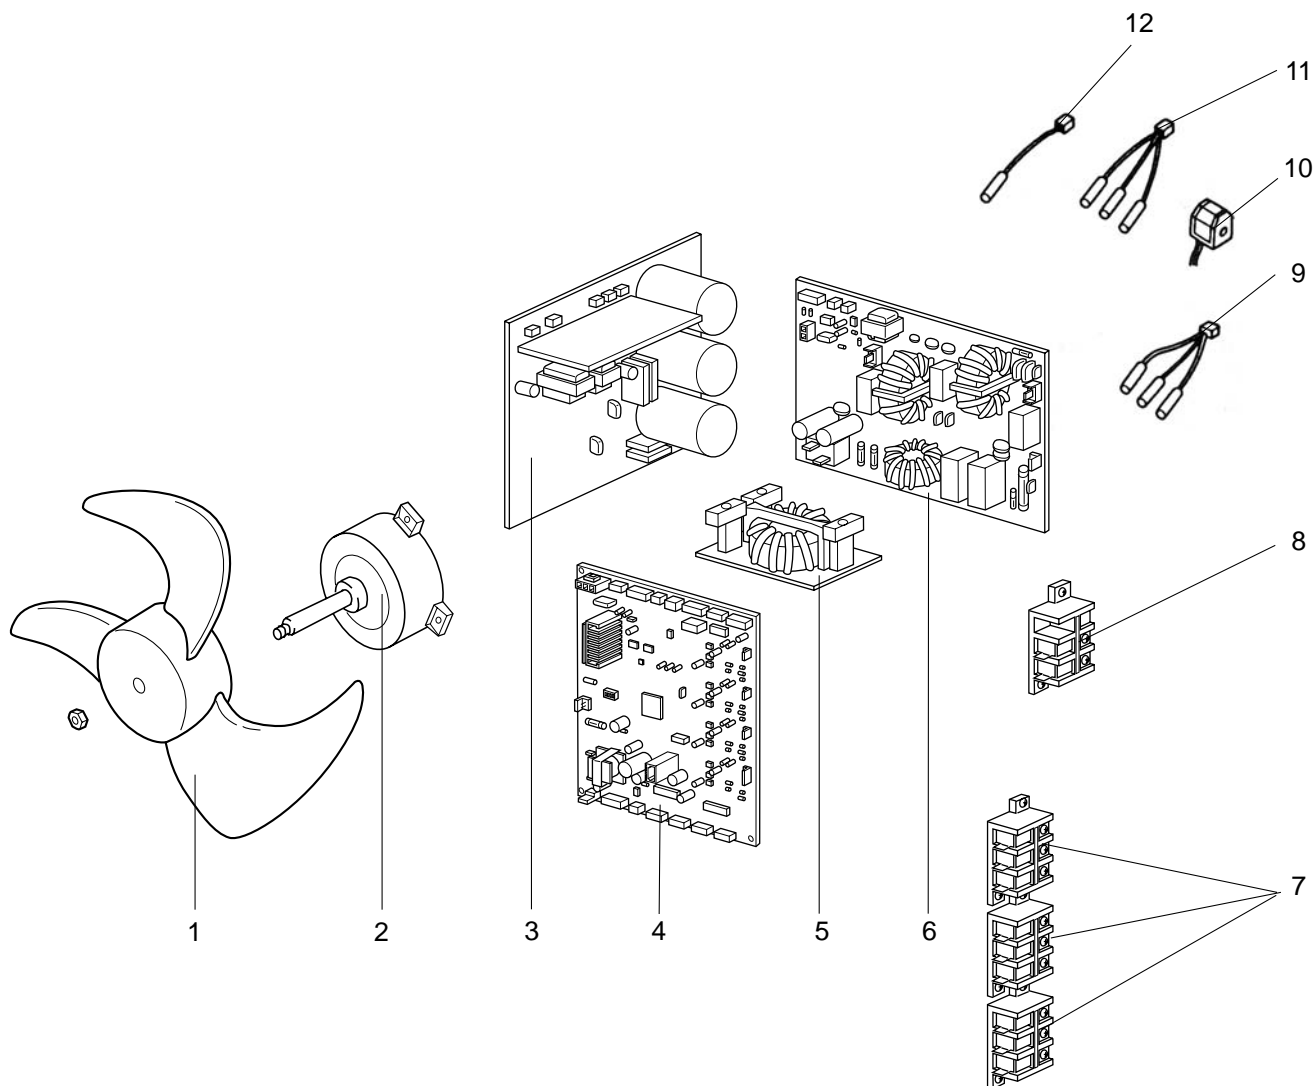

PARTS LIST (RoHS compliant)

MXZ-3A30NA


14-4. OUTDOOR UNIT FUNCTIONAL PARTS AND ELECTRICAL PARTS

| No. | RoHS | Parts No. | Parts Name | Symbol in Wiring Diagram | Q'ty/unit | Remarks |
|-----|------|-------------|---------------------------------|--------------------------|------------|--|
| | | | | | MXZ-3A30NA | |
| 1 | G | M21 L2V 501 | PROPELLER | | 1 | |
| 2 | G | T2W L7V 301 | OUTDOOR FAN MOTOR | MF | 1 | RC0J60- □□ |
| 3 | G | T2W L7V 440 | POWER BOARD | | 1 | Including heat sink and RT64 |
| 4 | G | T2W L7V 451 | ELECTRONIC CONTROL P.C. BOARD | | 1 | |
| 5 | G | M21 L2V 337 | REACTOR | L | 1 | 20A 600μH |
| 6 | G | T2W L7V 424 | NOISE FILTER P.C. BOARD | | 1 | |
| 7 | G | T2W L2V 376 | TERMINAL BLOCK | TB2~4 | 3 | Indoor unit connecting |
| 8 | G | T2W L7V 377 | TERMINAL BLOCK | TB1 | 1 | Power supply |
| 9 | G | M21 L7V 307 | GAS PIPE TEMPERATURE THERMISTOR | RT6A,B,C | 1 | |
| 10 | G | T2W L7V 398 | R.V. COIL | 21S4 | 1 | |
| 11 | G | M21 L2V 308 | THERMISTOR SET | RT61,62,68 | 1 | DEFROST, DISCHARGE, OUTDOOR HEAT EXCHANGER |
| 12 | G | M21 L2V 309 | AMBIENT TEMPERATURE THERMISTOR | RT65 | 1 | |

RoHS PARTS LIST (RoHS compliant)

MXZ-3A30NA - 1 MXZ-4A36NA

14-5. OUTDOOR UNIT STRUCTURAL PARTS AND FUNCTIONAL PARTS

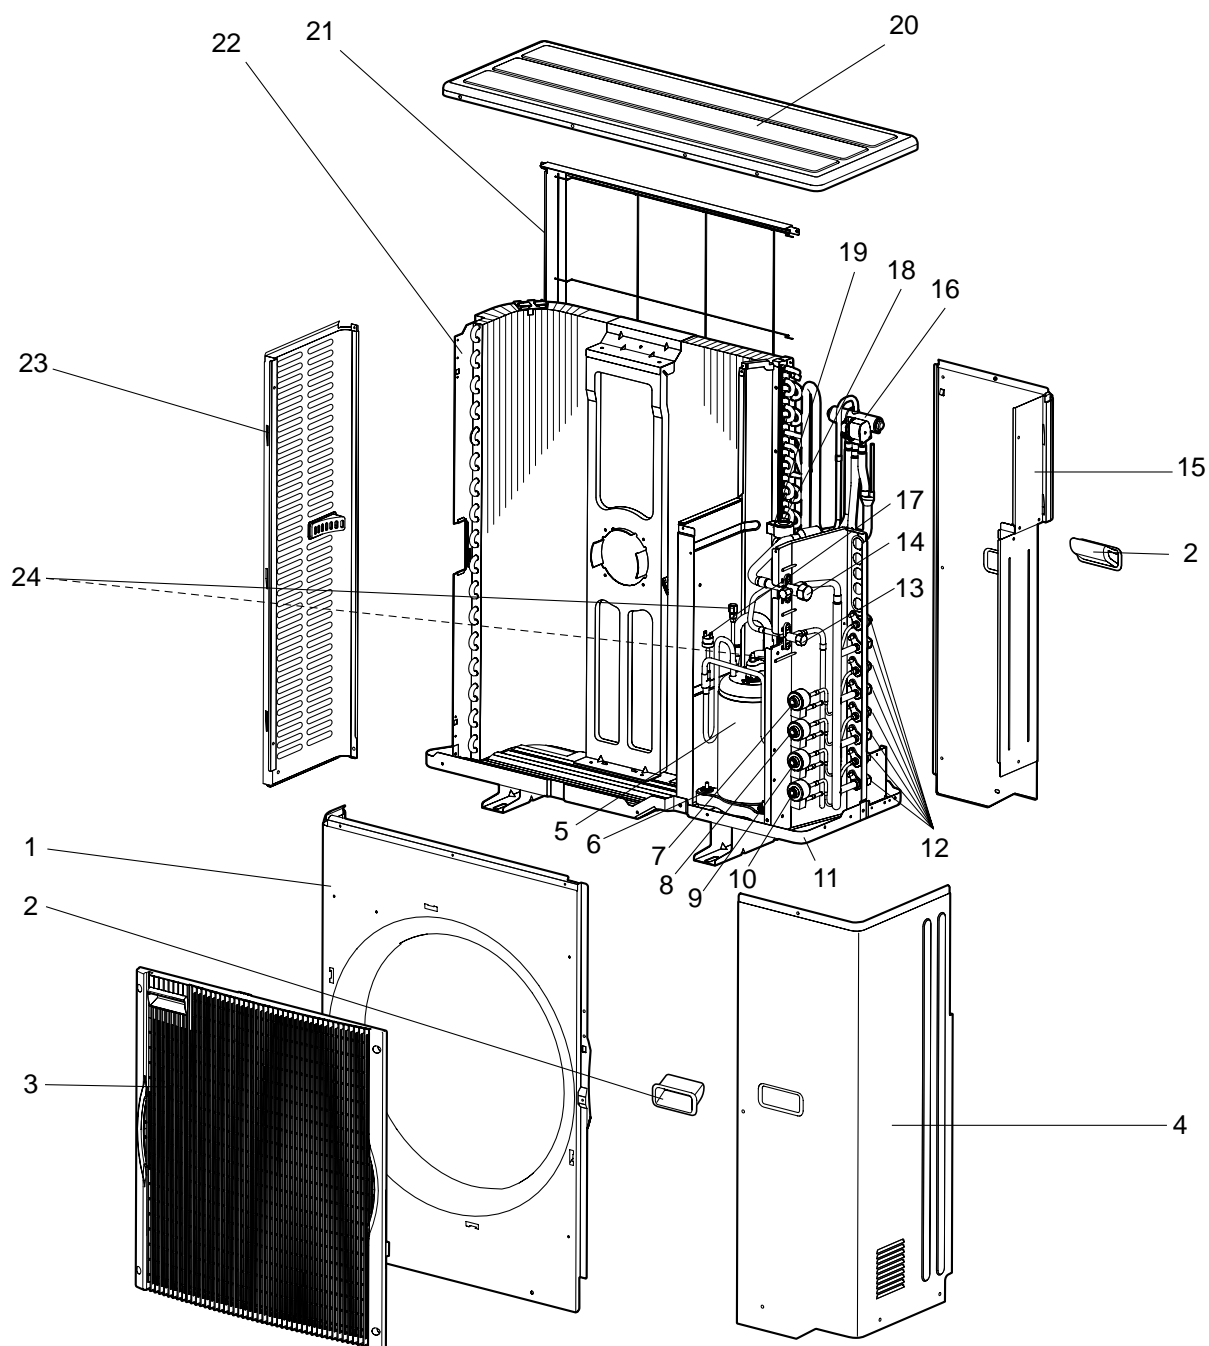

RoHS PARTS LIST (RoHS compliant)

MXZ-3A30NA - 1 MXZ-4A36NA

14-5. OUTDOOR UNIT STRUCTURAL PARTS AND FUNCTIONAL PARTS


Part numbers that are circled are not shown in the illustration.

| No. | RoHS | Parts No. | Parts Name | Symbol in Wiring Diagram | Q'ty/unit | | Remarks |
|-----|------|-------------|-------------------------|--------------------------|----------------|------------|------------------------------------|
| | | | | | MXZ-3A30NA - 1 | MXZ-4A36NA | |
| 1 | G | M21 0A2 232 | FRONT PANEL | | 1 | 1 | |
| 2 | G | M21 0A2 027 | HANDLE ASSEMBLY | | 2 | 2 | |
| 3 | G | M21 L2V 010 | GRILLE | | 1 | 1 | |
| 4 | G | M21 0A2 245 | SERVICE PANEL | | 1 | 1 | |
| 5 | G | T92 505 801 | COMPRESSOR | MC | 1 | 1 | TNB220FMCH |
| 6 | G | M21 L2V 505 | COMPRESSOR RUBBER SET | | 3 | 3 | 3RUBBERS SET |
| 7 | G | M21 L2V 401 | EXPANSION VALVE | | | 1 | D room |
| | G | M21 L2V 654 | LEV COIL | LEV D | | 1 | D room |
| 8 | G | M21 L2V 401 | EXPANSION VALVE | | 1 | 1 | C room |
| | G | M21 L2V 653 | LEV COIL | LEV C | 1 | 1 | C room |
| 9 | G | M21 L2V 401 | EXPANSION VALVE | | 1 | 1 | B room |
| | G | M21 L2V 652 | LEV COIL | LEV B | 1 | 1 | B room |
| 10 | G | M21 L2V 401 | EXPANSION VALVE | | 1 | 1 | A room |
| | G | M21 L2V 651 | LEV COIL | LEV A | 1 | 1 | A room |
| 11 | G | M21 0A2 290 | BASE ASSEMBLY | | 1 | 1 | |
| 12 | G | M21 0A2 644 | UNION | | 1 | 1 | $\phi 1/2, \phi 3/8, \phi 1/4$ SET |
| 13 | G | M21 0A2 668 | STOP VALVE (LIQUID) 3/8 | | 1 | 1 | $\phi 3/8$ |
| 14 | G | M21 0A6 667 | STOP VALVE (GAS) 5/8 | | 1 | 1 | $\phi 5/8$ |
| 15 | G | M21 0A2 248 | REAR PANEL | | 1 | 1 | |
| 16 | G | T2W L7V 642 | 4-WAY VALVE | | 1 | 1 | |
| 17 | G | M21 L2V 646 | HIGH PRESSURE SWITCH | HPS | 1 | 1 | 4.8MPa(48.9kg/cm ²) |
| 18 | G | M21 L2V 402 | EXPANSION VALVE | | 1 | | F |
| | G | M21 0A2 402 | EXPANSION VALVE | | | 1 | F |
| 19 | G | M21 0A2 652 | LEV COIL | LEV F | 1 | 1 | |
| 20 | G | M21 L2V 297 | TOP PANEL | | 1 | 1 | |
| 21 | G | M21 0A2 523 | REAR GUARD | | 1 | 1 | |
| 22 | G | T2W 0A6 630 | HEAT EXCHANGER | | 1 | | |
| | G | T2W 0A2 630 | HEAT EXCHANGER | | | 1 | |
| 23 | G | M21 L2V 249 | SIDE PANEL | | 1 | 1 | |
| 24 | G | T2W L7V 641 | SERVICE PORT | | 2 | 2 | |
| 25 | G | T2W L7V 959 | POWER RECEIVER | | 1 | 1 | |
| 26 | G | M21 0A2 937 | CAPILLARY TUBE | | 2 | 2 | O.D.0.12xI.D.0.08x11.8 |
| 27 | G | M21 0A2 936 | CAPILLARY TUBE | | 3 | 4 | O.D.0.16xI.D.0.11x3.94 |
| 28 | G | M21 L2V 938 | CAPILLARY TUBE | | 1 | 1 | O.D.0.10xI.D.0.02x39.37 |
| 29 | G | T2W L7V 656 | OIL SEPARATOR | | 1 | 1 | |

RoHS PARTS LIST (RoHS compliant)

MXZ-3A30NA - 1 MXZ-4A36NA

14-6. OUTDOOR UNIT FUNCTIONAL PARTS AND ELECTRICAL PARTS

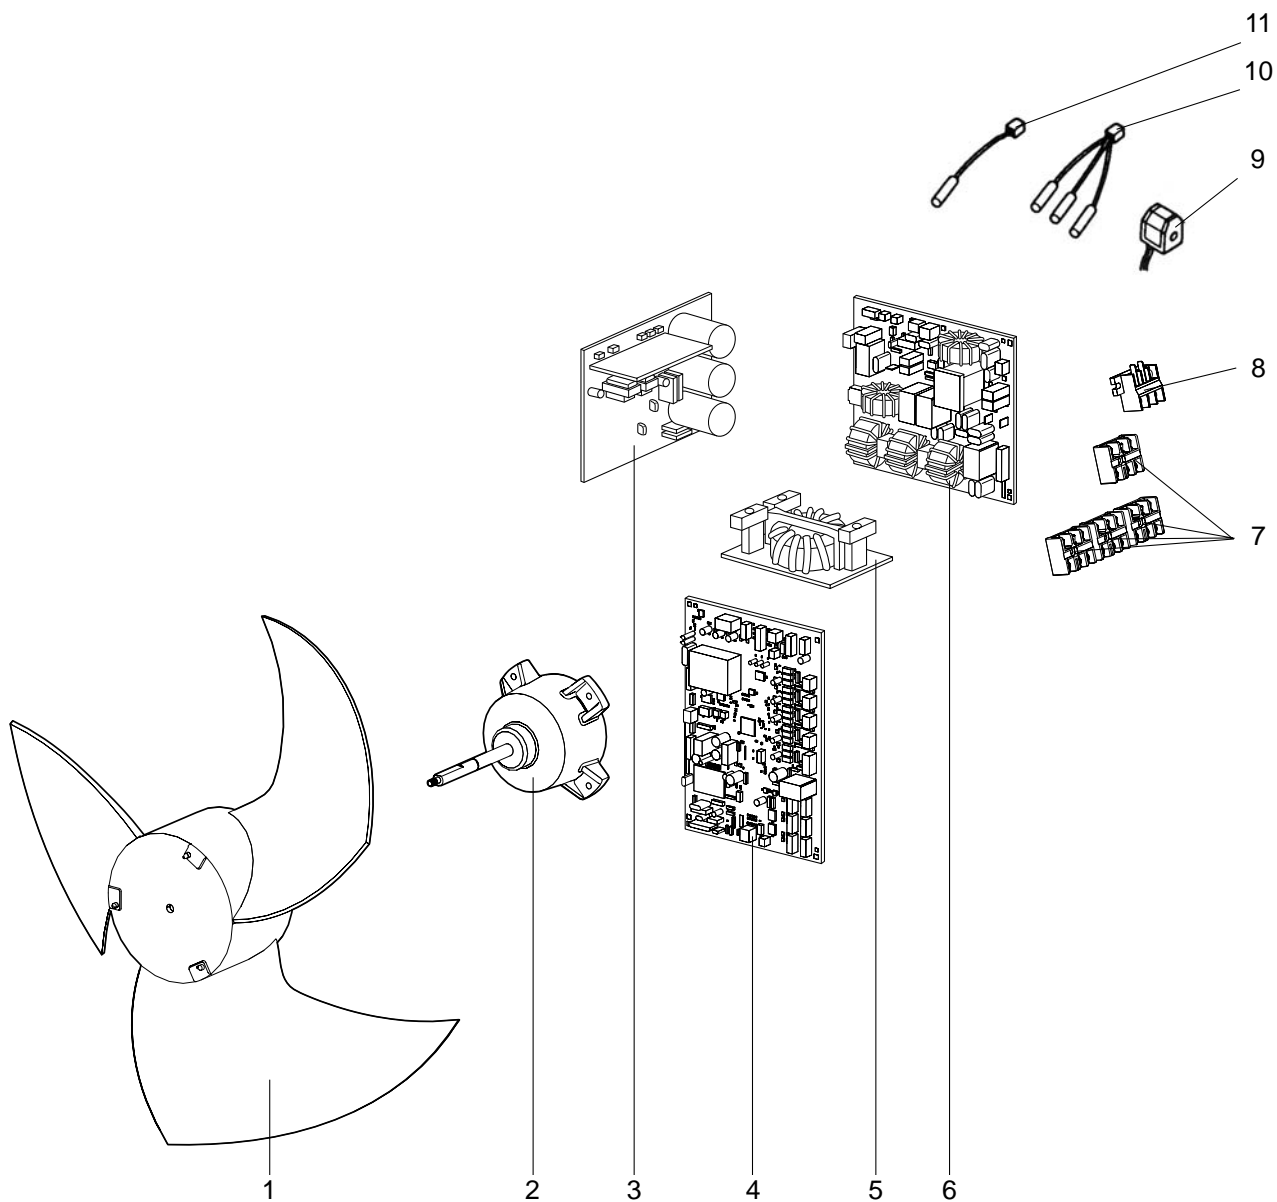

RoHS PARTS LIST (RoHS compliant)

MXZ-3A30NA - 1 MXZ-4A36NA


14-6. OUTDOOR UNIT FUNCTIONAL PARTS AND ELECTRICAL PARTS

| No. | RoHS | Parts No. | Parts Name | Symbol in Wiring Diagram | Q'ty/unit | | Remarks |
|-----|------|-------------|--------------------------------|--------------------------------|----------------|------------|---|
| | | | | | MXZ-3A30NA - 1 | MXZ-4A36NA | |
| 1 | G | M21 L2V 501 | PROPELLER | | 1 | 1 | |
| 2 | G | T2W L7V 301 | OUTDOOR FAN MOTOR | MF | 1 | 1 | PM8H60-□□ |
| 3 | G | M21 0A1 440 | POWER BOARD | | 1 | 1 | Including heat sink and RT64 |
| 4 | G | T2W 0A6 451 | ELECTRONIC CONTROL P.C. BOARD | | 1 | | |
| | G | T2W 2G6 451 | ELECTRONIC CONTROL P.C. BOARD | | | 1 | |
| 5 | G | M21 L2V 337 | REACTOR | L | 1 | 1 | 20A 600μH |
| 6 | G | M21 0A0 424 | NOISE FILTER P.C. BOARD | | 1 | 1 | |
| 7 | G | T2W 0A2 376 | TERMINAL BLOCK | TB2~5 | 3 | 4 | Indoor unit connecting |
| 8 | G | T2W L7V 377 | TERMINAL BLOCK | TB1 | 1 | 1 | Power supply |
| 9 | G | T2W L7V 398 | R.V. COIL | 21S4 | 1 | 1 | |
| 10 | G | M21 L2V 308 | THERMISTOR SET | RT61,62,68 | 1 | 1 | DEFROST, DISCHARGE, OUTDOOR HEAT EXCHANGER |
| 11 | G | M21 0A2 309 | AMBIENT TEMPERATURE THERMISTOR | RT65 | 1 | 1 | |

15-1. Different-diameter pipe

| | | | | | |
|--|--------------|--------------------------|------------|------------|----------|
| MXZ-2A20NA MXZ-2A20NA - [1] MXZ-3A30NA MXZ-3A30NA - [1] MXZ-4A36NA | Model name | Connected pipes diameter | Length A | Length B | Length C |
| For different-diameter pipes | MAC-A454JP | $\phi 3/8 - \phi 1/2$ | $\phi 3/8$ | $\phi 1/2$ | 2.72 |
| | MAC-A455JP | $\phi 1/2 - \phi 3/8$ | $\phi 1/2$ | $\phi 3/8$ | 2.56 |
| | MAC-A456JP | $\phi 1/2 - \phi 5/8$ | $\phi 1/2$ | $\phi 5/8$ | 2.62 |
| | PAC-493PI | $\phi 1/4 - \phi 3/8$ | $\phi 1/4$ | $\phi 3/8$ | 2.38 |
| | PAC-SG76RJ-E | $\phi 3/8 - \phi 5/8$ | $\phi 3/8$ | $\phi 5/8$ | 4 |

Unit : inch

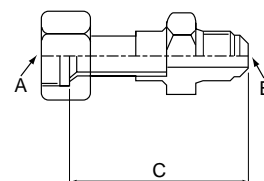


15-2. Outlet guide


Changes air discharge direction.

Unit : inch

| Applied unit | Model name | Model code |
|--|------------|------------|
| MXZ-2A20NA MXZ-2A20NA - [1] | MAC-889SG | 506-889 |
| MXZ-3A30NA MXZ-3A30NA - [1] MXZ-4A36NA | MAC-855SG | 51H-855 |

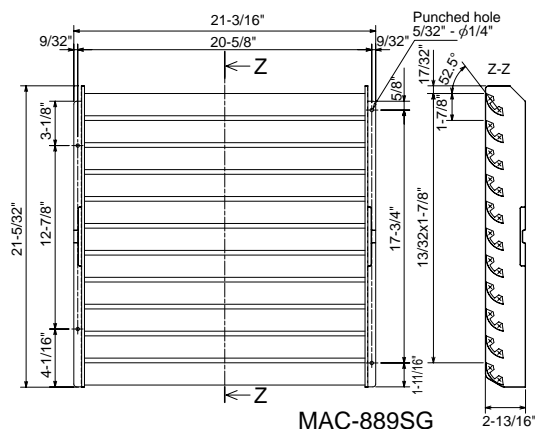

MAC-889SG

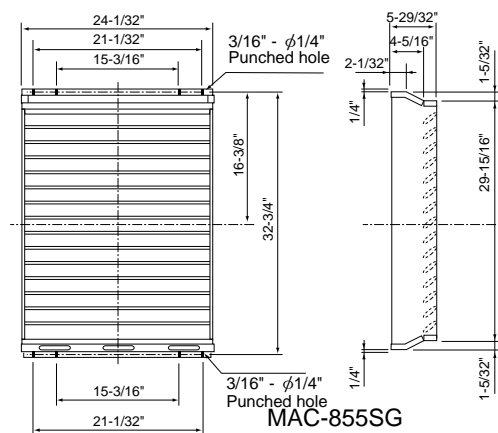

MAC-855SG

Mr. SLIM™



HEAD OFFICE: TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN

© Copyright 2006 MITSUBISHI ELECTRIC ENGINEERING CO.,LTD

Distributed in Oct. 2007. No. OB444 REVISED EDITION-C 9

Distributed in May 2007. No. OB444 REVISED EDITION-B 9

Distributed in Jun. 2006. No. OB444 REVISED EDITION-A 8

Distributed in Mar. 2006. No. OB444 8

Made in Japan

New publication, effective Oct. 2007

Specifications subject to change without notice.